REVISION HISTORY BX1S CHASSIS

MODEL

KV-BT212M80

PART NO.: 9-872-453-01

NO.	SUFFIX	DATE	SUPPL. / CORR	DESCRIPTION
1	-01	2004/6	--	1st. Issue

Self Diagnosis
Supported model

SERVICE MANUAL BX1S CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-BT212M80	RM-W101	Pakistan					

RM-W101

TRINITRON ® COLOR TV

SONY ®

TABLE OF CONTENTS

Section *Title* *Page*

SELF DIAGNOSTIC FUNCTION 3

1. DISASSEMBLY
1-1. Rear Cover Removal 6
1-2. Speaker Removal 6
1-3. Chassis Assy Removal 6
1-4. Service Position 6
1-5. Terminal Bracket Removal 6
1-6. A Board Removal 6
1-7. Picture Tube Removal 7

2. SET-UP ADJUSTMENTS
2-1. Beam Landing 8
2-2. Convergence 9
2-3. Focus Adjustment 11
2-4. G2 (SCREEN) Adjustments 11
2-5 White Balance Adjustment 11
2-6 Sub Bright Adjustment 11

3. CIRCUIT ADJUSTMENTS
3-1. Adjustment With Commander 12
3-2. Adjustment Method 13
3-3. Picture Quality Adjustment 30
3-4. Deflection Adjustment 30
3-5. Picture Distortion Adjustment 31

Section *Title* *Page*

4. DIAGRAMS
4-1. Block Diagram 33
4-2. Circuit Boards Location 34
4-3. Schematic Diagram Information 34
4-3-1. C Board Schematic Diagram 35
4-3-2. A Board — Processor (Block 001) 36
4-3-3. A Board — Audio (Block 002) 38
4-3-4. A Board — Power Supply (Block 003) 40
4-3-5. A Board — Deflection (Block 004) 42
4-3-6. A Board — Tuner (Block 005) 44
4-3-7. A Board — Jack (Block 006) 46
4-3-8. A Board — Heat Sink (Block 007) 48
4-4. Voltage Measurement and Waveforms 49
4-5. Printed Wiring Boards and Parts Location 52
4-6. Semiconductors 55

5. EXPLODED VIEWS
5-1. Chassis 57

6. ELECTRICAL PARTS LIST 58

OPERATING INSTRUCTIONS

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self diagnostic function. If an error occurs, the STANDBY (⏻) indicator will automatically begin to flash. A description of the self-diagnosis function is explained in the instruction manual. The number of times the STANDBY (⏻) indicator flashes translates to a probable source of the problem. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an errors occurs, the STANDBY (⏻) indicator will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the indicator will identify the first of the problem areas.

Result for all of the following diagnosis items are displayed on screen. No error has occured if the screen displays a “0”.

Diagnosis Item Description	No. of timer STANDBY (⏻) indicator flashes	Self-Diagnostic display/ Diagnosis result	Probable Cause Location	Detected Symptoms
Power does not turn on	Does not light	–	• Power cord is not plugged in. • Fuse is burned out (F600) A board.	• Power does not turn on. • No power is supplied on TV. • AC Power supply is faulty.
+B overcurrent (OCP)*	2 times	2:0 or 2:1 ~ 255	• H OUT (Q805) is shorted. (A board) • IC751 is shorted. (C board)	• Power does not come on. • Load on power line is shorted.
V-Protect	4 times	4:0 or 4:1 ~ 255	• +13V is not supplied. (A board) • IC804 is faulty. (A board)	• Has entered standby state after horizontal raster. • Vertical deflection pulse is stopped. • Power line is shorted or power supply is shorted.
IK (AKB)	5 times	5:0 or 5:1 ~ 255	• Video OUT (IC1545) is faulty. (A board) • IC001 is faulty. (A board) • Screen (G2) is improperly adjusted.**	• No raster is generated. • CRT Cathode current detection reference pulse output is small.
Power supply NG (+5V) for Video Processor	8 times	8:0 or 8:1 ~ 255	• IC604 faulty. • IC602 faulty.	• No power supply to CRT ANODE. • No RASTER is generated.

* If a +B overcurrent is detected, stoppage of the vertical deflection is detected simultaneously. The symptom that is diagnosed first by the mirco controller is displayed on the screen.

** Refer to Screen (G2) Adjustment in this manual.

2. DISPLAY OF STANDBY (⏻) INDICATOR FLASH COUNT

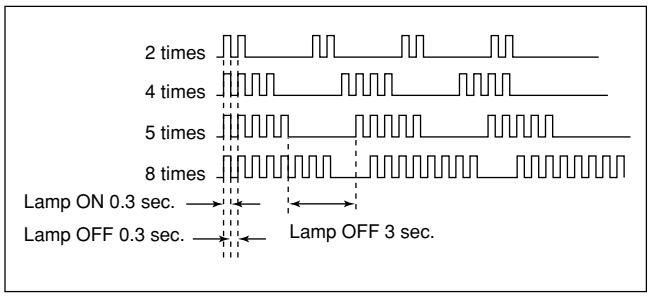

Diagnostic Item	Flash Count*
+B overcurrent	2 times
V-Protect	4 times
IK (AKB)	5 times
Power Supply NG (+5V) for Video processor	8 times

* One flash count is not used for self-diagnosis.

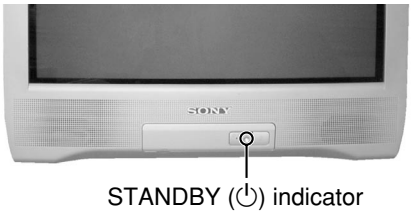

STANDBY (⏻) indicator

3. STOPPING THE STANDBY (⏻) INDICATOR FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY (⏻) indicator from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as "power sometimes shuts off" or "screen sometimes goes off" that cannot be confirmed, it is possible to bring up past occurrences of failure on the screen for confirmation.

[To Bring Up Screen Test]

In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Display ➡ Channel 5 ➡ Volume − ➡ Power / TV

⇧

Note that this differs from entering the service mode (volume +).

The following screen will be displayed indicating the error count.

SELF DIAGNOSTIC	
2 :	0
3 :	N/A
4 :	0
5 :	1
8 :	0
101 :	N/A

Numeral "0" means that no fault was detected.
Numeral "1" means the number of a fault occurrence (1 ~ 255).

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnosis function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]

To clear the result display to “0”, press buttons on the remote commander subsequent as shown below when the self-diagnostic screen is being displayed.

[8] ➡ [0]

[Quitting Self-diagnostic screen]

To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

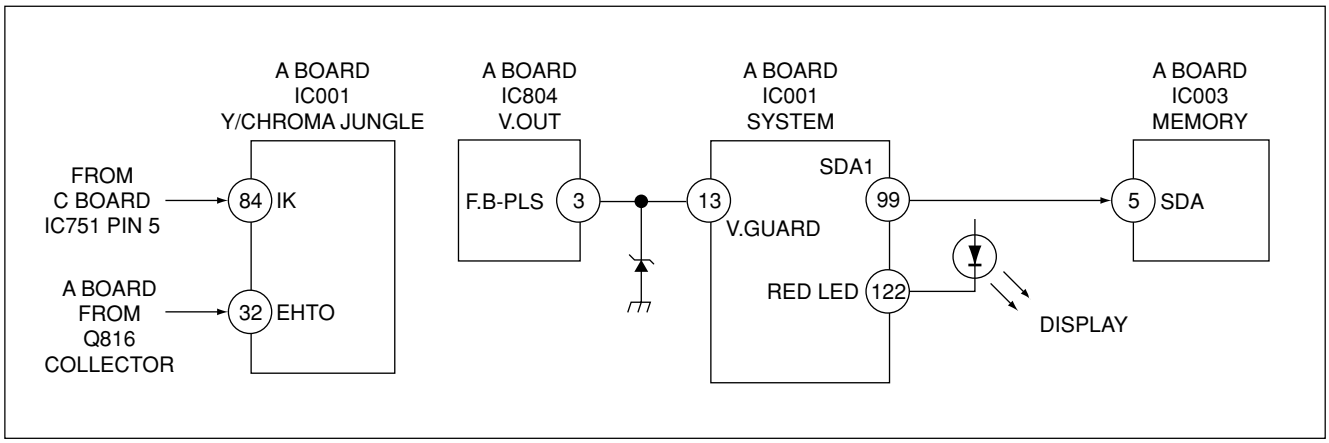

[+B overcurrent (OCP)]	Occurs when an overcurrent on the +B(135V) line is detected by pin 32 of IC001 (A board). If the voltage of pin 32 of IC001 (A board) is more than 4V, the unit will automatically go to standby.
[V-PROTECT]	Occurs when an absence of the vertical deflection pulse is detected by pin 13 of IC001 (A board).
[IK (AKB)]	If the RGB levels* do not balance within 15 sec after the power is turned on, this error will be detected by IC001 (A board). TV will stay on, but there will be 5 times LED blinking.
[POWER SUPPLY NG (+5V) for VIDEO PROCESSOR]	Occurs when IC001 internal HV protect detects an abnormal H-Pulse (frequency) due to improper power supply to IC001. TV cuts off high voltage power of anode CRT. No picture will be detected. eg: IC602, IC604 go faulty.

* (Refers to the RGB levels of the AKB detection Ref pulse that detects IK.)

SECTION 1
DISASSEMBLY

1-1. REAR COVER REMOVAL

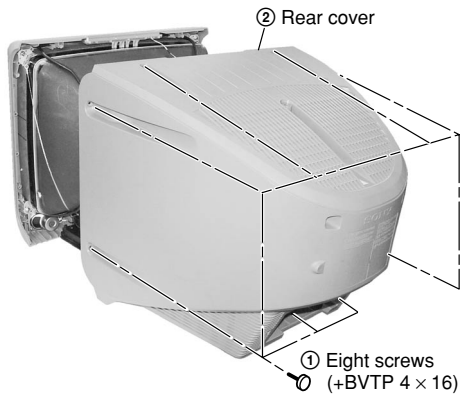

1-2. SPEAKER REMOVAL

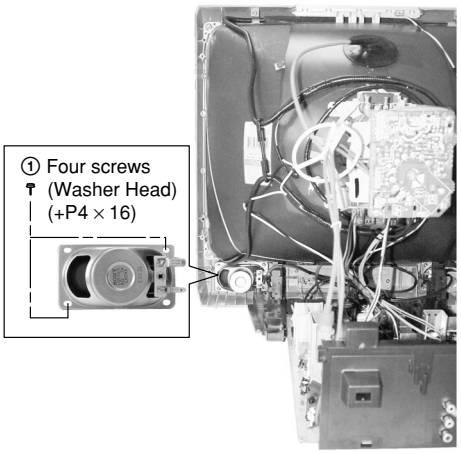

1-3. CHASSIS ASSY REMOVAL

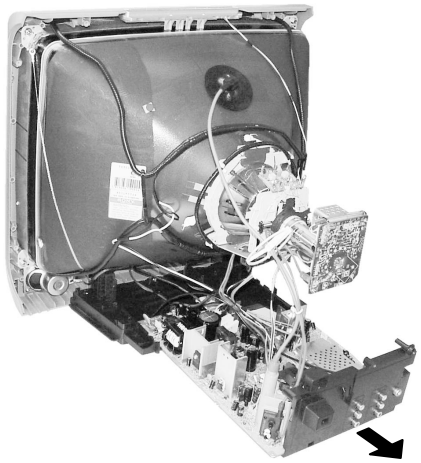

1-4. SERVICE POSITION

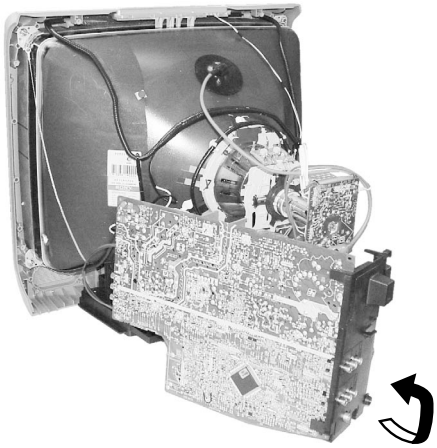

1-5. TERMINAL BRACKET REMOVAL

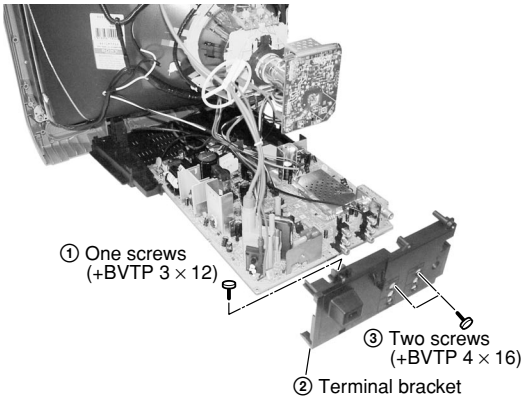

1-6. A BOARD REMOVAL

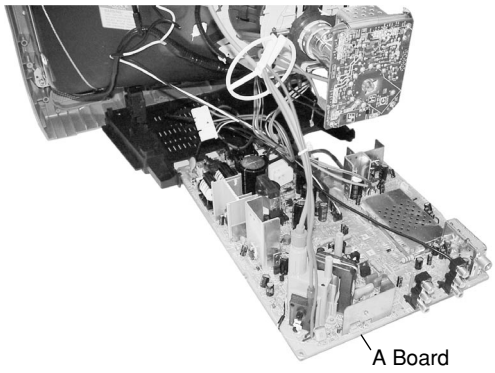

1-7. PICTURE TUBE REMOVAL

Note:
- Please make sure the TV set is not in standing position before removing necessary CRT support located on bottom right and left.

1) Place the TV set with the CRT face down on a cushion jig.
2) Remove the rear cover.
3) Unplug all inter connecting leads from the Deflection Yoke, Degaussing Coil and CRT grounding strap.

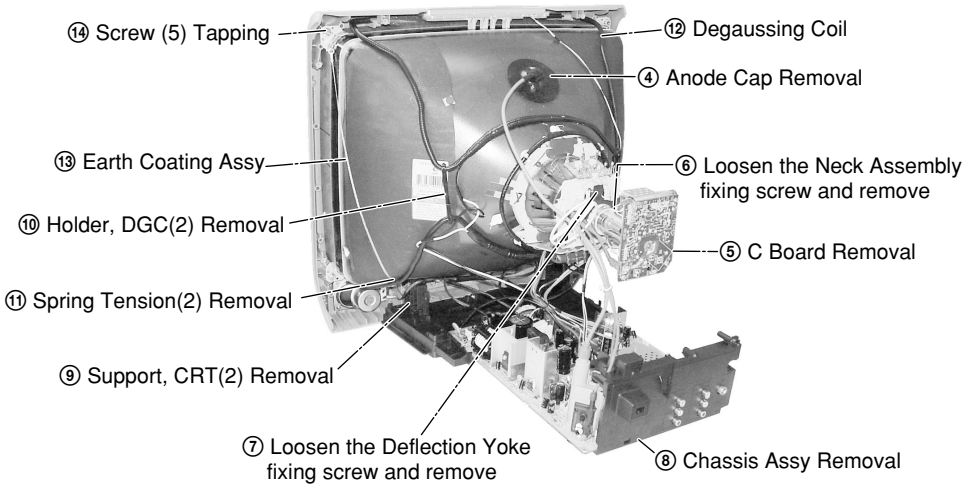
⑭ Screw (5) Tapping
⑫ Degaussing Coil
④ Anode Cap Removal
⑬ Earth Coating Assy
⑥ Loosen the Neck Assembly fixing screw and remove
⑩ Holder, DGC(2) Removal
⑤ C Board Removal
⑪ Spring Tension(2) Removal
⑨ Support, CRT(2) Removal
⑦ Loosen the Deflection Yoke fixing screw and remove
⑧ Chassis Assy Removal

• REMOVAL OF ANODE-CAP

Note:
- After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.

- **REMOVING PROCEDURES**

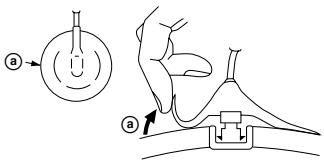

① Turn up one side of the rubber cap in the direction indicated by the arrow Ⓐ.

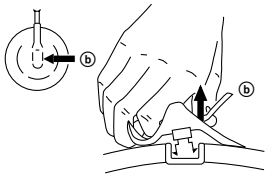

② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow Ⓑ.
③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by

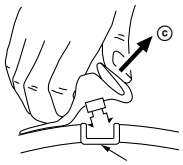

anode button

turning up the rubber cap and pulling it up in the direction of the arrow Ⓒ.

- **HOW TO HANDLE AN ANODE-CAP**

① Do not damage the surface of anode-caps with sharp shaped objects.
② Do not press the rubber too hard so as not to damage the inside of anode-cap.
A metal fitting called the shatter-hook terminal is built into the rubber.
③ Do not turn the foot of rubber over too hard.
The shatter-hook terminal will stick out or damage the rubber.

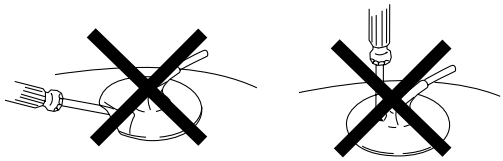

SECTION 2
SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.

Set the controls as follows unless otherwise noted:
VIDEO model ..... Standard
PICTURE control ..... normal
BRIGHTNESS control ..... normal

Perform the adjustments in the following order :
1. Beam Landing
2. Convergence
3. Focus
4. Screen(G2)
5. White Balance

Note : Test Equipment Required.
1. Pattern Generator
2. Degausser
3. DC Power Supply
4. Digital Multimeter
5. Oscilloscope

Preparation :
- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

2-1. BEAM LANDING

Picture Mode: DYNAMIC

1. Input a white signal with the pattern generator.
   Contrast, Brightness } normal
2. Set the pattern generator raster signal to a green raster.
3. Move the deflection yoke to the rear and adjust with purity control so that the green is at the center and the blue and the red take up equally sized areas on each side. (See Figures 2-1 through 2-4.)
4. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 2-1.)
5. Switch the raster signal to blue then to red and verify the condition.
6. When the position of the deflection yoke has been decided fasten the deflection yoke with the screws and DY spacers.
7. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Figure 2-4.)

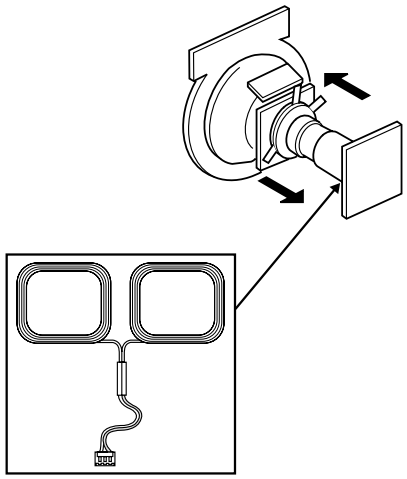

Fig. 2-1

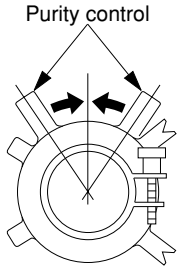

Fig. 2-2

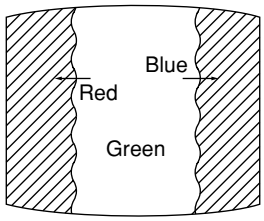

Fig. 2-3

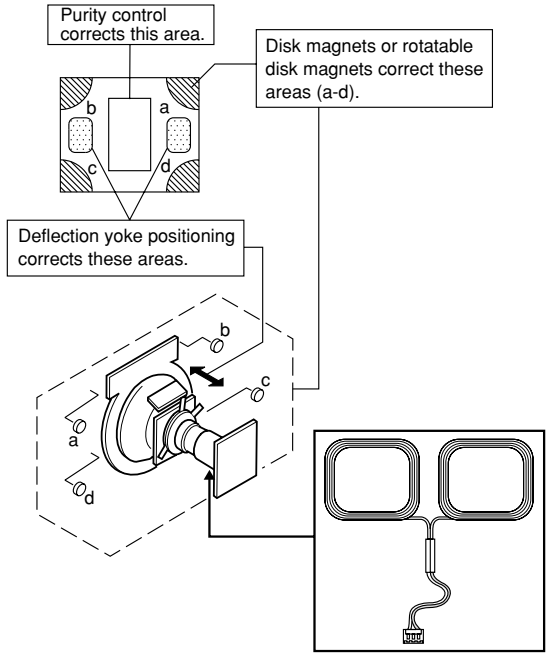

Fig. 2-4

2-2. CONVERGENCE

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive dot/hatch signal.
- Pic mode: Standard.

(1) Horizontal and Vertical Static Convergence

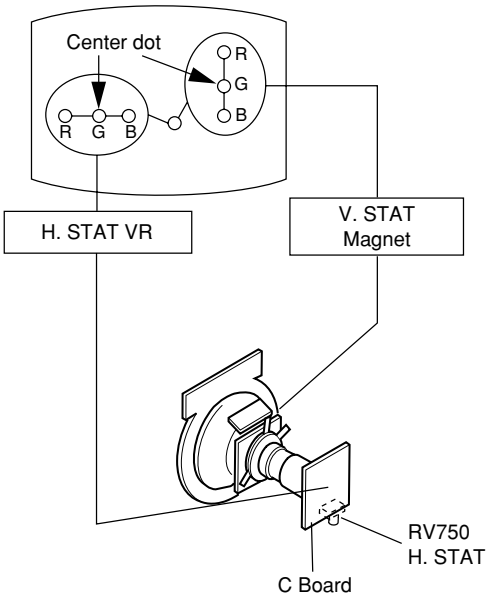

1. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving horizontally), adjust the H.STAT control so that the red, green and blue dots are on top of each other at the center of the screen.
3. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
   (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

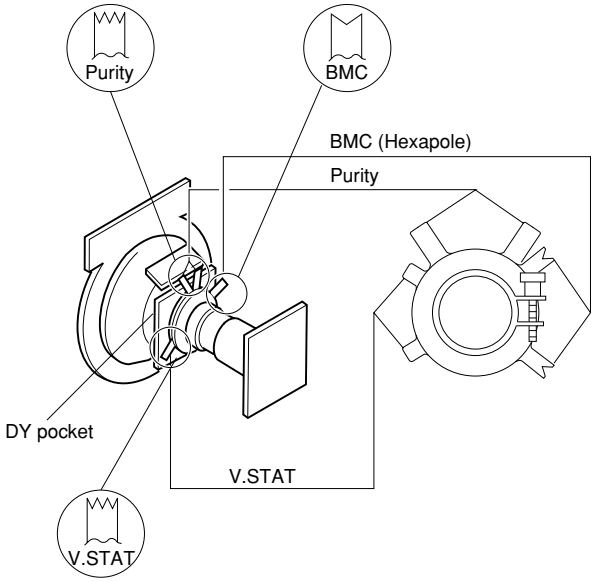

Operation of V. STAT magnet.
If the V.Stat magnet is moved in the "Ⓐ" and "Ⓑ" arrows, the red, green and blue dots moves as shown below.

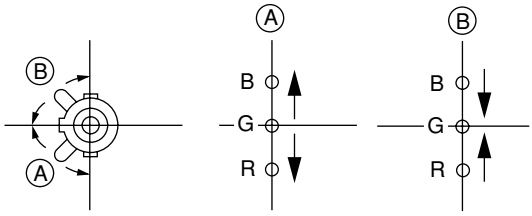

Moved RV750 H. STAT.
the red, green and blue dots move as shown below.

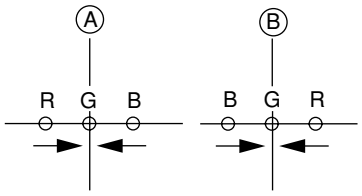

4. BMC (Hexapole) Magnet.
   If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

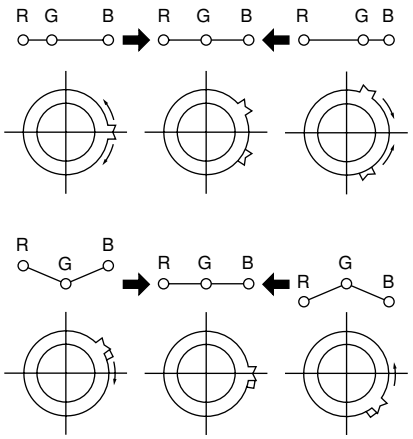

(2) Convergence Rough Adjustment

Preparation:

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence

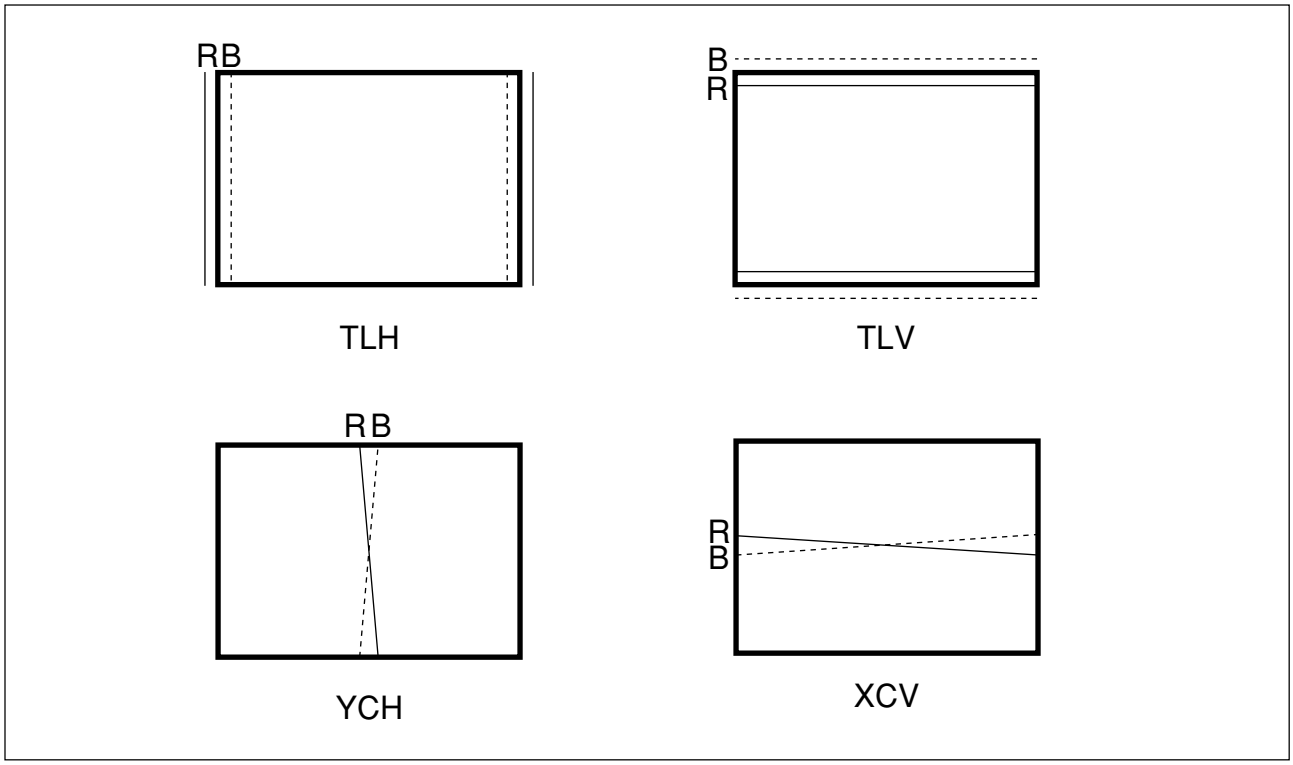

TLH	Insert	TLH	Correction Plate to DY Pocket (Left or Right)
YCH	Insert	YCH	VOL on DY
TLV	Rotate	TLV	VOL on DY
XCV	Rotate	XCV	Adj core on DY

(3) Screen corner Convergence

1. Affix a Piece A (90), conv. correct corresponding to the misconverged areas.

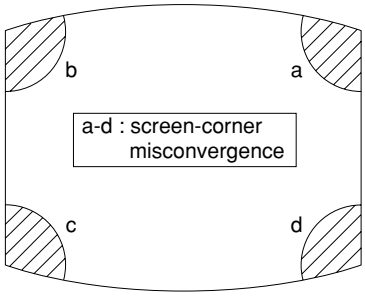

ON DY:

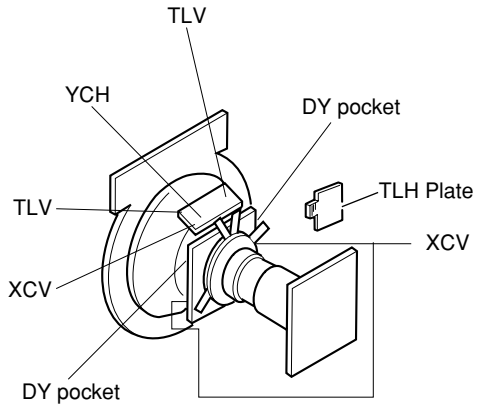

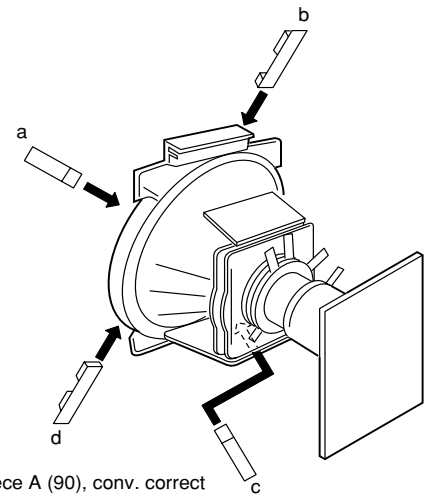

Piece A (90), conv. correct

2-3. FOCUS ADJUSTMENT

FOCUS adjustment should be completed before the W/B adjustment:

1. Receive digital monoscope pattern.
2. Set picture mode: DYNAMIC.
3. Adjust focus VR to obtain a just focus at the center of the screen.
4. Change receiving signal to white pattern and blue back.
5. Confirm MAGENTA RING is not noticeable. Incase magenta ring is obvious, then adjust FOCUS VR to balance magenta ring and FOCUS.

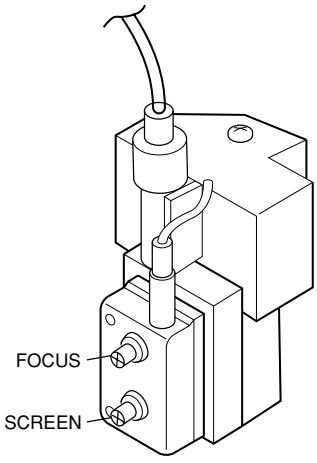

FLYBACK TRANSFORMER (T802-14")
FLYBACK TRANSFORMER (T801-21")

2-4. G2 (SCREEN) ADJUSTMENTS

1. Set the PICTURE & BRIGHTNESS to STANDARD.
2. Put the Video input mode signal.
3. Connect R,G,B of the C board cathode to oscilloscope.
4. Adjust Brightness to obtain the cathode value to value below.
5. Adjust G2 (screen) on the FBT until picture shows the point before cut off.

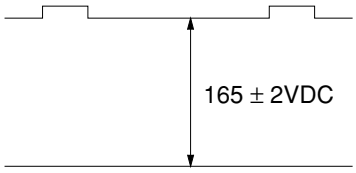

2-5. WHITE BALANCE ADJUSTMENT

1. Set to Service Mode (Refer Section 3-1: ADJUSTMENTS WITH COMMANDER)
2. Input white raster signal.
3. Set Picture to <DYNAMIC mode>
4. Select RDRV (002) with [1] and [4] and fixed the value to 37 (dec) with [3] and [6].
5. Adjust WHBL GDRV (003) and BDRV (004) with [1] and [4] and adjust the data with [3] and [6] for best white balance in Highlight condition.
6. Write into the memory by pressing [MUTING] then [0].
7. Adjust WHBL BKOR (000) and BKOG (001) with [1] and [4] and adjust the level with [3] and [6] for best white balance cut-off condition.
8. Write into memory by pressing [MUTING] then [0].

2-6. SUB BRIGHT ADJUSTMENT

1. Set to service mode.
2. Brightness set to 50%, Picture....Minimum
3. Select WHBL SBRT (010) with [1] and [4] and adjust SBRT (010) data with [3] and [6] so that the third stripe from right dimly lit.
4. Write into the memory by pressing [MUTING] then [0].
5. GA models Cut-off : 10 IRE
   Slightly Glimmer : 20 IRE

SECTION 3
CIRCUIT ADJUSTMENTS

3-1. ADJUSTMENTS WITH COMMANDER

Service adjustments to this model can be performed using the supplied remote commander RM-W101.

a. ENTERING SERVICE MODE

With the unit on standby

→ [DISPLAY] → [5] → [VOL (+)] → [POWER]

This operation sequence puts the unit into service mode.
This screen display is:

category	item no. in decimal	item name	service data in decimal	NVM NG	service command	field frequency	channel no./ video input name
GEOM	006	HSIZ	031	■	SERVICE	60	S VIDEO 1

release ID	software version	service data in binary	reserved for factory	color system	power on time (decimal)
SUS01	0.69U	0001 1111	FF FF	NTSC3	65535

	Flash DCXO	Status Byte #1 SSD	Status Byte #2 SSD
111 11 11 1 7 11	FG	xy 111 000000	000000

VDSP_C Flag
CO_LOCKED
VDSP
Detected Stereo Type (Direct Value from CZ_ Stereo_Mode)

S : for Sony
A : Aiwa
U S : US/Latin/Taiwan
E U : Europe
G A : General Area
J P : Japan
0 1 : serial no. of the M/P release for each destination

[111] Needed for Nicam DCXO aligment Purpose

[xy] Value of x = 0 - Unknown, 1 - BTSC, 2 - A2, 3 - NICAM, 4 - KOREAN, 5 - Japan, 6 - AV Stereo
Value of y = 0 - Mono, 1 - Stereo, 2 - Bilingual, 4 - SAP/Single

b. METHOD OF CANCELLATION FROM SERVICE MODE

Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

1. Set to Service Mode.
2. Press [1] (UP) and [4] (DOWN), to select the adjustment item.
3. Change item by pressing [3], [6].
4. Press [MUTING] button to indicate WRITE on the screen.
5. Press [0] button to write into memory.

[1], [4]	Select the adjustment item.
↓	
[3], [6]	Raise/lower the data value.
↓	
[MUTING]	Writes.
↓	
[0]	Executes the writing.

d. MEMORY WRITE CONFIRMATION METHOD

1. After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
2. Turn the power switch ON and set to Service Mode.
3. Call the adjusted items again to confirm adjustments were made.

e. OTHER FUNCTION VIA REMOTE COMMANDER

7, 0	All the data becomes the values in memory.
8, 0	All user control goes to the standard state.
Display, 0	Service data initialization (Be sure not to use usually.)
2, 5	Select Device or Category

3-2. ADJUSTMENT METHOD

Item Number 000 HPOS

This explanation uses H POSITION as an example.

1. Select "000 HPOS" with the 1 and 4 buttons, or 2 and 5.
2. Raise/lower the data with the 3 and 6 buttons.
3. Select the optimum state. (The standard is IF for PAL reception.)
4. Write with the MUTING button. (The display changes to WRITE.)
5. Execute the writing with the 0 button. (The WRITE display will be changed to red color while excuting, and back to SERVICE.)

Example on screen display :-

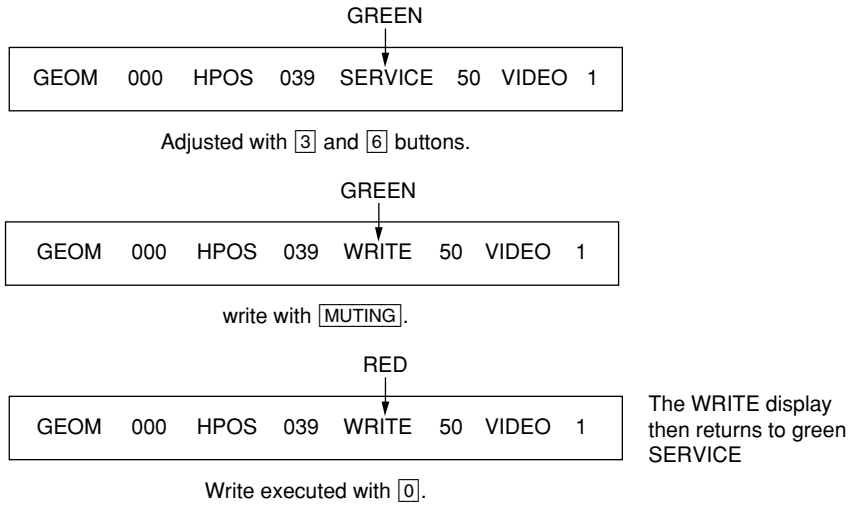
GREEN
GEOM 000 HPOS 039 SERVICE 50 VIDEO 1
Adjusted with 3 and 6 buttons.
GREEN
GEOM 000 HPOS 039 WRITE 50 VIDEO 1
write with MUTING.
RED
GEOM 000 HPOS 039 WRITE 50 VIDEO 1
The WRITE display then returns to green SERVICE
Write executed with 0.

Use the same method for all Items. Use 1 and 4 to select the adjustment item, use 3 and 6 to adjust, write with MUTING, then execute the write with 0.

Note : 1. In WRITE, the data for all items are written into memory together.
2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table

NOTE

a) In the initial value (detailed)column, the data after the slash mark ("/") refers to NTSC model data.
No("/") means data is common for multi and NTSC model.
b) Item remarked "*" and "**", please refer page 25~26 for the data.
c) shaded items are no data.
d) Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
e) Note for the Different Data those are the standard data values written on the microprocessor. Therefore, the data values of the models are stored respectively in the memory.
In the case of a device replacement, adjustment by rewriting the data value is necessary for some items.
f) Multi ver5.18, NTSC ver5.23

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)			
Category	No.	Name	Dec	Dec						(4:3) 50	(4:3) 60	(4:3) w50	(4:3) w60
GEOM	000	HPOS	031	063	ADJUST	Horizontal Shift (HS)	50/60/w50/w60	TV-Processor		40/31	42/31	42/31	45/31
	001	HPAR	031	063	ADJUST	Horizontal Parallelogram	50/60/w50/w60			31	31	31	31
	002	HBOW	031	063	ADJUST	Horizontal Bow	50/60/w50/w60			31	31	31	31
	003	VLIN	031	063	ADJUST	Vertical Linearity	50/60/w50/w60			31	31	31	31
	004	VSCR	031	063	ADJUST	Vertical Scroll	50/60/w50/w60			31	31	31	31
	005	HSIZ	031	063	ADJUST	EW Width (EW)	50/60/w50/w60			26/31	25/31	25/31	28/31
	006	EWPW	031	063	ADJUST	EW Parabola/Width (PW)	50/60/w50/w60			24	31	31	31
	007	UCOP	017	063	ADJUST	EW Upper Corner Parabola	50/60/w50/w60			31/17	31/17	31/17	31/17
	008	LCOP	017	063	ADJUST	EW Lower Corner Parabola	50/60/w50/w60			31/17	31/17	31/17	31/17
	009	EWTZ	031	063	ADJUST	EW Trapezium	50/60/w50/w60			31	31	31	31
	010	VSLP	031	063	ADJUST	Vertical Slope (VS)	50/60/w50/w60			31	31	31	31
	011	VSIZ	015	063	ADJUST	Vertical Amplitude	50/60/w50/w60			24	15	15	26
	012	SCOR	014	063	ADJUST	S-Correction (SC)	50/60/w50/w60			25/14	25/14	25/14	25/14
	013	VPOS	031	063	ADJUST	Vertical Shift (VSH)	50/60/w50/w60			39	31	31	28
	014	VZOM	031	063	FIX	Vertical Zoom (VZ)	<4:3 Screen 50/60/w50/w60><16:9 Screen (50/60)*(WZ/N/F/Z)>						
	015	HBL	000	001	FIX	RGB Blanking Mode	50/60/w50/w60			01	01	01	01
	016	WBF	007	015	FIX	Timing of Wide Blanking (WBF)	50/60/w50/w60			07	07	07	07
	017	WBR	007	015	FIX	Timing of Wide Blanking (WBR)	50/60/w50/w60			10	10	10	10
	018	SBL	000	001	FIX	Service Blanking	none		00				
	019	COPY	000	001	FIX	Copy the GEO data to all 50/60Hz NVM area	none		/00				

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)														
Category	No.	Name	Dec	Dec						Col Temp (HIGH other)	Col Temp (LOW other)	Col Temp (NORM other)	Col Temp (HIGH YUV)	Col Temp (LOW YUV)	Col Temp (NORMAL YUV)	Col Temp (HIGH RGB)	Col Temp (LOW RGB)	Col Temp (NORM RGB)	TV	VIDEO	YUV	Pic mode 0	Pic mode 1	Pic mode 2	Pic mode 3
WHBL	000	BKOR	031	063	ADJUST	Black Level Offset R (OFB = 00), Offset B (OFB = 01)	col temp (HIGH/LOW/Normal)*(UV/RGB/Others)	TV-Processor		31	31	31	31	31	31	31	31	31						
	001	BKOG	031	063	ADJUST	Black Level Offset G	col temp (HIGH/LOW/Normal)*(UV/RGB/Others)			31	31	31	31	31	31	31	31	31						
	002	RDRV	037	063	FIX	White Point R	col temp (HIGH/LOW/Normal)*(UV/RGB/Others)	TV-Processor		37	37	37	37	37	37	37	37	37						
	003	GDRV	037	063	ADJUST	White Point G	col temp (HIGH/LOW/Normal)*(UV/RGB/Others)			31/37	31/37	31/37	31/37	31/37	31/37	31/37	31/37	31/37						
	004	BDRV	037	063	ADJUST	White Point B	col temp (HIGH/LOW/Normal)*(UV/RGB/Others)			31/37	31/37	31/37	31/37	31/37	31/37	31/37	31/37	31/37						
	005	LPG	000	001	FIX	RGB Gain Preset	none		01															
	006	PGR	031	127	FIX	Preset Gain R (PGR)	none		*															
	007	PGG	031	127	FIX	Preset Gain G (PGG)	none		*															
	008	PGB	031	127	FIX	Preset Gain B (PGB)	none		*															
	009	GNOF	000	015	FIX	Preset Gain Offset	none	CCC loop	15															
	010	SBRT	031	063	ADJUST	Sub-Brightness	Others/RGB/YUV												31	31	31			
	011	SBRO	000	003	FIX	Sub-Brightness Offset (Intelligent Pic)	none		00															
	012	EGL	000	001	FIX	Enable Gain Loop in CCC System	none		00															
	013	SGL	000	003	FIX	Selection of High Current in CCC System	none		00															
	014	AKB	000	001	FIX	Black Current Stabilization	none		00															
	015	CBS	000	001	FIX	Control Sequence of Beam Current Limiting	none		00															
	016	RGBB	000	003	FIX	RGB Blanking	none		00															
	017	BLBG	000	001	FIX	Blanking of Blue & Green Output	none		00															
	018	OFB	000	001	FIX	Black Level Offset Blue	none		01															
	019	NSBR	000	015	FIX	Non Standard Brightness Offset	none		05/00															
	020	WBP	000	003	FIX	Color Temp Setting (0:High, 1:Normal, 2,3:Low)	Picture Mode															00	01	02	01/00

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)																					
Category	No.	Name	Dec	Dec						YUV	50pal (TV)	50pal (Video)	50secam (TV)	50secam (Video)	60TV	60Video	50YUV	60YUV	50RGB	60RGB	Pic mode 0	Pic mode 1	Pic mode 2	Pic mode 3	TV	Video	TV Wide	Video Wide	AVM (Jpn)	AV Wide (Jpn)
SADJ	000	PMAX	063	063	ADJUST	Picture Maximum	(TV / Video)*(Normal / Wide) / <Normal / Wide>	TV-Processor																	37	37	37	37	00	00
	001	SHUE	007	015	ADJUST	Sub-Hue	TV / Video																		07	07				
	002	SSHP	015	063	FIX	Sub-Sharpness	TV / Video / YUV			*															*	*				
	003	SSHO	000	003	FIX	Sub-Sharpness Offset (Intelligent Pic)	none		06																					
	004	SCOL	031	063	ADJUST	Sub-Color	50pal(tv)/50pal(video)/50secam(tv)/50secam(video)/ 60TV/60video/50YUV/60YUV/50RGB/60RGB				31/00	31	31/00	31	31	31	31/00	31	31/00	31											
	005	SCOO	000	003	FIX	Sub-Color Offset (Intelligent Pic)	none		02																					
	006	PIC	031	127	FIX	Picture Control [GA:0-100(valid), >100(invalid); Others:0-63(valid); ignore bit 6(invalid)]	Picture Model(GA: Personal = User Reset Data)															100/63	80/50	65/41	100/63						
	007	COL	031	127	FIX	Color Control [GA:0-100(valid), >100(invalid); Others:0-63(valid); ignore bit 6(invalid)]	Picture Model(GA: Personal = User Reset Data)															56/35	50/32	40/25	50/38						
	008	BRT	031	127	FIX	Brightness Control [GA:0-100(valid), >100(invalid); Others:0-63(valid); ignore bit 6(invalid)]	Picture Model(GA: Personal = User Reset Data)															50/32	50/32	60/38	50/32						
	009	HUE	031	127	FIX	Hue Control [GA:0-100(valid), >100(invalid); Others:0-63(valid); ignore bit 6(invalid)] (*Send to TINT #1Eh(5-0) with US model)	Picture Model(GA: Personal = User Reset Data)															50/31	50/31	50/31	50/31						
	010	SHP	031	127	FIX	Sharpness Control [GA:0-100(valid), >100(invalid); Others:0-63(valid); ignore bit 6(invalid)]	Picture Model(GA: Personal = User Reset Data)															60/35	50/32	50/32	50/32						

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)											
Category	No.	Name	Dec	Dec						Others	YUV	PAL(TV)	NTSC(TV)	SECAM(TV)	PAL(Video)	NTSC(Video)	SECAM(Video)	S-INPUT	SECAM	NTSC	TV
YC	000	PFRQ	000	003	FIX	Peaking Center Frequency and Delay		TV-Processor		00											00
	001	RPA	001	003	FIX	Ratio Pre & Over Shoot	TV/other			02											02/03
	002	RPO	002	003	FIX	Ratio of Positive & Negative Peaks	TV/other			02											02/01
	003	YDLY	012	015	FIX	Y-Delay	(PAL/NTSC/SECAM)*(TV/VIDEO)+YUV/S-INPUT				*	*	*	*	*	*	*	*			
	004	CMAT	000	003	FIX	PAL-SECAM or NTSC (Japan/USA) Matrix			00												
	005	ACL	001	001	FIX	Automatic Color Limiting			01												
	006	CB	000	001	FIX	Chroma Bandpass Center Frequency	valid only with TV (*Video:0 fix)		01/00												
	007	SBO	001	003	FIX	SECAM Black Offset			00												
	008	CHSE	001	003	FIX	PAL/NTSC Ident Sensitivity			02												
	009	CLO	000	001	FIX	Center Frequency of Cloche(Bell) Filter			00												
	010	CTRP	000	001	FIX	Chroma Trap Mode	SECAM/others			00									01/00		
	011	BPS	000	001	FIX	Bypass of Chroma Base-band Delay Line	NTSC/others			*										*	
	012	FCO	000	001	FIX	Forced Color On			00												
	013	TINT	031	063	FIX	Base-Band Tint Control	YUV/others			31	31										
	014	TUV	000	001	FIX	Tint Control on UV Signals			00												

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)								
Category	No.	Name	Dec	Dec						50	60	others	YUV	TV	Video	Teletext	TV-ip	No signal
SYNC	000	SYS	000	001	FIX	Synchronization on YSYNC Input			00									
	001	FO	000	003	FIX	Phase 1 Time Constant	TV IP ON/TV IP OFF/Video/Teletext/Auto Tuning or No signal(RF)							**/03	03	01/00	**/00	00
	002	VID	000	001	FIX	Video Ident Mode	50/60			00	00							
	003	FSL	000	001	FIX	Forced Slicing Level for Vertical Sync			00									
	004	SSL	000	001	FIX	Slicing Level Sync Separator	50/60			00	00							
	005	SVID	001	007	FIX	Source Selection for Video Identification	YUV/Others					00	07					
	006	FORF	000	003	FIX	Forced Field Frequency			03/01									
	007	MVK	000	001	FIX	Macro Vision Keying			01									
	008	AFCT	000	003	FIX	AFC Timing Switch Control (GA,US:Pin116)			03									

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)										
Category	No.	Name	Dec	Dec						Others	RGB	Live	TV (Dyn)	TV (Others)	Video (Dyn)	Video (Others)	ColorTemp (HIGH)	ColorTemp (Others)	Color Temp(LOW)	Color Temp (NORMAL)
PICT	000	CADL	007	015	FIX	Cathode Drive Level			00/**											
	001	CFA	000	003	FIX	Comb Filter Mode			*											
	002	SOC	002	003	FIX	Soft Clipping Level			00											
	003	PWL	001	001	FIX	Peak White Limiting Switch			01											
	004	WHTL	006	015	FIX	Peak White Limiting			*											
	005	GAM	001	001	FIX	Gamma			00											
	006	WTS	001	003	FIX	Gamma Control and White Stretch	Live/Others			02		02								
	007	TFR	000	001	FIX	DC Transfer Ratio of Luminance Signal	Live/Others			01	00	01								
	008	COR	003	003	FIX	Coring	(TV/Video)*(Dyna/others)						00	00	00	00				
	009	CORO	000	001	FIX	Coring Offset (Intelligent Pic)			02											
	010	BKS	003	003	FIX	Black Stretch	RGB/others			02	02									
	011	AAS	001	001	FIX	Black Area to Switch off the Black Stretch			01											
	012	DSK	000	001	FIX	Dynamic Skin Control			00											
	013	BLS	000	001	FIX	Blue Stretch	col temp (HIGH/OTHERS)										00	00		
	014	NBLS	000	001	FIX	Operation Blue Stretch Circuit			00											
	015	NRR	000	001	FIX	Non Red Reduction	col temp (HIGH/LOW/NORMAL)										01		01	01

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)		
Category	No.	Name	Dec	Dec						YUV	TV	Video
SW	000	CV2	000	001	FIX	CVBS2 Input Signal Selection			00			
	001	SVO	001	003	FIX	Function of IFVO/SVO/CVBSI Pin @ 48	TV/Video/YUV			02	01	01
	002	DFL	000	001	FIX	Flash Protection			01			

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common
Category	No.	Name	Dec	Dec					
VIF	000	OIFD	036	063	FIX	Offset IF Demodulator		TV-Processor	36
	001	AGCT	031	063	FIX	AGC Take-over			31
	002	STM	000	001	FIX	Search Tuning Mode			01
	003	GD	000	001	FIX	Group Delay on CVBS1 Signal			00
	004	AGCS	001	003	FIX	IF AGC Speed			01
	005	FFI	000	001	FIX	Fast Filter IF PLL			00
	006	LNAI	001	001	FIX	RF Amp LNA bit initial value			00
	007	LNAT	195	225	FIX	RF Amp Threshold Level			195/00
	008	LNSN	004	007	FIX	RF Amp SN Level Threshold			03/00
	009	LNSD	002	007	FIX	RF Amp SN Level Drop Threshold			01/00
	010	LNEX	016	063	FIX	RF Amp check SN Drop Timing			30/00
	011	CHTR	048	127	FIX	Channel Threshold after Auto Prg to set RF Amp User Mode			25/00

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)			
Category	No.	Name	Dec	Dec						Pic mode 0	Pic mode 1	Piv mode 2	Pic mode 3
VM	000	RGBD	003	007	FIX	Delayof RGB Output to VM Output	none	TV-Processor	04				
	001	VMA	003	003	FIX	Amplitude of VM Output	none		*				
	002	VMAP	002	003	FIX	VM setting (0:High, 1:Low, 2,3:OFF)	Picture Mode			00	01	02	00
	003	VMMO	003	003	FIX	VM Mode			01				

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common
Category	No.	Name	Dec	Dec					
SDEM	000	FMWS	000	003	FIX	Window Selection for FM Demodulator		TV-Processor	02
	001	QSS	001	001	FIX	Quasi Split Sound (QSS) Amplifier Mode (N/A for GA multi M system)			**/01
	002	BPB	000	001	FIX	Bypass of Sound Bandpass Filter			00
	003	AMLO	000	001	FIX	Audio Output Signal for AM Sound			00
	004	HPVC	000	001	FIX	Head Phone Volume Control			00

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common
Category	No.	Name	Dec	Dec					
TXT	000	TXV	039	063	FIX	Teletext Vertical Position for Philips		Text Decoder	39/00
	001	THD	005	127	FIX	Teletext H-sync Active Edge Shift			10/00
	002	TBR	004	015	FIX	Teletext RGB Brightness			11/00
	003	LCB	000	001	FIX	Teletext LCB 0: disable 1: enable (setting for FASTEX)			00/00

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common	Initial Value (Detailed)							
Category	No.	Name	Dec	Dec						TV-L(Euro)	TV	Video	Off	SRS/WOW	Trusurround	Istereo	Imono
SDSP	000	AVM	002	007	FIX	AVL Mode		SSD	02								
	001	AVV	005	015	FIX	AVL Reference Level			09								
	002	BBL	000	015	FIX	BBE Contour			*								
	003	BBH	000	015	FIX	BBE Process			*								
	004	BBLW	000	015	FIX	BBE Contour Offset			**/06								
	005	SVOF	000	015	FIX	Surround /Effect Mode Volume Offset	Off(SRS/WOW)/Trusurround/Istereo/Imono						*	*	*	*	*
	006	IVOF	000	007	FIX	Master Volume Positive Offset			06								
	007	EVOF	000	007	FIX	Master Volume Negative Offset			06								
	008	LAD	000	031	FIX	Decoder Level Adjust			05								
	009	LAM	000	031	FIX	Mono Level Adjust			05								
	010	LAN	000	031	FIX	Nicam Level Adjust			22								
	011	LAS	000	031	FIX	SAP Level Adjust			08								
	012	LAA	000	031	FIX	ADC Level Adjust	Tv/Video(Non Euro)I TV-L/TV-non L/Video			00	00	00					
	013	SEF	003	007	FIX	Incredible Mono/Stereo Effect	Istereo/Imono									05	03
	014	A1L	000	255	FIX	AUX1 Volume Left			00								
	015	A1R	000	255	FIX	AUX1 Volume Right			00								
	016	BAS	000	015	FIX	Main Bass Offset			*								
	017	TRE	000	015	FIX	Main Treble Offset			*								
	018	EQ1	000	015	FIX	Equalizer Main Channel Band (100 Hz) Offset			*								
	019	EQ2	000	015	FIX	Equalizer Main Channel Band (300 Hz) Offset			*								
	020	EQ3	000	015	FIX	Equalizer Main Channel Band (1000 Hz) Offset			*								
	021	EQ4	000	015	FIX	Equalizer Main Channel Band (3000 Hz) Offset			*								
	022	EQ5	000	015	FIX	Equalizer Main Channel Band (8000 Hz) Offset			*								
	023	BFCT	005	007	FIX	DBE, DUB and BBE Control			*								
	024	SCEN	001	015	FIX	SRS3D Center Control			04								
	025	SSPA	000	015	FIX	SRS3D Space Control			01								
	026	BBHW	000	015	FIX	BBE process offset in WOW mode			**/00								
	027	STRE	002	007	FIX	Treble Offset for surround mode			**/01								
	028	BBHT	000	015	FIX	BBE Offset in TV mode			00								
	029	DWA	000	000	FIX	DWA???			00								
	030	TTRE	002	007	FIX	Treble Offset in TV Mode			02								

TVJ	Functionality		Init.	Range	Data	Function	Table & Note	Device Name	Common
Category	No.	Name	Dec	Dec					
SDEC	000	MPTU	003	015	FIX	Upper Threshold for MPX pilot detection (BTSC)		SSD	02
	001	MPTL	009	015	FIX	Lower Threshold for MPX pilot detection (BTSC)			05
	002	SPTU	003	015	FIX	Upper Threshold for SAP carrier detection			08/05
	003	SPTL	006	015	FIX	Lower Threshold for SAP carrier detection			15
	004	C1TH	000	031	FIX	Normal Threshold for detection of SC1			00
	005	C1AP	000	031	FIX	Auto Program Threshold for detection of SC1			00
	006	SPTH	000	031	FIX	Noise Threshold for automute of SAP			00/05
	007	SPHY	004	015	FIX	Hysteresis size for automute of SAP			03
	008	FMTH	000	031	FIX	Noise Threshold for automute of SC2 in FM A2 standard			18/00
	009	FMHY	004	015	FIX	Hysteresis size for automute of SC2 in FM A2 standard			07/04
	010	BTTH	000	031	FIX	Noise Threshold for automute of BTSC stereo carrier			00
	011	BTHY	004	015	FIX	Hysteresis size for automute of BTSC stereo			03
	012	EJTH	000	031	FIX	Noise Threshold for automute of EIAJ FM subcarrier			00
	013	EJHY	004	015	FIX	Hysteresis size for automute of EIAJ FM subcarrier			04
	014	ONLY	000	001	FIX	Reproduce only related NICAM on DEC output			00
	015	EXAM	000	001	FIX	Fall back source in case of automute in standard L (DDEP)			00
	016	NIMT	000	001	FIX	NICAM auto mute function depend on bit error rate (DDEP)			00
	017	NILE	100	255	FIX	NICAM lower error limit (DDEP)			05
	018	NIUE	200	255	FIX	NICAM upper error limit (DDEP)			200
	019	EPMD	001	003	FIX	DEMDEC Easy Programming (DDEP)	If EPMD = 0 and STDS = 0 and OP3 Bit = 1 SDEC category is Disable and SDKC category will take over		02/01
	020	STDS	019	031	FIX	Bits multiplexed for ASD and SSS modes			31/**
	021	OVMA	001	001	FIX	FM overmodulation adaption			00
	022	FLBW	000	003	FIX	FM/AM demodulator filter bandwidth			03/**
	023	IDMD	000	003	FIX	FM ident speed in SSS mode			00/01
	024	FPAL	000	001	FIX	Line fequency for BTSC decoding			00
	025	OVMT	001	002	FIX	Overmodulation level threshold relative to nominal			03
	026	DCXI	000	001	FIX	NICAM DCXO Scaling Control Inverter			**/00
	027	DCXG	000	007	FIX	NICAM DCXO Scaling Control Gain			**/00
	028	DCLL	011	015	FIX	NICAM DCXO Scaling Control Limit (L)			00
	029	DCLH	000	031	FIX	NICAM DCXO Scaling Control Limit (H)			**/00
	030	IDEU	001	003	FIX	IDMOD setting for European A2 STD			00
	031	IDKR	001	003	FIX	IDMOD setting for Korean M STD			00
	032	IDJP	001	003	FIX	IDMOD setting for EIAJ STD			01

TVJ	Functionality		Init.	Range	Data	Function	Device Name	Common	Initial Value (Detailed)	
Category	No.	Name	Dec	Dec					50	60
OPTM	000	ASHT	006	007	FIX	Auto shut off timer (data * 5 min)		00		
	001	OSDB	000	015	FIX	OSD brightness	MMR/Micro 60h	05		
	002	OSDH	005	015	FIX	OSD Horizontal Position	XDATA/Micro 60h	08/05		
	003	OSDV	037	063	FIX	OSD Vertical Position	MMR/Micro 60h		63/39	31/39
	004	MUTE	000	001	FIX	No Signal Mute Switch (1=enabled)		00		
	005	RFUL	015	015	FIX	RF Signal Change Counter after Unlocked (Disable when 0fh)		04		
	006	RFLK	015	015	FIX	RF Signal Change Counter after Locked (Disable when 0fh)		00		
	007	LANG	000	003	FIX	OSD language shipping condition		*		
	008	HTXT	000	001	FIX	Sync seperator sw	TV-Processor	00		
	009	CMSS	000	001	FIX	Sync sw	TV-Processor	01		
	010	DCXO	060	295	FIX	DCXO Value	SFR/Micro 60h/DSP	*		
	011	EXBL	000	015	FIX	Extended Blanking Timer to Eliminate White Noise		07/04		
	012	TSYS	000	003	FIX	Memorize TV Sys in NVM at Test Reset [0:B/G, 1:I, 2:D/K, 3:M] (GA Model)		**/00		
	013	LNSW	001	001	FIX	Signal Booster Shipping/Test Reset condition (1:Auto, 0:Off)		**/00		
	014	LBL	001	001	FIX	Brightness Reduction At No Signal condition		00		

TVJ	Functionality		Init.	Range	Data	Function	Device Name	Common	Initial Value (Detailed)	
Category	No.	Name	Dec	Dec					Others	YUV
OPUS	000	SOFF	000	001	FIX	Stay off(0:follow last memory with AC on, 1:standby with AC on)		00/**		
	001	CCBR	000	015	FIX	CC OSD Brightness	MMR/Micro 60h	00		
	002	SPCH	001	127	FIX	Channel Number after Shipping Condition		00/07		
	003	SPCA	001	001	FIX	Cable Selection after Shipping Condition (1 = Cable On)		00/**		
	004	OUV	000	001	FIX	Offset Control on UV input Signals (only for US)			00	00
	005	CFA2	000	001	FIX	Forced Comb Filter On (only for US)		00		

(For NTSC model only)

TVJ	Functionality		Init.	Range	Data	Function	Device Name	Common
Category	No.	Name	Dec	Dec				
OPTB	000	IALL	000	001	FIX	Standard Write Switch (not memorized in NVM)		x
	001	OPB1	000	255	FIX	Option 1 (System related)		Please
	002	OPB2	000	255	FIX	Option 2 (Video Signal related)		refer
	003	OPB3	000	255	FIX	Option 3 (Stereo Decoding related)		to
	004	OPB4	000	255	FIX	Option 4 (Miscellaneous)		Option Bit
	005	OPB5	000	255	FIX	Option 5 (Miscellaneous)		for each
	006	OPB6	000	255	FIX	Option 6 (OSD Language related)		model

Data Variant depend on models

Category	No	Name	Model	Data
WHBL	006	PGR	With VM	50
			Without VM	45
	007	PGG	With VM	50
			Without VM	45
	008	PGB	With VM	50
			Without VM	45

Category	No	Name	Model	Data
VM	001	VMA	With VM	03
			Without VM	00

Category	No	Name	Model	Table							
				PAL (TV)	NTSC (TV)	SECAM (TV)	PAL (VIDEO)	NTSC (VIDEO)	SECAM (VIDEO)	YUV	S-Input
YC	003	YDLY	Comb Model	08	08	08	11	09	11	09	09
			Non-Comb Model	02	02	10	2	2	2	09	09
			GA NTSC BT models	08	05	08	11	09	11	09	09

Category	No	Name	Model	Table		
				TV	Video	YUV
SADJ	002	SSHP	21" Comb models	30/45	35	35
			21"Non-Comb models &	30	38	35
			All 14" models	30	38	35
			21"NTSC BT models	45	35	35

Category	No	Name	Model	Table	
				NTSC	Others
YC	011	BPS	Comb models	01	00
			Non-Comb models	00	00
			GA NTSC BT models	01	00

Category	No	Name	BT212(AV Stereo)/ Stereo	BT212 Mono
SDSP	002	BBL	00	00
	003	BBH	00	00
	004	BBLW	06	06
	016	BAS	19	00
	017	TRE	21	00
	018	EQ1	21	00
	019	EQ2	19	00
	020	EQ3	17	00
	021	EQ4	00	00
	022	EQ5	17	00
	023	BFCT	00	00
	026	BBHW	00	00
	027	STRE	01	01

Category	No	Name	China/Vietnam	Other models
OPTM	007	LANG	01	00

Category	No	Name	Others country	Hong Kong model	China model
OPTM	012	TSYS	00	01	02

Category	No	Name	Model	Table				
				Off	SRS/WOW	Trusurround	Istereo	Imono
SDSP	005	SVOF	BT212 (AV Stereo)	04	11	04	06	04
			BT212 (mono)	00	07	00	02	00

Category	No	Name	GA Stereo	GA AV ST/GA NTSC ST	GA Mono/ NTSC Mono
OPTM	010	DCXO	50	70	61

Category	No	Name	14" Models	21" Models
PICT	004	WHTL	09	00

Category	No	Name	Mono & AV Stereo models	Stereo, China & India models	Vietnam
SDEM	001	QSS	00	01	01

Category	No	Name	Stereo models	non- stereo models
SDEC	026	DCXI	01	00
	027	DCXG	03	00
	029	DCLH	06	00

Category	No	Name	BT212 mono	B212 AV Stereo	GA NTSC BT Mono
SDEC	020	STDS	13	13	13
	022	FLBW	00	01	01

Category	No	Name	China model	Other models
OPTM	013	LNSW	00	01

Category	No	Name	model	Data
PICT	001	CFA	Comb models	00
			Non Comb models	01
			GA NTSC BT models	00

Category	No	Name	GA NTSC
OPUS	000	SOFF	00
	003	SPCA	01
	004	CTRY	00

Category	No	Name	Model	Vietnam	Other models
SYNC	001	FO	TV	01	03
			TV_IP	01	00

ITEM INFORMATION
No. OPB1

Item	Speed Search		Home Theatre	Wide Screen	M (GA)	B/G	I	D/K	DEC
KV-BT212M80	0	1	0	0	1	1	1	1	79

SPEED SEARCH (Time of speed search) — 00 = disabled (original cycle speed)
01 = 4 time speed from the original
10 = 6 time speed from the original
11 = 8 time speed from the original

TV System Selection — 0 = disabled, 1 = enabled
Home Theatre — 1 = Home Theater mode available
Wide Screen — 1 = Wide Screen model

No. OPB2

Item	Party Mode	PAM(GA)	Component	Composite (SCART)		SECAM	Color Decording		DEC
KV-BT212M80	0	0	0	1	0	1	0	0	20

Party Mode (karaoke function) — 0 = not available, 1 = available
PAM — Portable Audio Mode - GA — 0 = not available, 1 = available
Component — (Component [YCbCr] Terminals) — 0 = not available, 1 = available
Composite — (No. of Composite Terminals)

BX1S/BX1L-Basic:
00 = no composite terminal
01 = 1 composite terminal
10 = 2 composite terminals
11 = 3 composite terminals

BX1L-Full:
00 = no composite terminal
01 = 2 composite terminals
10 = 3 composite terminals
11 = 4 composite terminals

SECAM — (SECAM Color System) — 0 = not available, 1 = available
Color decoding — (Color Crystal Selection)
00 = PAL/NTSC/SECAM (Multi)
01 = NTSC (3.58MHz)
10 = PAL/NTSC/SECAM (4.43MHz)
11 = PAL/NTSC (Tri-Norma)

No. OPB3

Item	HDEV	NICAM ST	NICAM BI	A2 ST	Thai Bilingual	JP/US ST	Korean ST	MONO	DEC
KV-BT212M80	0	0	0	0	0	0	0	0	00

HDEV	(High Deviation Mode)	0 = disabled, 1 = enabled
NICAM ST	(NICAM Stereo)	0 = disabled, 1 = enabled
NICAM BI	(NICAM Bilingual)	0 = disabled, 1 = enabled
A2 ST/BI	(A2 [West German] Stereo/Bilingual)	0 = disabled, 1 = enabled
Thai Bilingual	(A2 [Thai] Bilingual) or Force SAP if US ST is active	0 = disabled, 1 = enabled
JP/US ST	(JP/US Stereo)	0 = disabled, 1 = enabled
Korean ST	(Korean Stereo)	0 = disabled, 1 = enabled
MONO	(Monaural Model)	0 = Stereo (SSD) Model 1 = Monaural Model

No. OPB4

Item	SMAT	1 spk Models	VM	Equalizer	Surround		Top	Text	DEC
KV-BT212M80	1	0	0	0	0	0	0	0	128

SMAT	Surround Matrix	0 = Active, 1 = Passive
1 spk Models	1 Speaker Models	0 = 2 or 3 Speaker Models, 1 = 1 speaker Models
VM	(Velocity Modulation)	0 = disabled, 1 = enabled
Equalizer	(5-band Equalizer Model)	0 = Bass/Treble Model, 1 = Equalizer Model
Surround	(Surround Selection)	00 = Off/Simulated/Surround 01 = Off/Simulated/SRS (3D) Surround 10 = Off/Simulated/WOW/TruSurround 11 = Off/Simulated/WOW/TruSurround/Virtual Bolby (not working now)
TOP	(Forced TOP)	0 = Auto Mode (TOP/FLOF), 1 = Forced TOP
TEXT	(Teletext Model)	0 = Non-Teletext Model, 1 = Teletext Model

No. OPB5

Item	Full Surround	No Surround	COSMIC ASD	ASD	Tilt	IP Plus	IP	Wide	DEC
KV-BT212M80	0	1	1	0	0	1	1	0	102

Full Surround	(Full Surround option-no for EURO model)	0 = Normal Surround Model 1 = Full Surround Model (Off/simulated/surround/ SRS/WOW/TruSurround)
No Surround	(No Surround Model)	0 = Surround Model, 1 = Non-Surround Model
Cosmic ASD	Automatic Standard Detection Using COSMIC	0 = disabled, 1 = enabled
ASD	(Automatic Standard Detection)	0 = disabled, 1 = enabled
Tilt	(Tilt Correction/PIC Rotation)	0 = disabled, 1 = enabled
IP Plus	(Intelligent Picture Plus)	0 = disabled, 1 = enabled
IP	(Intelligent Picture)	0 = disabled, 1 = enabled
Wide	(Wide Mode/V-Compressed)	0 = disabled, 1 = enabled

No. OPB6

Item	GA US	3D OSD	Feature 2	Feature 1	OSD Language Selection				DEC
KV-BT212M80	0	0	0	0	0	1	0	0	04

GA US	(US Model Destination)	0 = US/CANADA/Latin 1 = Taiwan/Korea/Philippine (Wake-up timer enable) (GA Surround Spec:OFF, SIMULATED, SRS)
3D OSD	(BX1L Full version GA multi Destination ONLY)	0 = Normal with 3D Intelligent picture OSD 1 = Disable 3D Intelligent picture OSD
Feature 2	(Temporary for BX1L)	0 = Comb Not available 1 = Comb available
Feature 1	(Temporary for BX1L)	0 = PiP Not Available 1 = PiP available

OSD Language Selection

US (GA NTSC)	1x1x = Complicated Chinese 1xx1 = Korean (note: for BX1L, combination of C.Chinese & Korean not available)
GA	1xxx = Simplified Chinese x1xx = Arabic xx1x = Thai xxx1 = Vietnamese

3-3. PICTURE QUALITY ADJUSTMENTS

PMAX/CONTRAST ADJUSTMENT

1. Select Video Mode.
2. Input PAL CB to TV set (others), Input NTSC 75% CB to TV set (NTSC model).
3. Set PICT 003 "PWL" to 00h and WHBL 017 "BLBG" to 01h.
4. Set the following condition:
   PICTURE 100%, COLOR 0%, BRIGHTNESS 50%.
5. Connect an oscilloscope to pin ④ (R output) of CN004.
6. Set to Service Mode "PWL" to 00h, "BLBG" to 01h.
7. Select SADJ 000 "PMAX" with [1] and [4] of the commander then adjust VR within spec with [3] and [6].

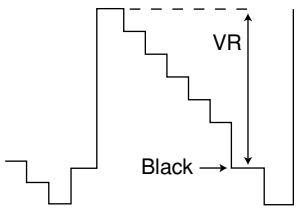

1.46 ± 0.03 Vp-p = for 21" without VM models
1.65 ± 0.03 Vp-p = with VM models except NTSC models
1.23 ± 0.03 Vp-p = for NTSC models VM models
1.10 ± 0.03 Vp-p = for 21" NTSC non VM models
1.46 ± 0.03 Vp-p = for 14" models
1.10 ± 0.03 Vp-p = for 14" NTSC models

8. Select "WIDE" Mode for TV and Video Mode, write the "PMAX DATA-8 steps" (For models with V-Compression features only).
9. Then press [MUTING] → [0] to write the data.
10. Set "PWL" and "BLBG" back to initial data respectively. (PWL: 01h and BLBG: 00h)

SUB COLOR ADJUSTMENT

1. Select Video and set Picture mode.
2. Input PAL 100% CB to TV set (others), Input NTSC 75% CB to TV set (NTSC model).
3. Set PICT 006 "WTS" to 00h, and Intelligent Picture to "OFF".
4. Set the following condition:
   PICTURE 100%, COLOR 50%, BRIGHTNESS 50%, HUE CENTER, SHP 50%.
5. Connect an oscilloscope to pin ② (B output) of CN004.
6. Select to Service Mode and adjust SADJ 004 "SCOL" with [1] and [4] of commander then adjust to VB2 = VB3 = VB4 with [3] and [6], and write in the data as +10 step with +5 step offset.

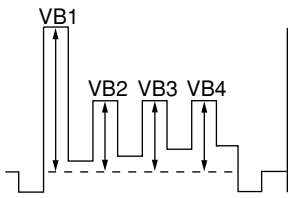

VB2 = VB3 = VB4 (For PAL sub color adjustment)
VB1 = VB4 (For NTSC sub color adjustment)
(Difference is within 70mV)

7. Then press [MUTING] → [0] to write the data.
8. Set "WTS" back to original data, and set Intelligent Picture to "ON".

SUB HUE ADJUSTMENT

1. Select Video.
2. Input NTSC 3.58 Color Bar to TV set.
3. Set the following condition:
   PICTURE 100%, COLOR 50%, BRIGHTNESS 50%, HUE Center, SHR 50%.
4. Connect an oscilloscope to pin ② (B output) of CN004.
5. Set to service mode and select SADJ 001 "SHUE" with [1] and [4] of commander then adjust to VB1=VB2=VB3=VB4 with [3] and [6].
6. Then press [MUTING] → [0] to write the data.
7. Select TV channel and repeat 4-6(Except GA NTSC model)
8. i Select TV channel with 3.58 repeat 4-5, +1 step data offset (applied to GA NTSC models)
   ii.Then press [MUTING] → [0] to write the data.
9. For single system models with NTSC 4.43 select TV channel with NTSC 4.43 repeat item 4-6.

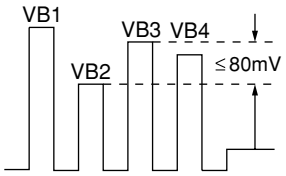

The highest level of VB1, VB2, VB3, VB4 must be aligned at the same time.
The ideal difference between VB2 and VB3 is within ±80mV.

3-4. DEFLECTION ADJUSTMENT

H-TRAPEZOID ADJUSTMENT

1. Receive cross hatch/dotsignal.
2. Adjust on to make H-Trapezoid distortion best.

NORMAL MODE (50Hz)

1. Set to Service Mode.
2. Input SPCB Signal.
3. Using the [1] and [4] button select GEOM (Service Mode).
4. Rasie/lower data using the [3] and [6] buttons adjust the following items:-

GEOM :	000	HPOS	Horizontal Shift (HS)
	001	HPAR	Horizontal Parallelogram
	002	HBOW	Horizontal Bow
	003	VLIN	Vertical Linearity
	004	VSCR	Vertical Scroll
	005	HSIZ	EW Width (EW)
	006	EWPW	EW Parabola/Width (PW)
	007	UCOP	EW Upper Corner Parabola
	008	LCOP	EW Lower Corner Parabola
	009	EWTZ	EW Trapezium
	010	VSLP	Vertical Slope (VS)
	011	VSIZ	Vertical Amplitude
	012	SCOR	S-Correction (SC)
	013	VPOS	Vertical Shift (VSH)
	014	HBL	RGB Blanking Mode
	015	WBF	Timing of Wide Blanking (WBF)
	016	WBR	Timing of Wide Blanking (WBR)
	017	SBL	Service Blanking
	018	COPY	Copy the GEOM data to all 50/60Hz NVM area

5. Write into memory by pressing [MUTING] then [0] on the remote commander.

WIDE MODE (50Hz)

(V-Compression Adjustment)

1. Input SPCB signal.
2. Adjust condition change to WIDE MODE : ON
3. Copy (Item from normal mode 50Hz) all Normal Mode adjusted data.

NORMAL MODE (60Hz)

1. Input 525/60Hz signal.
2. They can copy 50Hz first.
   ("COPY" under GEOM is set to [1], then [MUTE] + [0])
3. Using the [1] and [4] button, select category GEOM (Service Mode).
4. Raise/lower data using the [3] and [6] buttons to obtain optimum image.

GEOM :	000	HPOS	Horizontal Shift (HS)
	001	HPAR	Horizontal Parallelogram
	002	HBOW	Horizontal Bow
	003	VLIN	Vertical Linearity
	004	VSCR	Vertical Scroll
	005	HSIZ	EW Width (EW)
	006	EWPW	EW Parabola/Width (PW)
	007	UCOP	EW Upper Corner Parabola
	008	LCOP	EW Lower Corner Parabola
	009	EWTZ	EW Trapezium
	010	VSLP	Vertical Slope (VS)
	011	VSIZ	Vertical Amplitude
	012	SCOR	S-Correction (SC)
	013	VPOS	Vertical Shift (VSH)
	014	HBL	RGB Blanking Mode
	015	WBF	Timing of Wide Blanking (WBF)
	016	WBR	Timing of Wide Blanking (WBR)
	017	SBL	Service Blanking
	018	COPY	Copy the GEOM data to all 50/60Hz NVM area

WIDE MODE (60Hz)

(V-Compression Adjustment)

1. Input mono scope signal.
2. Adjust condition change to WIDE MODE : ON
3. "COPY" is set to [1], then [MUTE] + [0]

3-5. PICTURE DISTORTION ADJUSTMENT

H. CENTER ADJUSTMENT (HPOS)

1. Input Monoscope signal.
2. Activate the Service Adjustment Mode.
3. Select the HPOS item with [1] and [4].
4. Adjust the value of HPOS with [3] and [6] for the best vertical center.
5. Press [MUTING] then [0] to save into the memory.



H. SIZE ADJUSTMENT (HSIZ)

1. Input Monoscope signal.
2. Activate the Service Adjustment Mode.
3. Select HSIZ with [1] and [4].
4. Adjust with [3] and [6] for the best horizontal size.
5. Press [MUTING] then [0] to save into the memory.



V. SIZE ADJUSTMENT (VSIZ)

1. Input Monoscope signal.
2. Activate the Service Adjustment Mode.
3. Select the VSIZ item with [1] and [4].
4. Adjust value of VPOS with [3] and [6] for the best vertical center.
5. Press [MUTING] then [0] to save into the memory.



V. CENTER ADJUSTMENT (VPOS)

1. Input Monoscope signal.
2. Activate the Service Adjustment Mode.



V. LINEARITY (VLIN), S. CORRECTION (SCOR), EW PARABOLA/WIDTH (PW)(EWPW), AND EW TRAPEZIUM (EWTZ) ADJUSTMENTS

1. Input Monoscope signal.
2. Activate the Service Adjustment Mode.
3. Select VLIN, SCOR, EWPW, and EWTZ with [1] and [4].
4. Adjust with [3] and [6] for the best horizontal size.
5. Press [MUTING] then [0] to save into the memory.

VERTICAL LINEARITY (VLIN)



S. CORRECTION (SCOR)

EW PARABOLA/WIDTH (EWPW)



EW TRAPEZIUM (EWTZ)



H. PARALLELLOGRAM (HPAR), H. BOW (HBOW), UPPER CORNER PARABOLA (UCOP) AND LOWER CORNER PARABOLA (LCOP) ADJUSTMENTS

1. Input Monoscope signal.
2. Activate the Service Adjustment Mode.
3. Select HPAR, HBOW, UCOP, and LCOP with [1] and [4].
4. Adjust with [3] and [6] for the best picture.
5. Press [MUTING] then [0] to save into the memory.

HORIZONTAL PARALLELOGRAM (HPAR)



HORIZONTAL BOW (HBOW)



EW UPPER CORNER PARABOLA (UCOP)



EW LOWER CORNER PARABOLA (LCOP)



SECTION 4
DIAGRAMS

4-1. BLOCK DIAGRAM

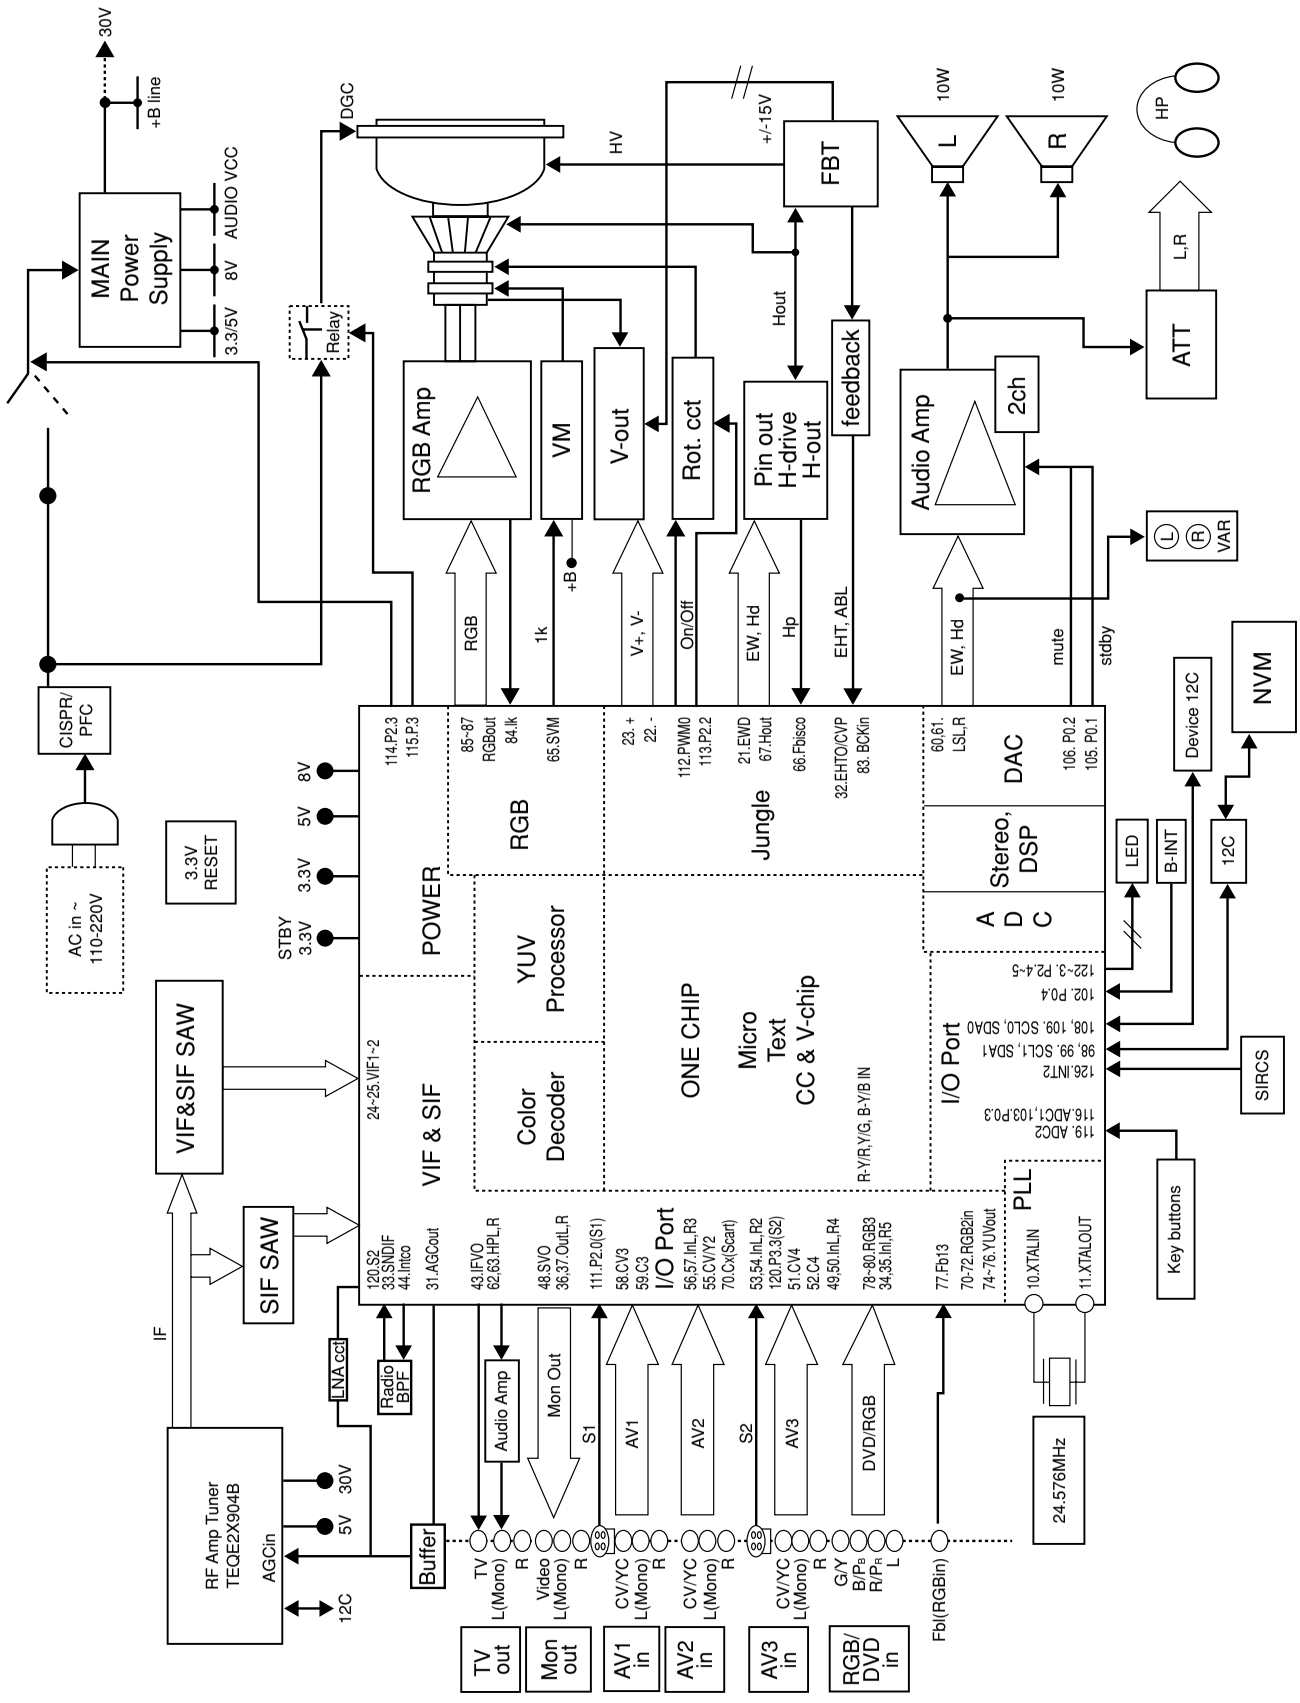

4-2. CIRCUIT BOARDS LOCATION

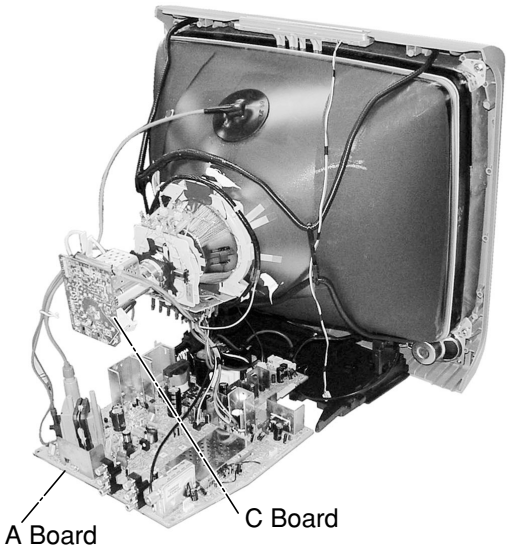

4-3. SCHEMATIC DIAGRAM INFORMATION

Note:

- All capacitors are in µF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
  kΩ = 1000Ω, MΩ = 1000kΩ
- Indication of resistance which does not have rating electrical power is as follows.

  Pitch: 5 mm
  Rating electrical power 1/4W (CHIP: 1/10W)

- : nonflammable resistor.
- : fusible resistor.
- △ : internal component.
- ▭ : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Readings are taken with a color-bar signal input.**
  no mark : Common
  ( ) : PAL
  [ ] : NTSC 3.58
- **Readings are taken with a 10 MΩ digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltage are in Volt.**
- **✻ : Cannot be measured.**
- **Circled numbers are waveform references.**
- **▬▬ : B +bus.**
- **▪ ▪ ▪ : B –bus.**
- **⇨ : signal path.**

Note: The reference number which starts with Wxxx (eg: W003) indicates a wire to wire connection.

Note: Components marked as XX are not fitted on this model.

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: ✻	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: "A" board schematic diagram is divided into 7 blocks. Each block is named by its function and block "number". eg: Processor (Block 001)
Joint connection between boards can be identified using the block number followed by the grid's guide.
eg: -<PWR-OFF-MUTE
002 : 4E
Meaning: Block 001 joint "PWR-OFF MUTE" is connected to Block 002 joint "PWR-OFF MUTE" located at grid 4E.

4-3-1. C Board Schematic Diagram

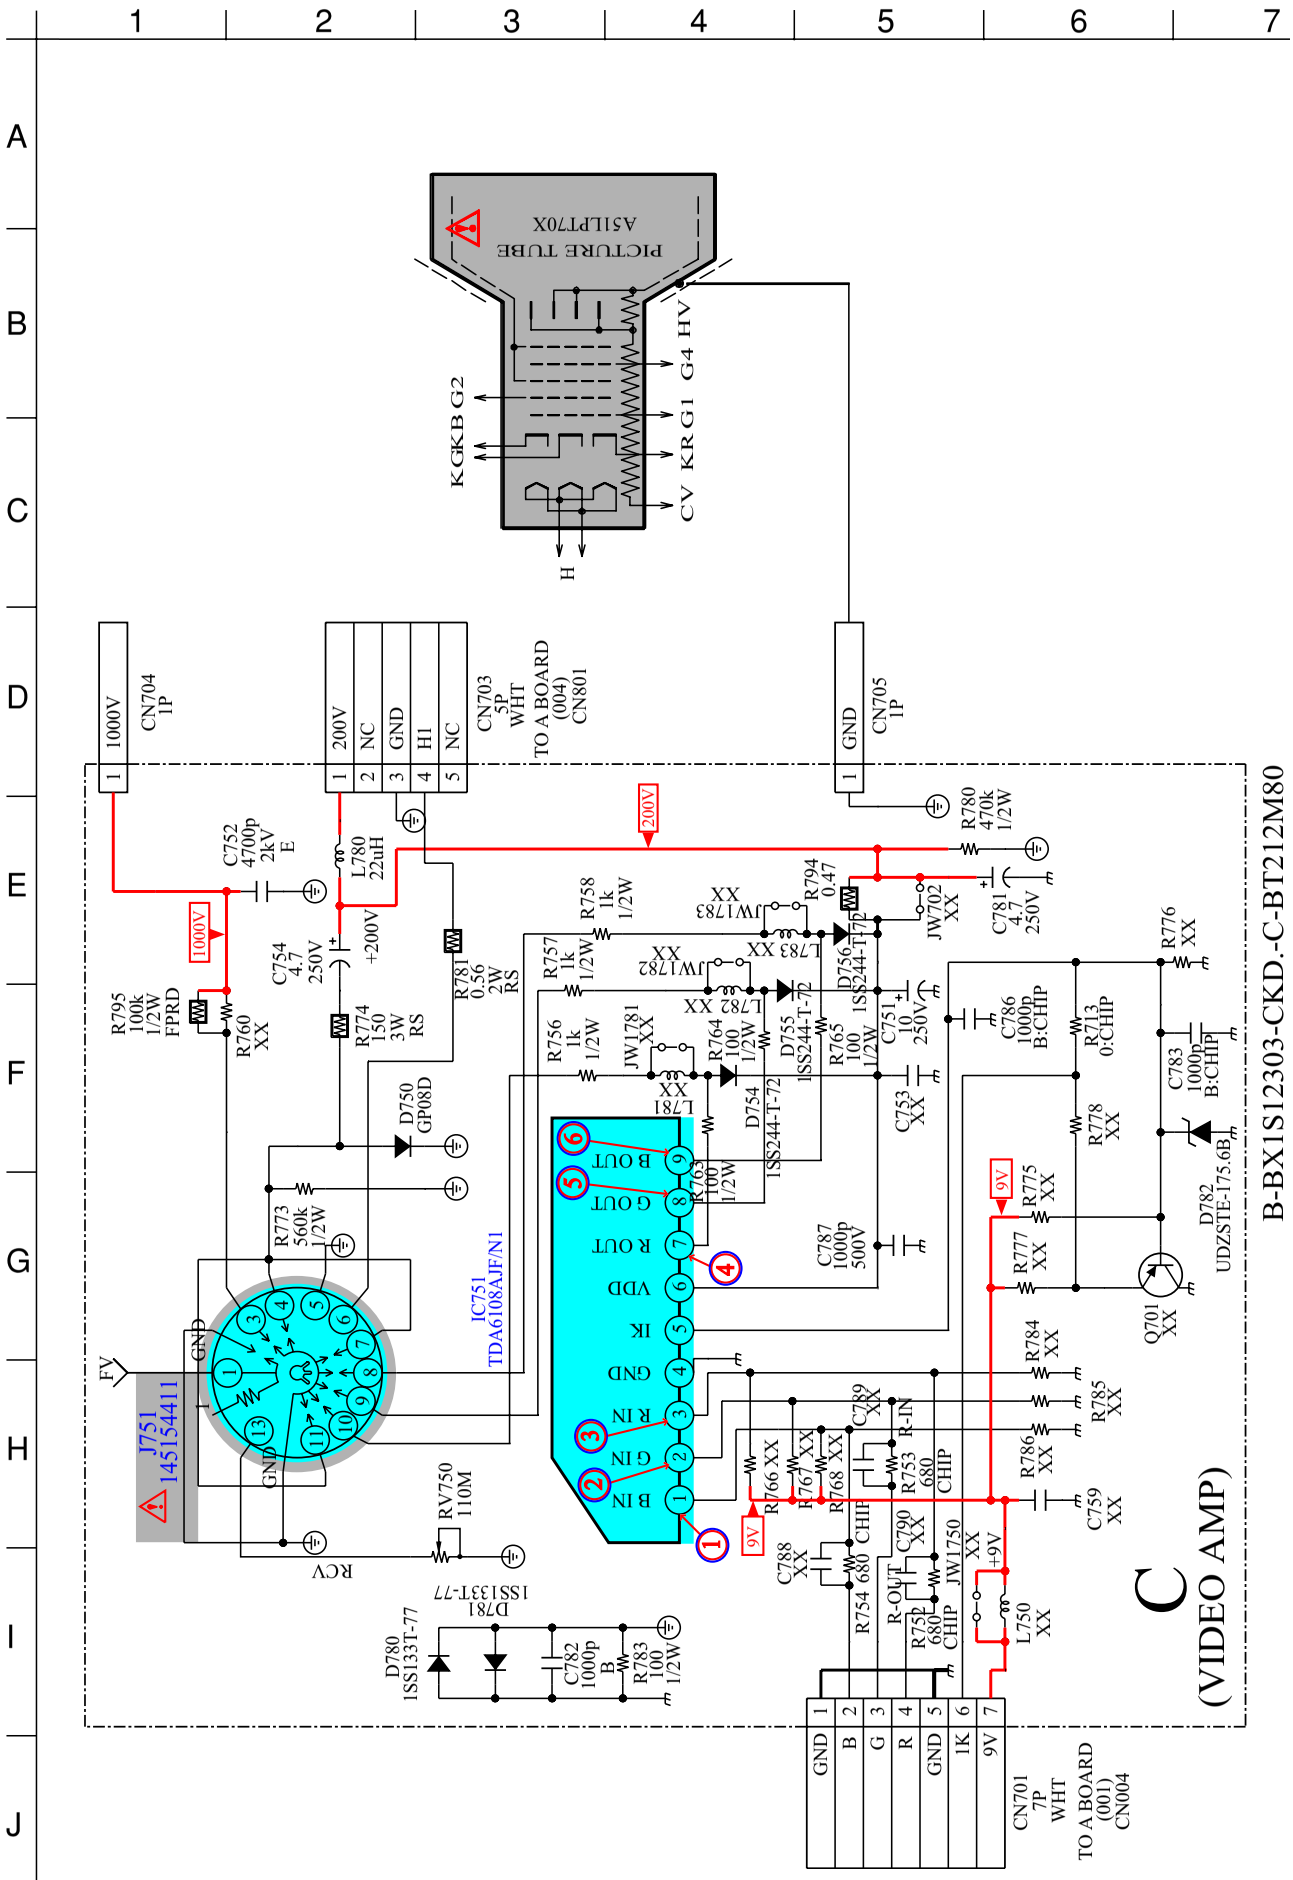

4-3-2. A Board — Processor (Block 001)

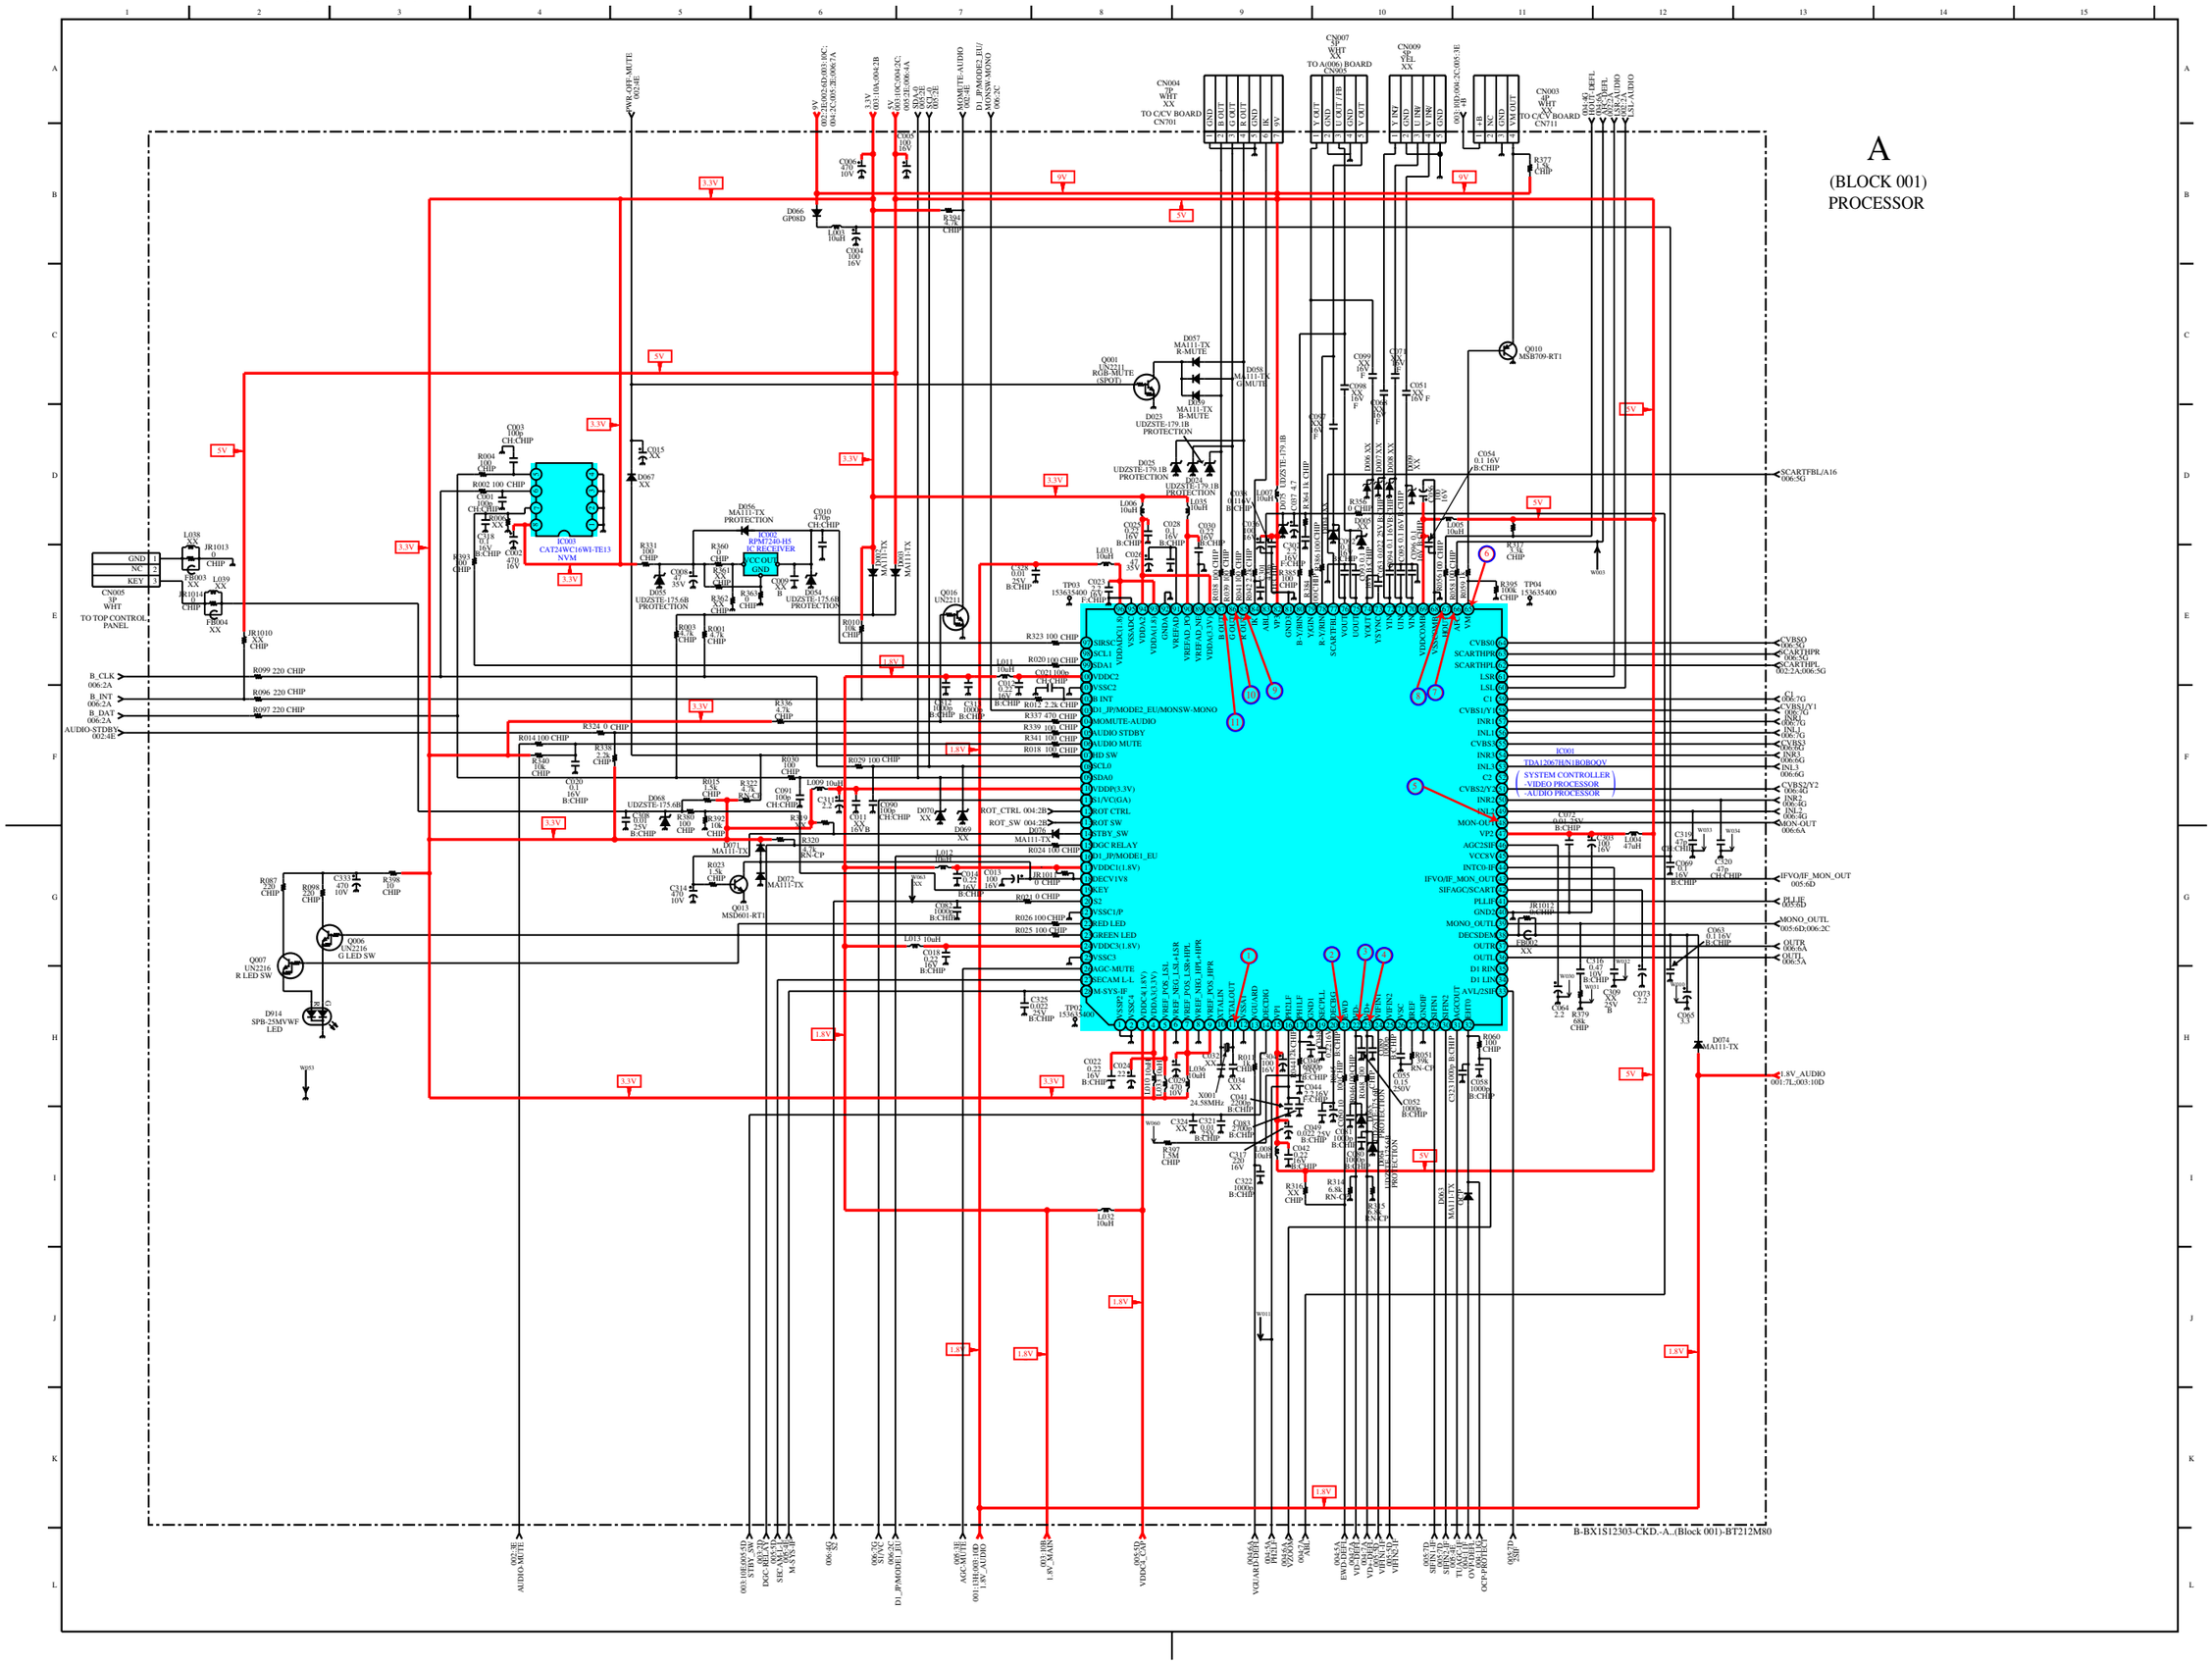

4-3-3. A Board — Audio (Block 002)

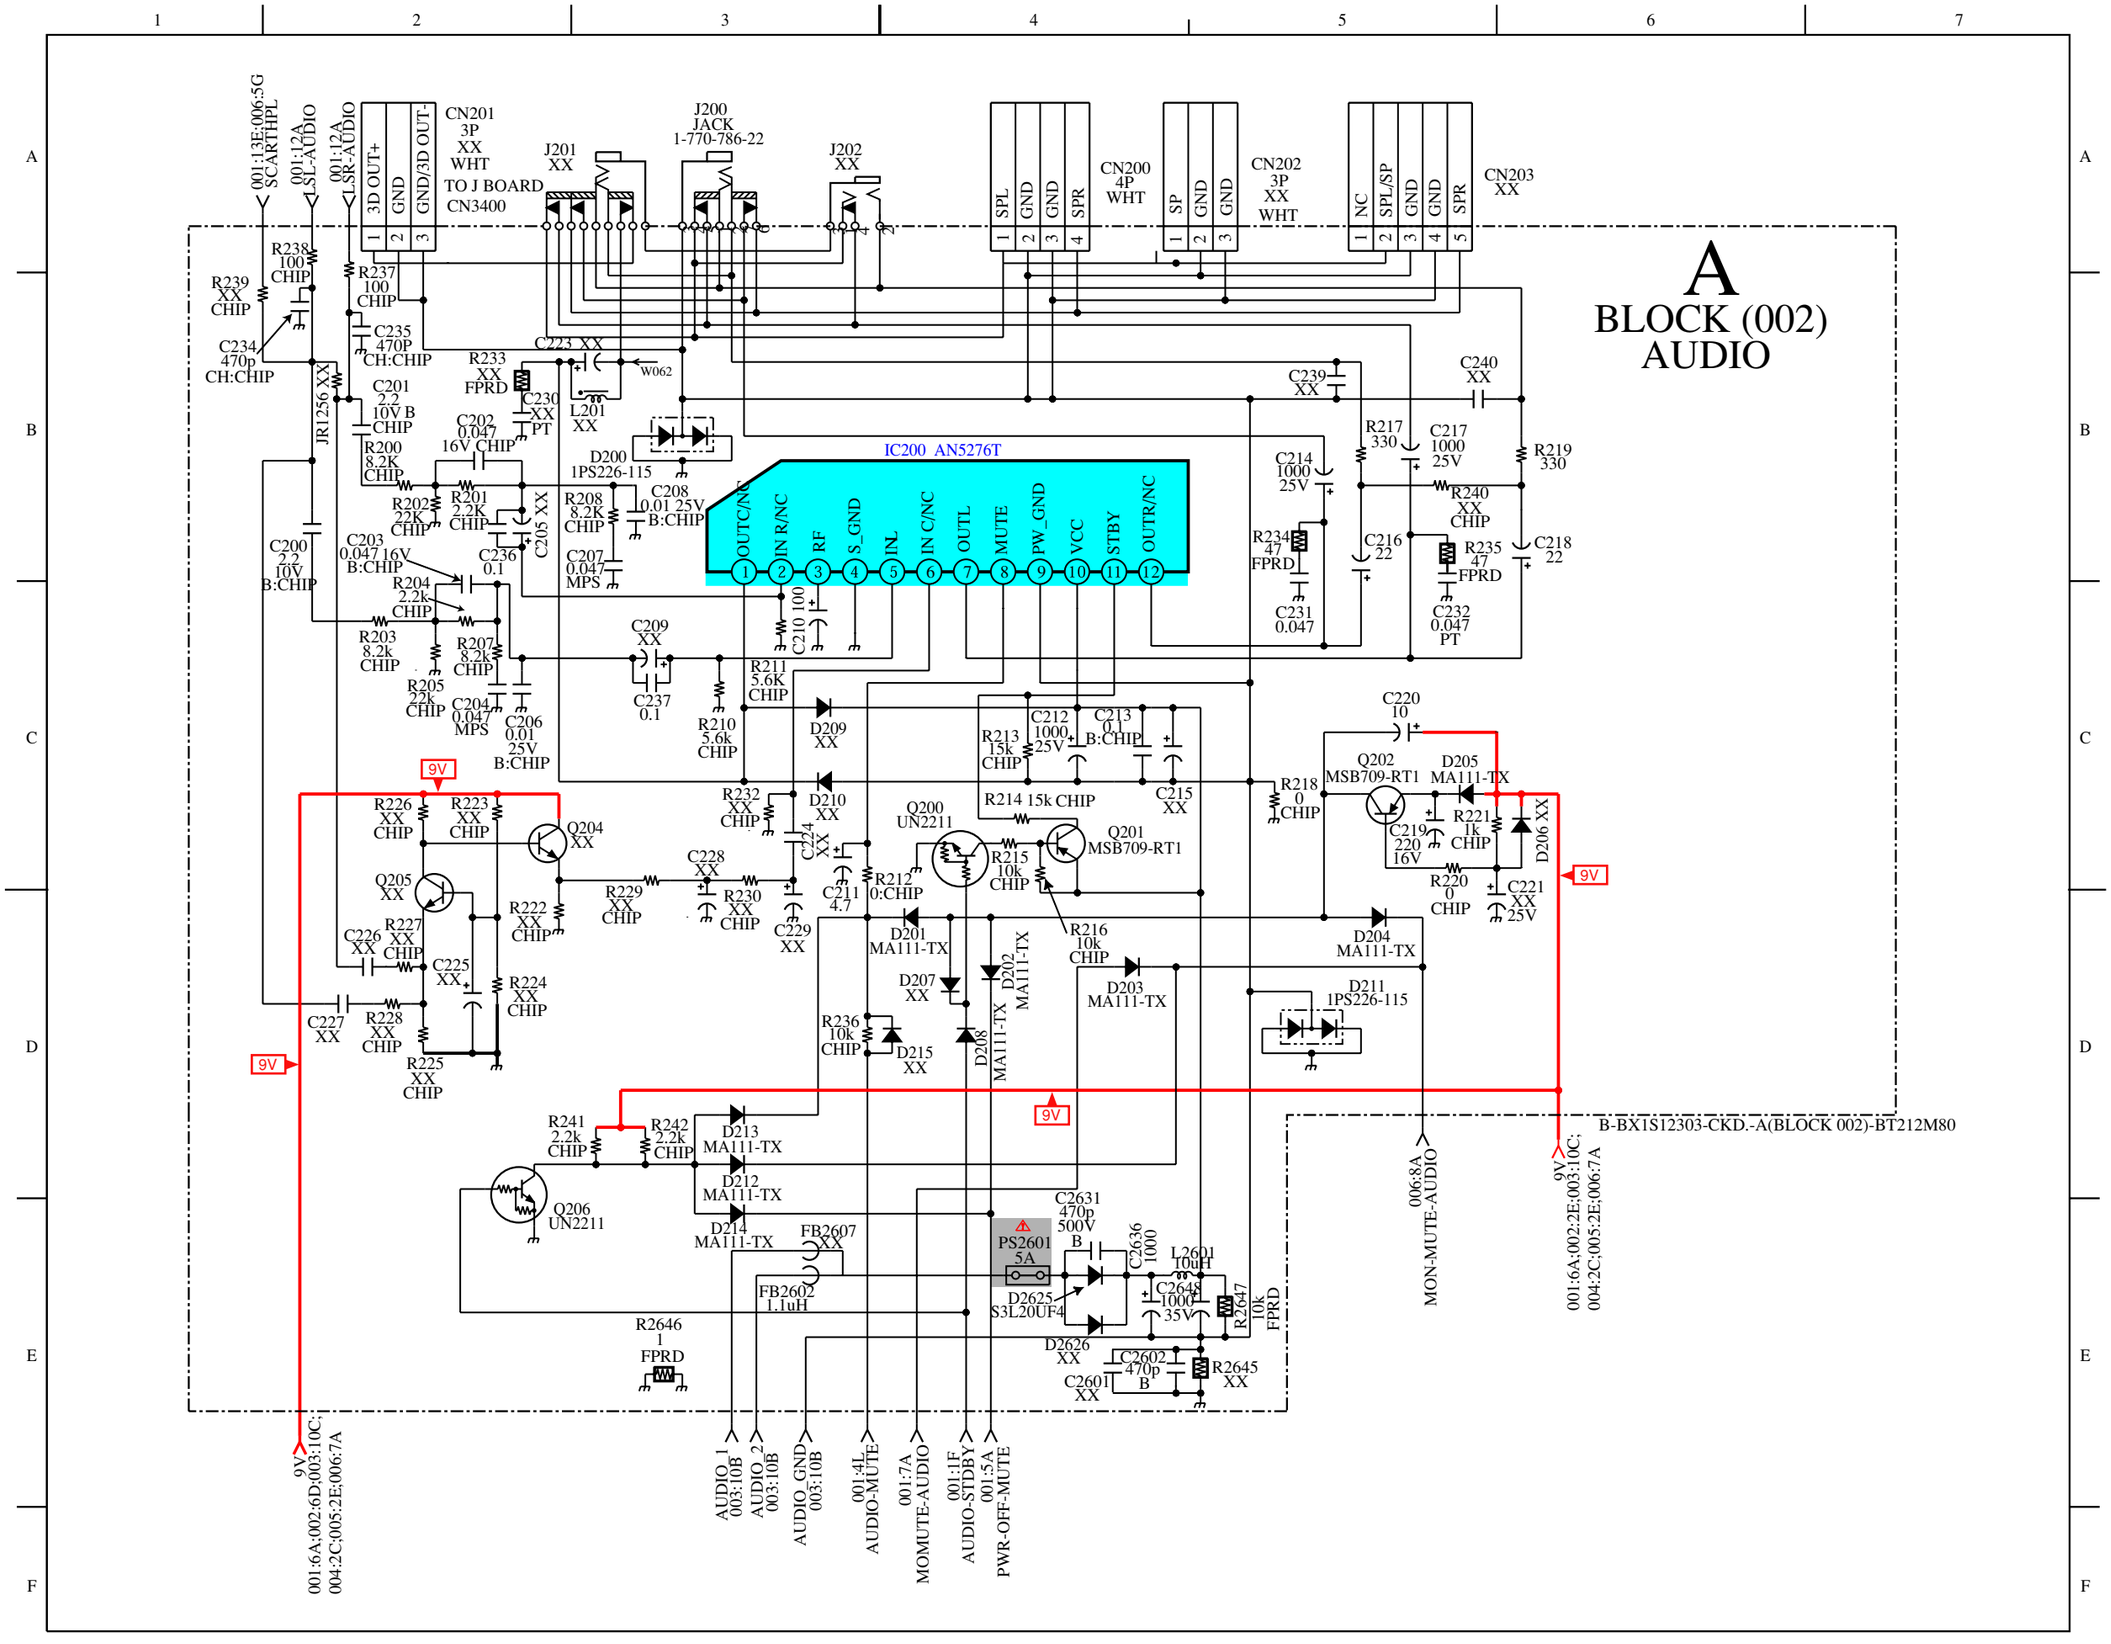

4-3-4. A Board — Power Supply (Block 003)

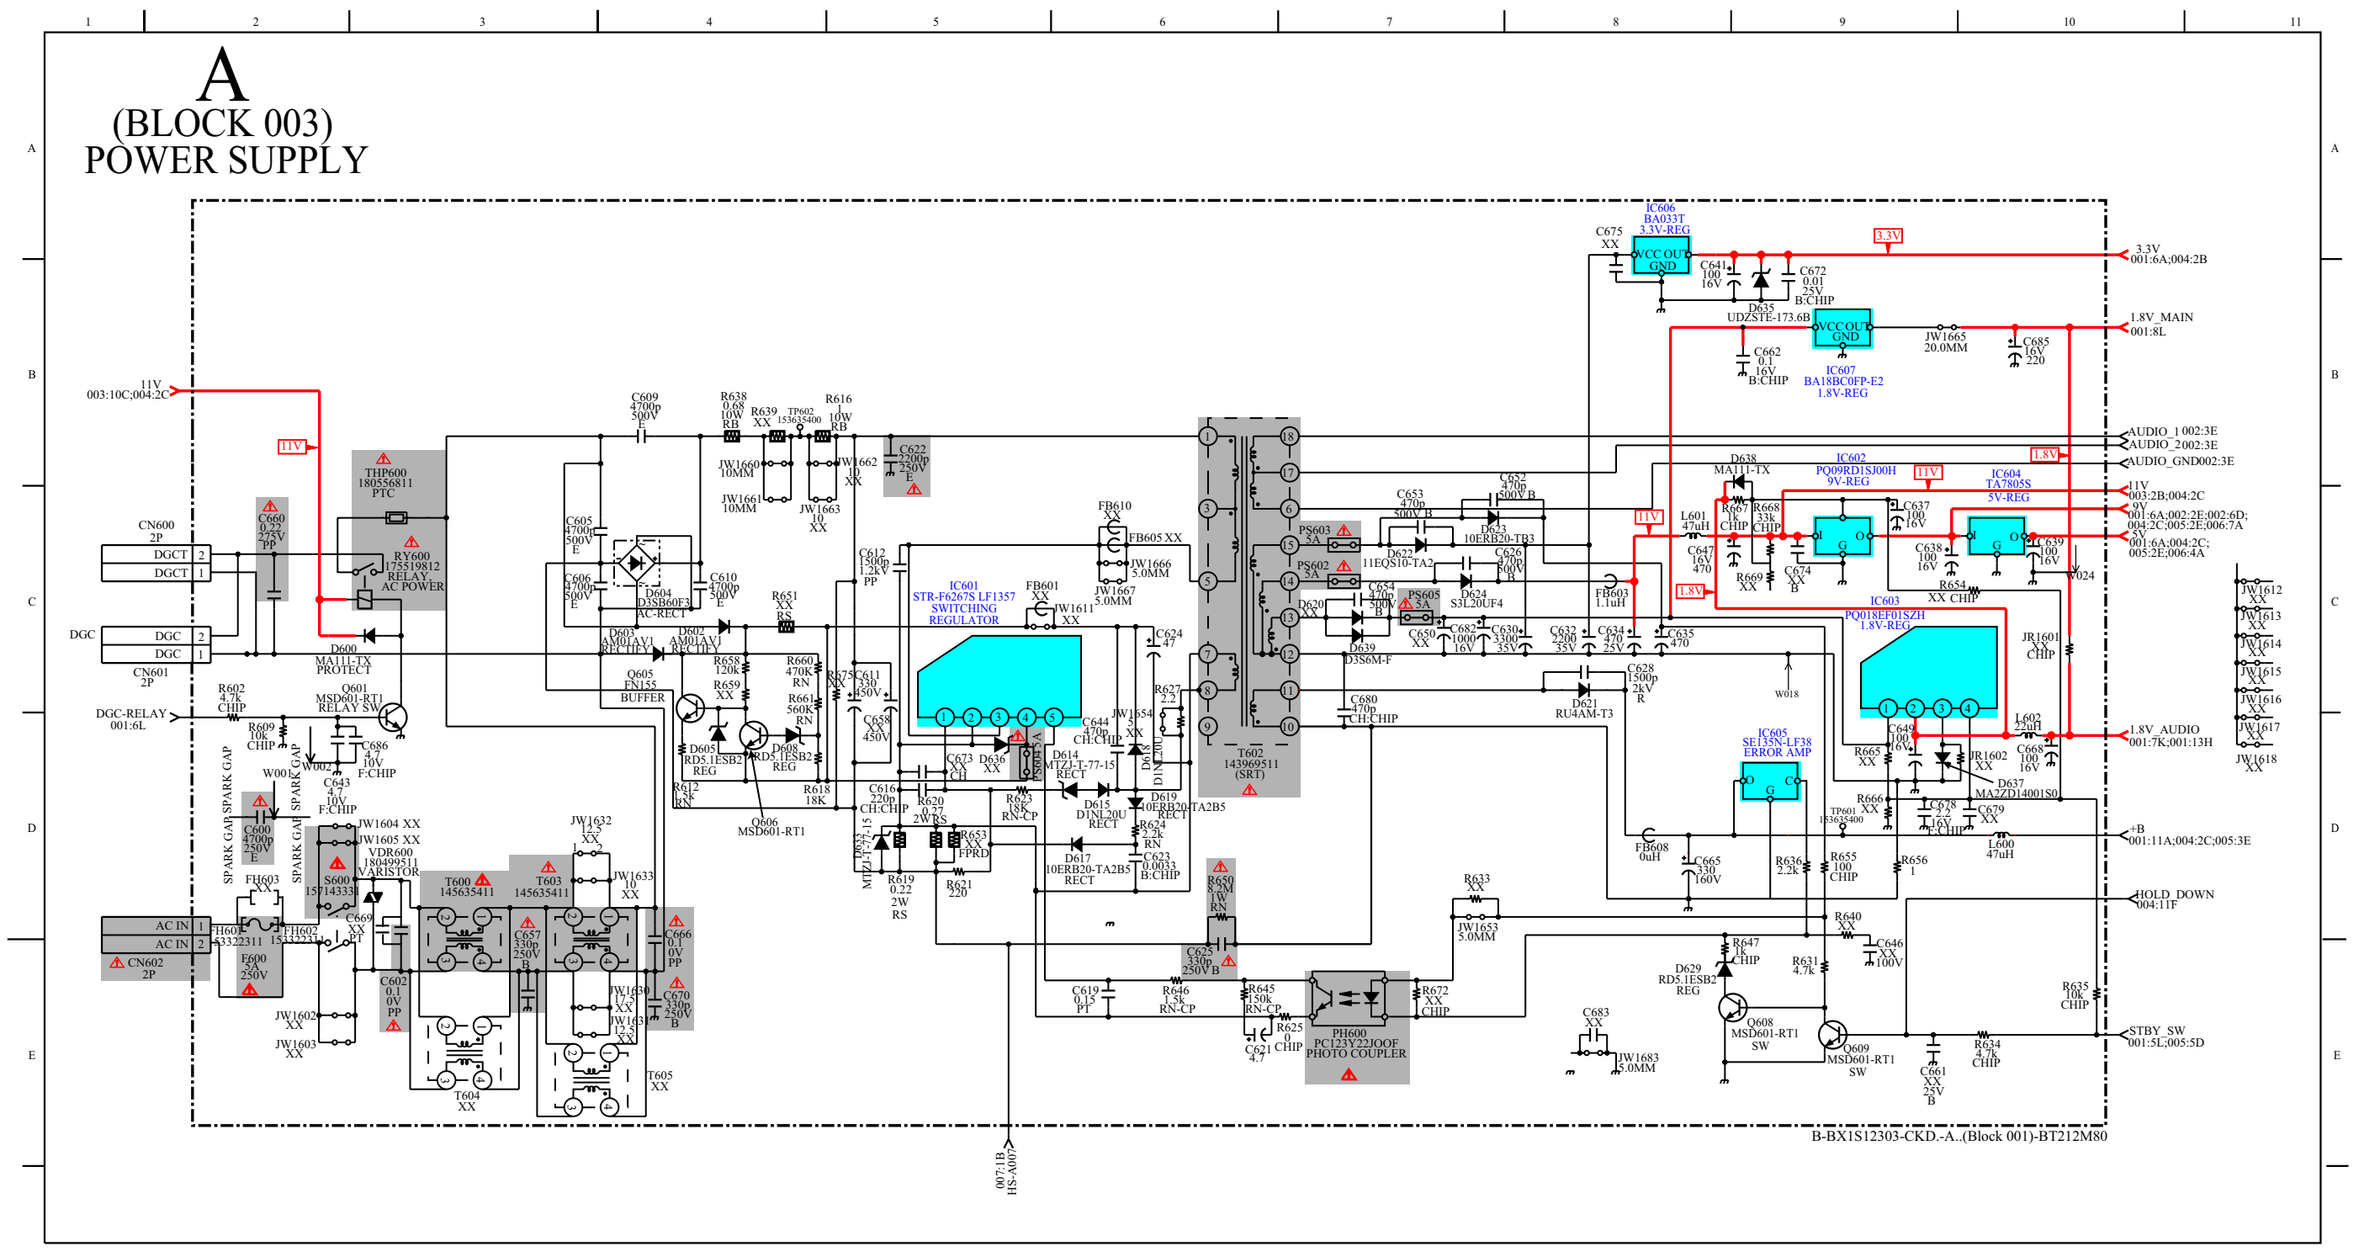

4-3-5. A Board — Deflection (Block 004)

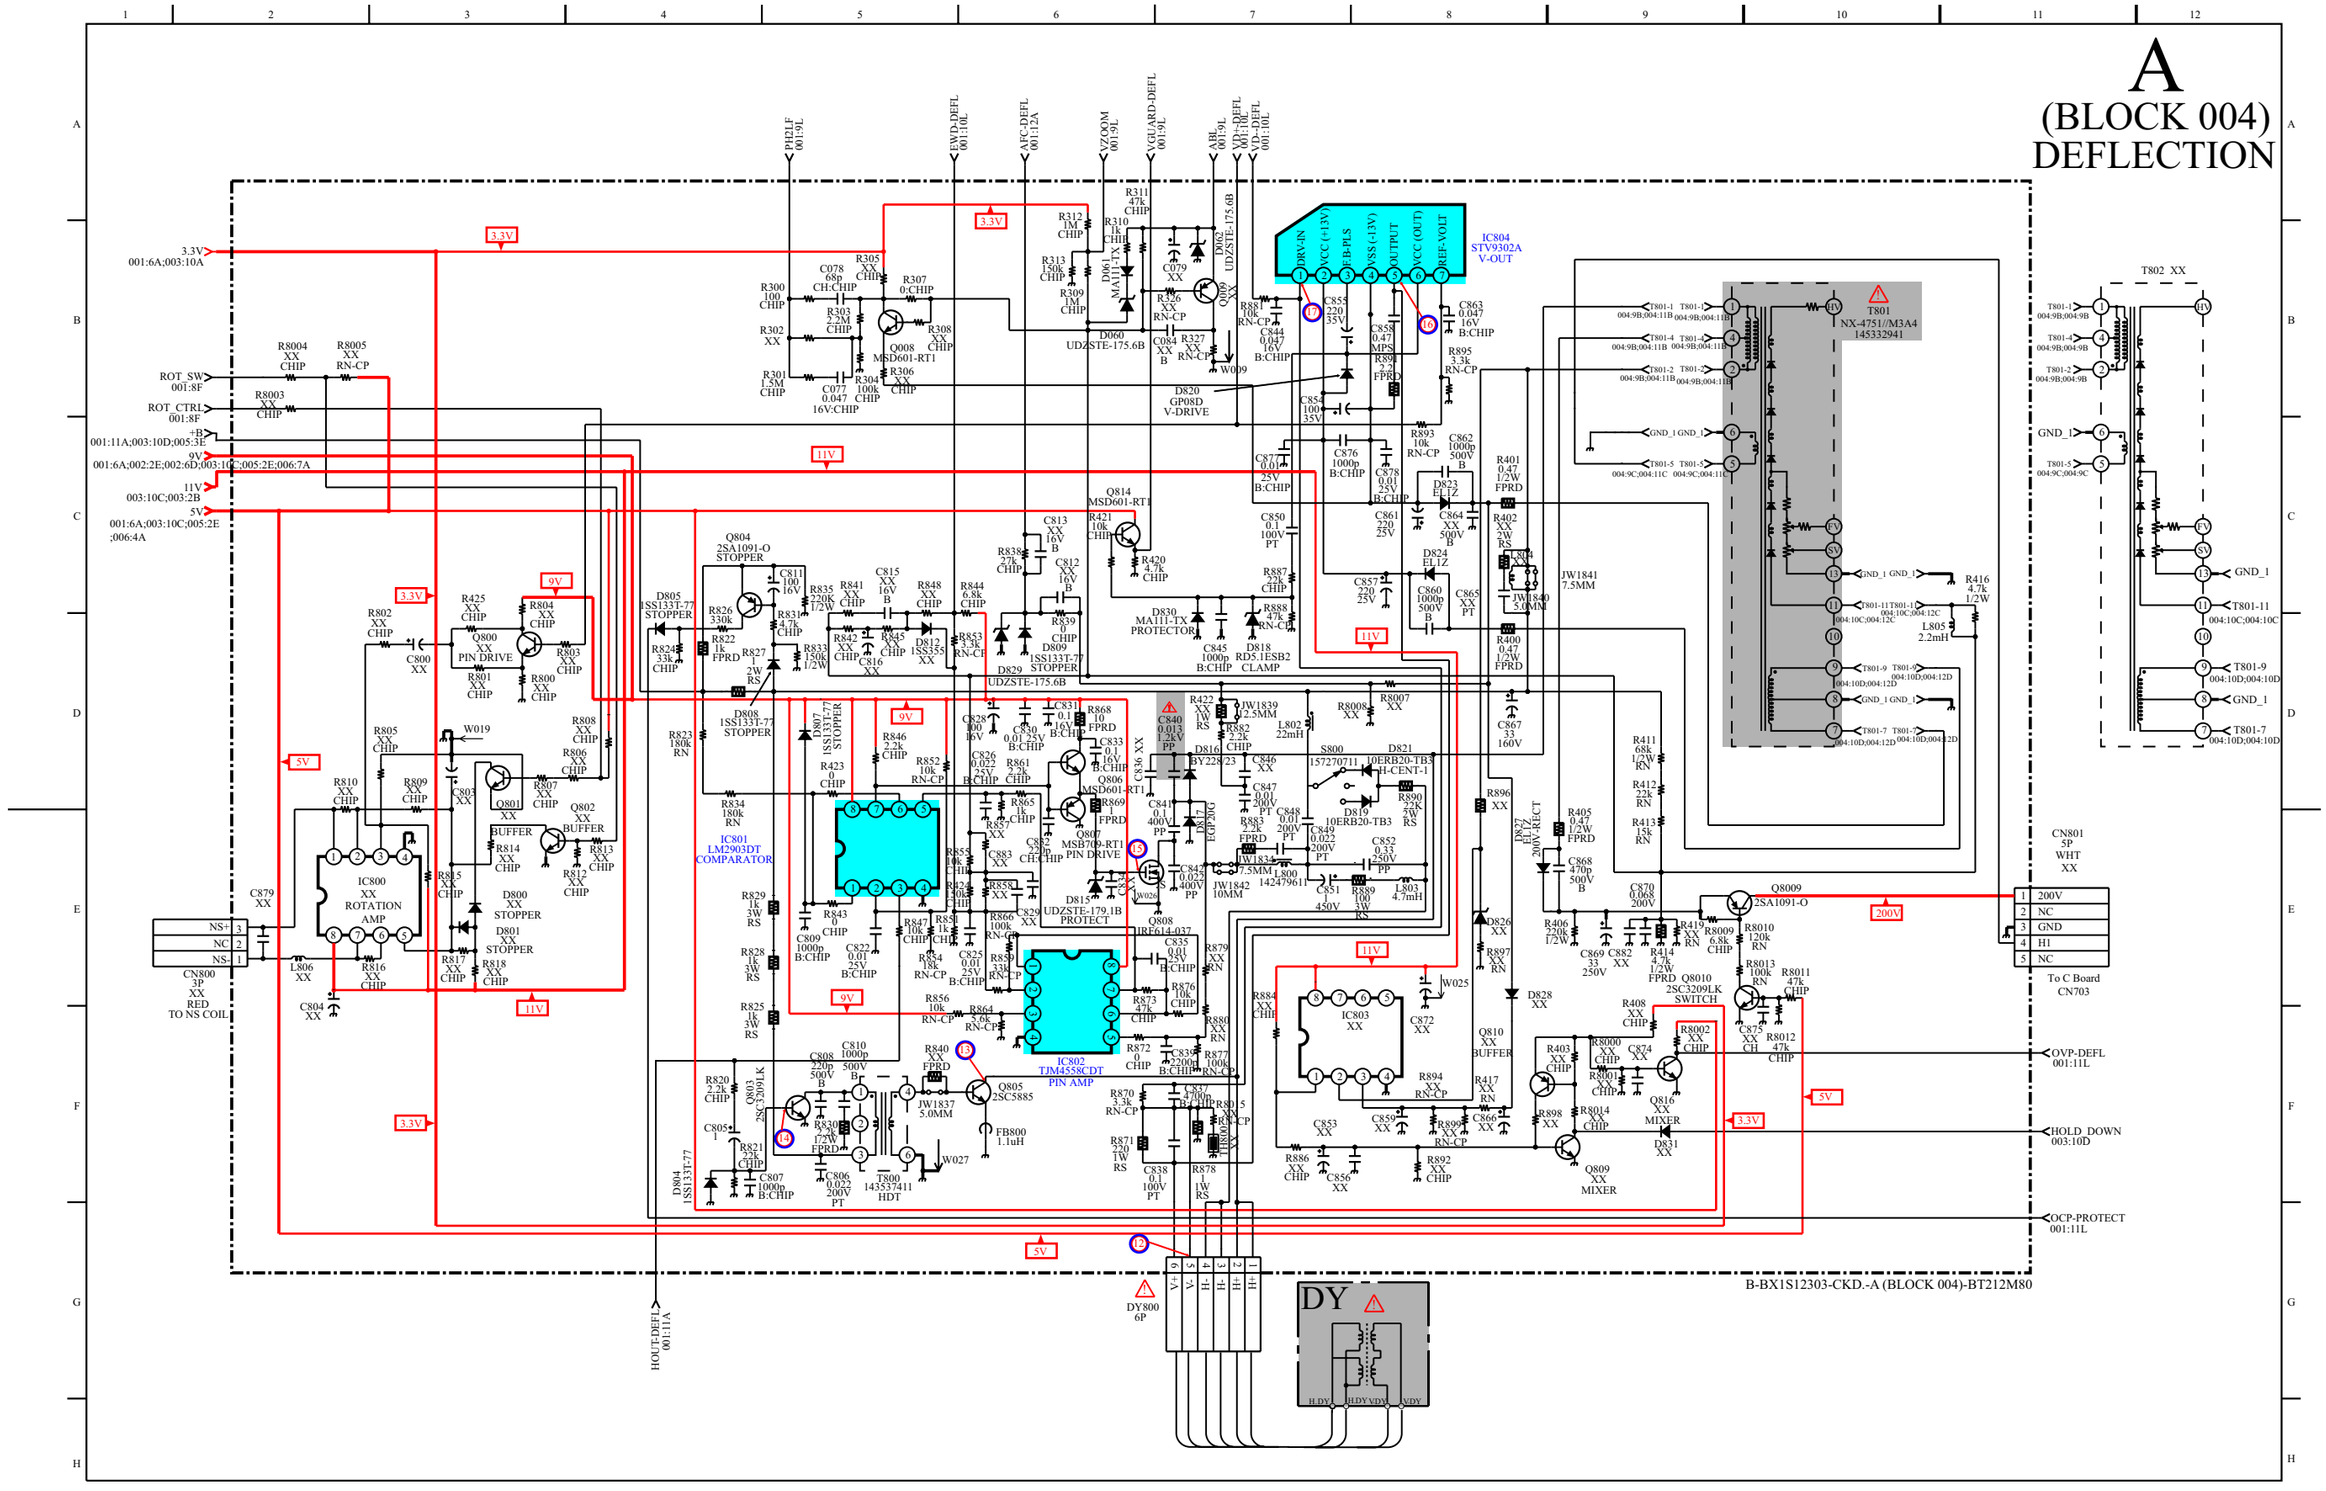

4-3-6. A Board — Tuner (Block 005)

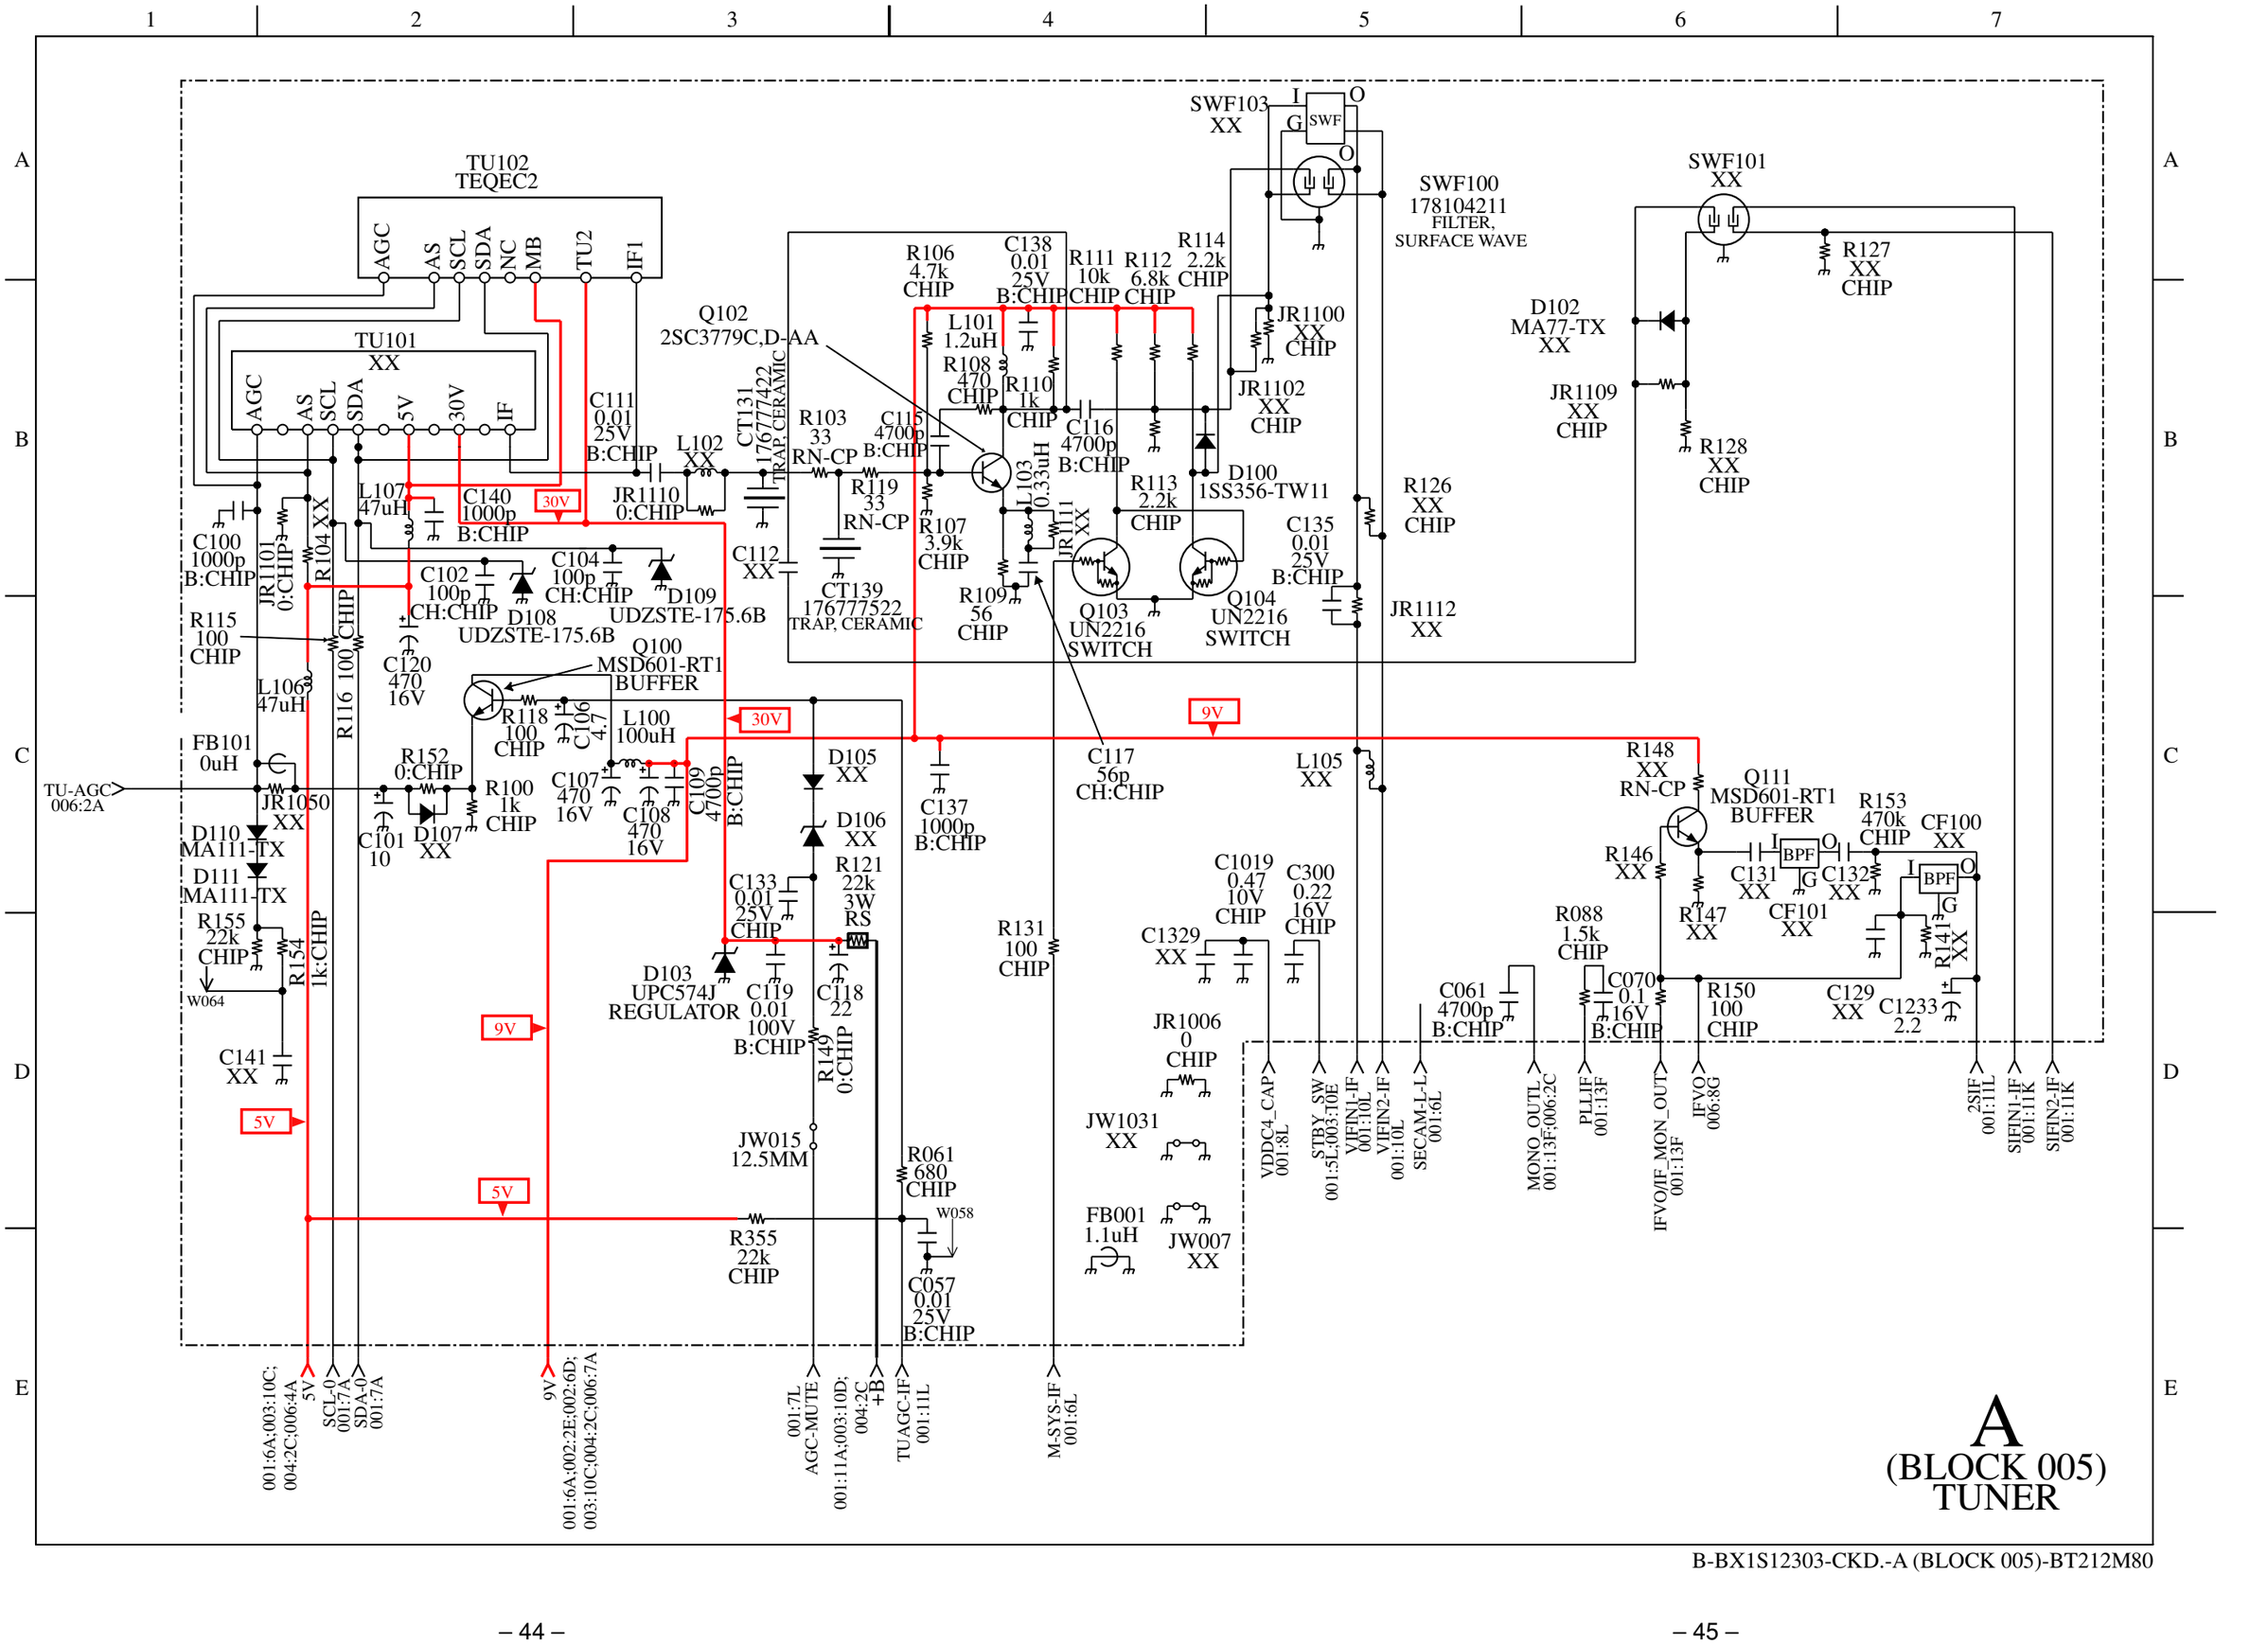

B-BX1S12303-CKD.-A (BLOCK 005)-BT212M80

4-3-7. A Board — Jack (Block 006)

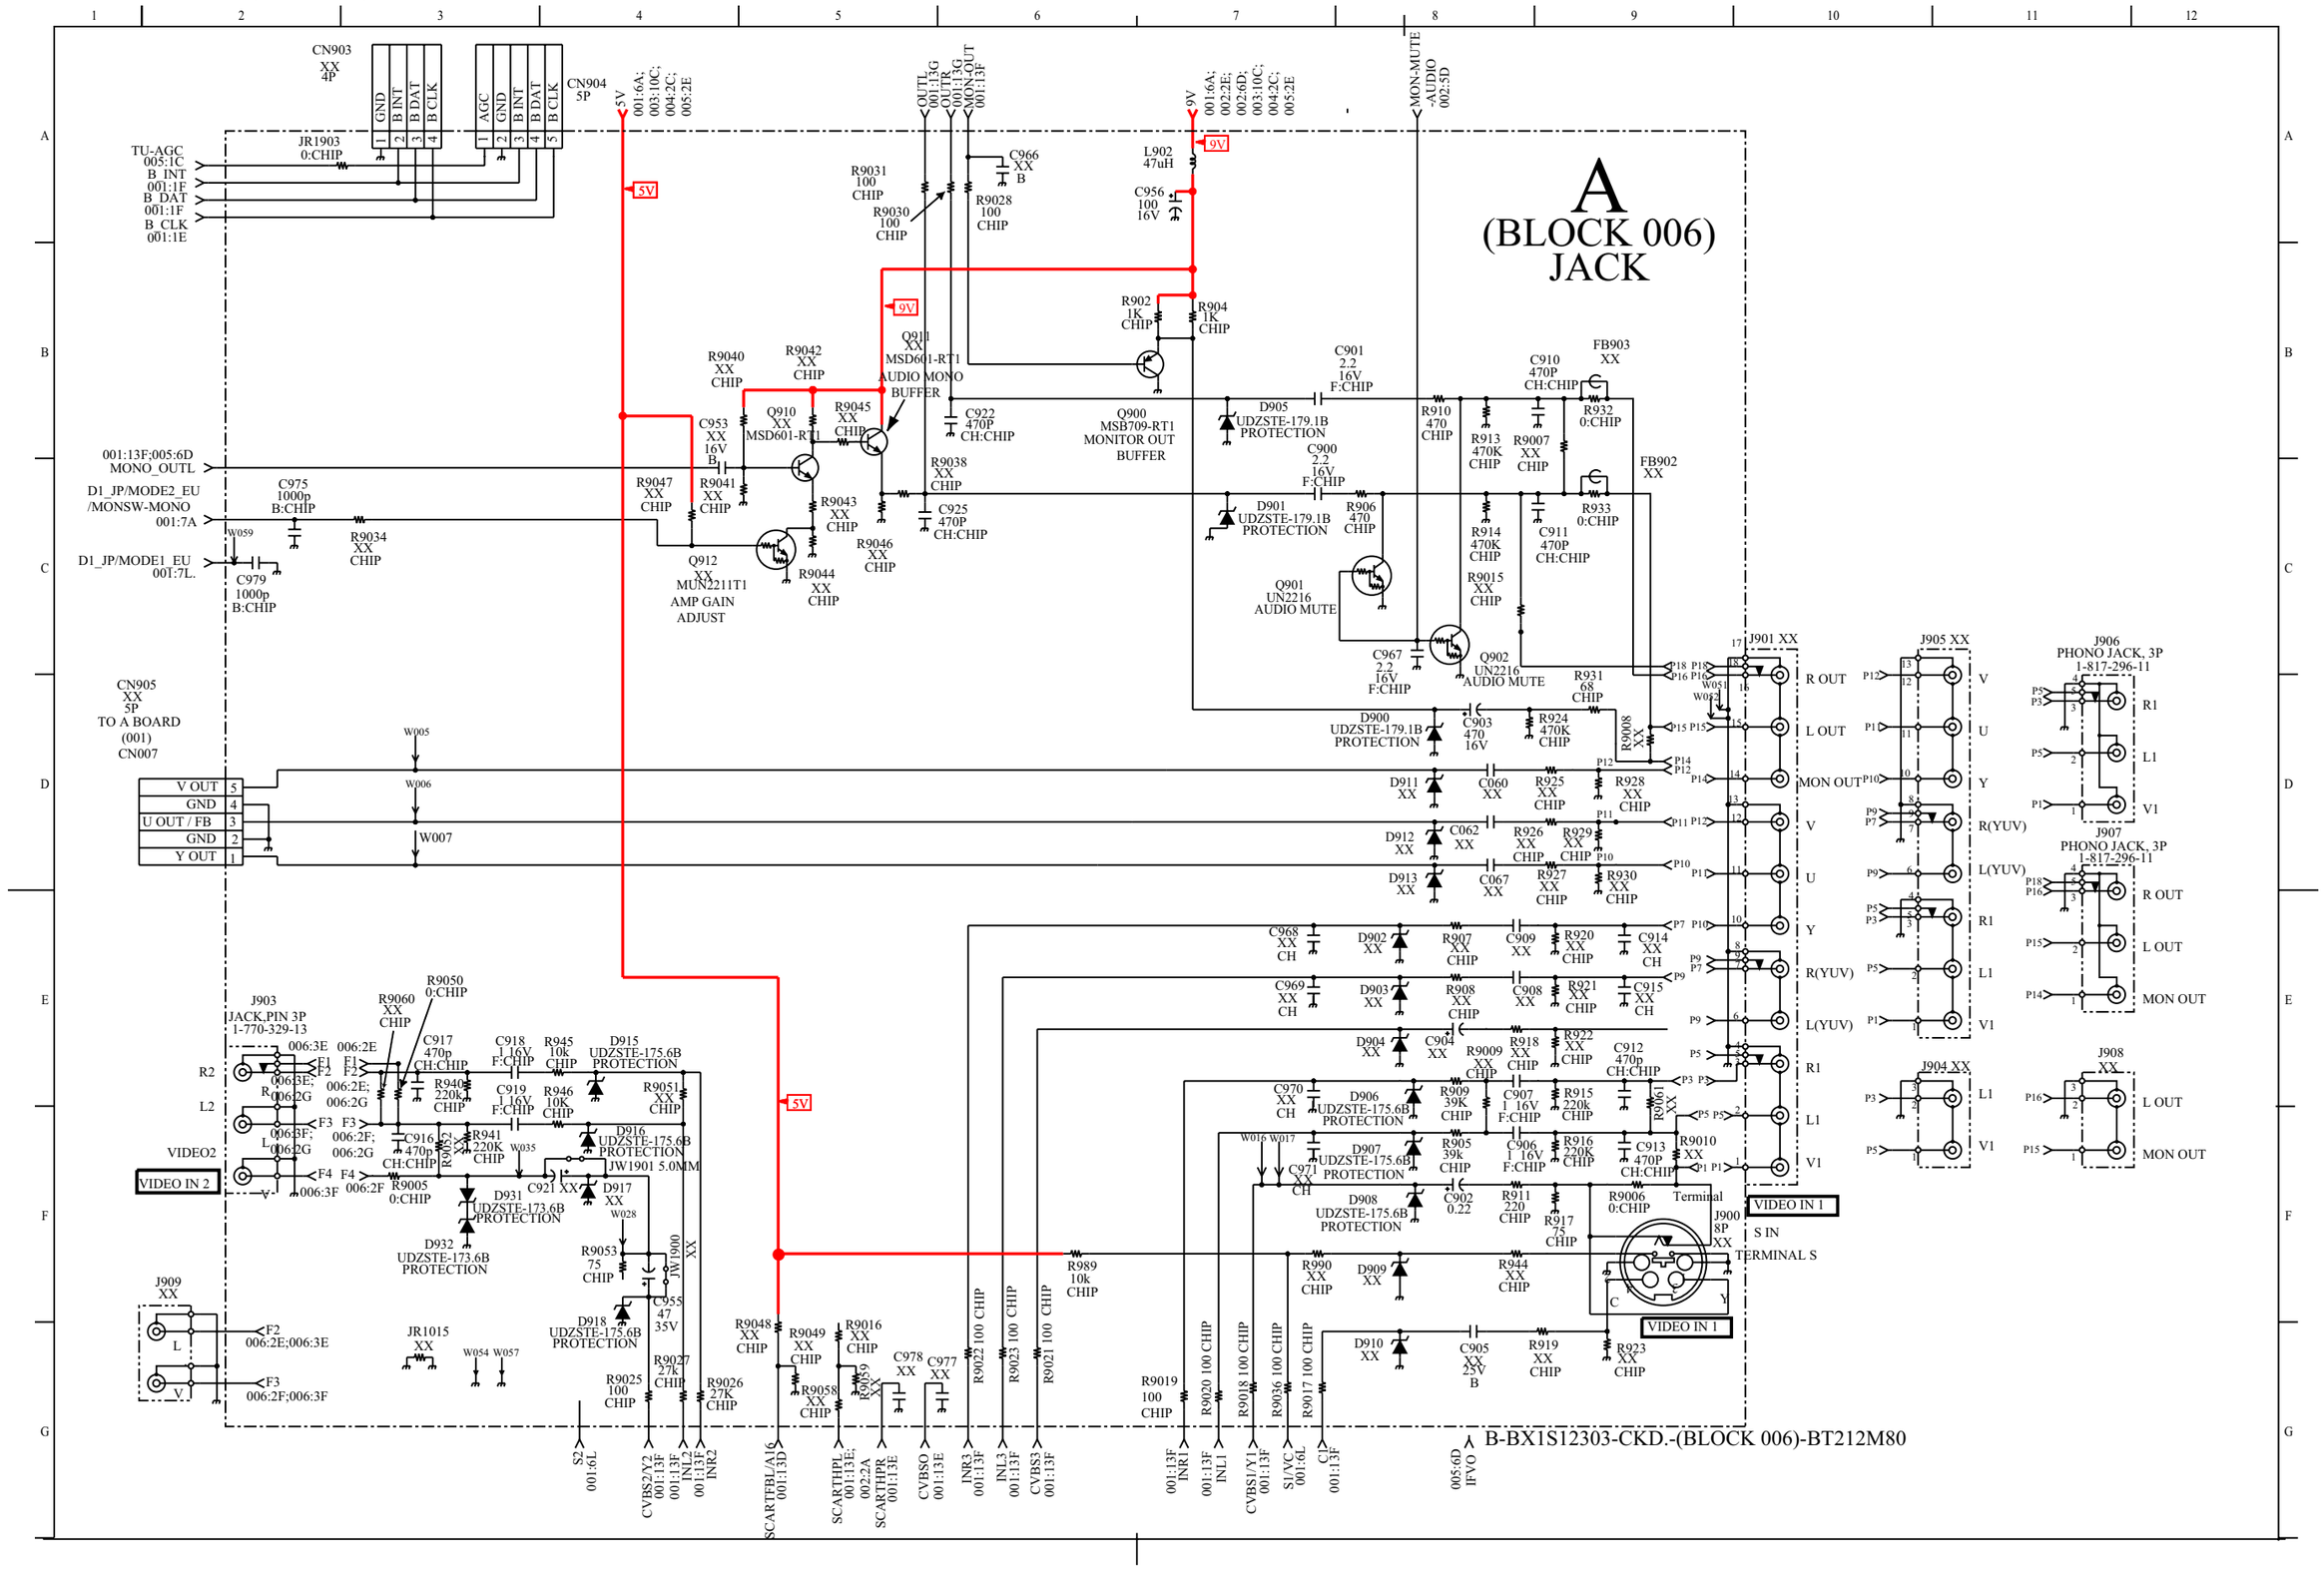

4-3-7. A Board — Heat Sink (Block 007)

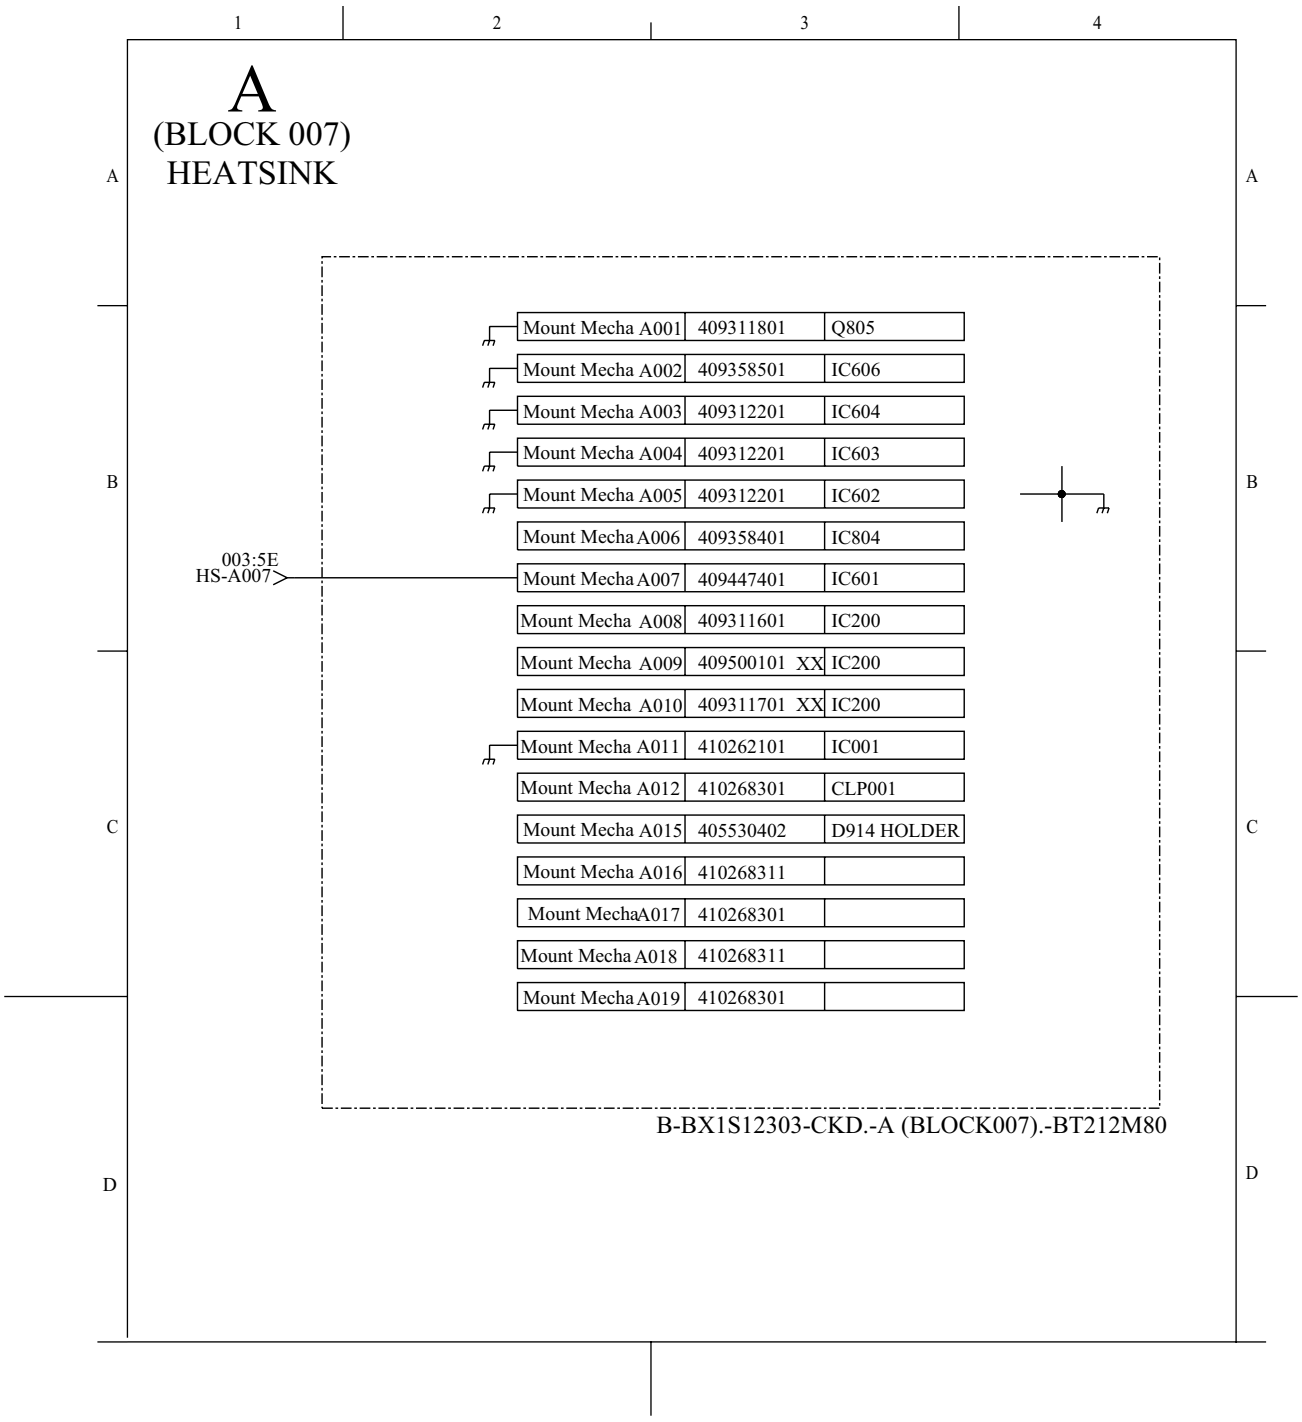

4-4. VOLTAGE MEASUREMENT AND WAVEFORM

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC001	1	0
	2	0
	3	1.7
	4	3.3
	5	3.3
	6	0
	7	3.3
	8	0
	9	(3.4)[3.3]
	10	*
	11	*
	12	(0)[1.7]
	13	(1.3)[2.5]
	14	(2.5)[5.0]
	15	(4.2)[2.0]
	16	2.0
	17	2.3
	18	(0)[1.9]
	19	2.3
	20	2.3
	21	(3.4)[4.0]
	② PAL 880.0mVp-p	
	② NTSC 1.0Vp-p	
	22	1.6
	③ 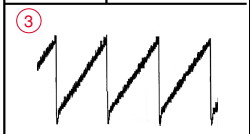 1.92Vp-p	
	23	2.0
	④ 2.0Vp-p	
	24	(2.0)[1.1]
	25	2.0
	26	2.4
	27	2.0
	28	(0.5)[0]
	29	(2.0)[0.2]
	30	0.2
	31	3.0
	32	0.4
	33	(1.1)[0]
	34	2.2
	35	2.2
	36	(2.1)[3.3]
	37	3.3
	38	(2.3)[0]
	39	2.5
	40	0
	41	(0)[2.0]
	42	(0)[2.0]
	43	(0.4)[1.6]
	44	(1.0)[0]
	45	(1.1)[8.4]
	46	0
	47	(1.3)[4.2]
	48	(1.2)[1.3]
	⑤ PAL 2.24Vp-p	
	⑤ NTSC 2.00Vp-p	
	49	(1.2)[2.2]
	50	(1.2)[2.2]
	51	(1.2)[1.3]
	52	0
	53	1.5
	54	2.0
	55	1.4
	56	(0)[2.2]
	57	2.1
	58	2.1
	59	1.5
	60	(7.4)[6.4]
	61	(7.5)[6.4]
	62	3.3
	63	3.3
	64	(1.4)[1.3]
	65	(3.3)[3.4]
	66	0.4
	⑦ 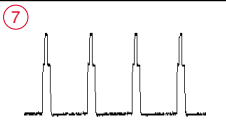 5.52Vp-p	
	67	(0.4)[1.4]
	⑧ 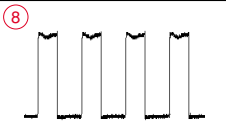 3.10Vp-p	
	68	0
	69	5.0
	70	(1.2)[1.3]
	71	(0)[1.3]
	72	1.3
	73	2.0
	74	1.7
	75	1.2
	76	0
	77	(1.3)[4.2]
	78	1.3
	79	1.3
	80	1.3
	81	0
	82	(4.2)[5.0]
	83	2.1
	84	(2.0)[3.1]
	85	1.6
	⑨ PAL 2.6Vp-p	
	⑨ NTSC 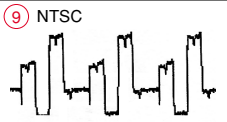 3.0Vp-p	
	86	(1.2)[1.3]
	⑩  2.0Vp-p	
	87	2.0
	⑪ PAL  2.4Vp-p	
	⑪ NTSC 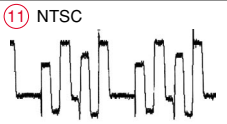 2.6Vp-p	
	88	3.3
	89	0
	90	3.3
	91	1.6
	92	0
	93	1.7
	94	3.3
	95	0
	96	(0.6)[1.7]
	97	3.1
	98	(0.7)[0.4]
	99	(3.3)[0.3]
	100	(1.4)[1.7]
	101	0
	102	3.3
	103	0.2
	104	(2.3)[2.4]
	105	2.7
	106	(0.7)[0.2]
	107	3.3
	108	(3.1)[4.2]
	109	4.0
	110	3.3
	111	4.2
	112	0.6
	113	(0.5)[0.2]
	114	0.4
	115	0.3
	116	(0.6)[0.3]
	117	2.0
	118	0
	119	(0.1)[0.4]
	120	4.1
	121	0
	122	0
	123	3.3

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
	124	1.7
	125	0
	126	3.3
	127	(0.5)[3.1]
	128	(0)[3.2]
IC002	VCC	3.3
	OUT	3.1
	GRN	0
IC003	1	0
	2	0
	3	0
	4	0
	5	4.0
	6	4.2
	7	0
	8	3.3
IC200	1	2.0
	2	(1.3)[1.5]
	3	2.0
	4	0.0
	5	0.0
	6	(0.5)[1.6]
	7	10.1
	8	0.7
	9	0
	10	21.0
	11	10.5
	12	*
IC601	1	0.5
	2	0.5
	3	(294)[284]
	4	(3.2)[20.7]
	5	1.0
IC602	I	10.3
	G	9.1
	O	0
IC603	I	3.3
	G	0
	O	1.7
IC604	I	9.1
	G	0
	O	5.0
IC605	1	134
	2	21.2
	3	0
IC606	I	2.4
	G	0
	O	3.3
IC607	1	3.3
	2	0
	3	(3.3)[0]
	4	1.7
	5	(1.3)[0.2]
IC800	1	5.7
	2	5.0
	3	5.0
	4	0
	5	4.6
	6	4.6
	7	4.6
	8	10.3
IC801	1	2.3
	2	0.8
	3	1.5
	4	0
	5	2.7
	6	2.3
	7	6.0
	8	9.0
IC802	1	3.5
	2	3.2
	3	3.2
	4	0
	5	4.0
	6	4.0
	7	(0.5)[4.0]
	8	9.1
IC803	1	0
	2	0
	3	0
	4	0
	5	0
	6	0
	7	0
	8	0
IC804	1	0.4
	17 PAL 664.0mVp-p	
	17 NTSC 744.0mVp-p	
	2	13.6
	3	-12.0
	4	-13.0
	5	(0.2)[-14.1]
	16 51.2Vp-p	
	6	14.01
	7	0.4
PH600	1	24.0
	2	22.5
	3	0.4
	4	2.9
Q001	B	0
	C	(3.4)[1.7]
	E	0
Q006	B	3.3
	C	(1.0)[2.0]
	E	2.0
Q007	B	0
	C	3.3
	E	0.2
Q008	B	(-1.6)[-1.7]
	C	-0.3
	E	1.7
Q009	B	(1.3)[*]
	C	(1.4)[*]
	E	2.1
Q010	B	3.4
	C	0
	E	4.1
Q012	B	0.6
	C	(0.2)[0.13]
	E	0
Q013	B	0.5
	C	1.7
	E	0.1
Q014	B	0
	C	0
	E	0
Q016	B	0
	C	0
	E	0
Q100	B	3.01
	C	9.0
	E	(2.0)[2.2]
Q101	B	0
	C	9.0
	E	0.5
Q102	B	3.06
	C	(2.3)[2.1]
	E	9.0
Q103	B	3.3
	C	(3.2)[0.1]
	E	0
Q104	B	(1.3)[0.1]
	C	0
	E	0
Q105	B	(9.0)[2.0]
	C	(0.4)[1.7]
	E	0
Q106	B	*
	C	*
	E	*
Q111	B	(0.5)[-1.8]
	C	(0.7)[-1.7]
	E	(0.9)[-3.3]
Q200	B	1.9
	C	0.6
	E	0
Q201	B	20.2
	C	20.6
	E	20.6
Q202	B	9.0
	C	0.1
	E	8.9
Q204	B	0
	C	(0)[9.0]
	E	0
Q205	B	1.4
	C	*
	E	1.4
Q601	B	0.4
	C	10.3
	E	0
Q605	B	24.1
	C	(20.0)[199.0]
	E	24.0
Q606	B	*
	C	24.1
	E	21.0
Q608	B	0.2
	C	20.2
	E	0
Q609	B	0.7
	C	0.3
	E	0
Q800	B	(1.7)[0.3]
	C	(8.2)[9.0]
	E	1.1
Q801	B	0.5
	C	1.4
	E	0
Q802	B	0.3
	C	4.2
	E	0
Q803	B	(-0.4)[-4.0]
	C	5.4
	14 164.0Vp-p	
	E	-0.5
Q804	B	134
	C	0
	E	134

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
Q805	B	-9.2
	⑬ 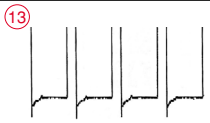 334.0Vp-p	
	C	134
	E	0.1
Q806	B	6.0
	C	9.0
	E	6.0
Q807	B	6.0
	C	0
	E	(5.0)[6.1]
Q808	S	0
	⑮  9.20Vp-p	
	G	6.0
	D	(13.2)[14.4]
Q809	B	*
	C	*
	E	*
Q810	B	(2.0)[0.6]
	C	(2.0)[0.5]
	E	(1.7)[1.9]

Ref	Pin No.	Voltage[v]
Q814	B	0.7
	C	5.0
	E	2.0
Q816	B	*
	C	(-6.0)[-2.5]
	E	0
Q900	B	1.3
	C	(0)[1.2]
	E	(0)[2.1]
Q901	B	-0.5
	C	(-4.2)[1.5]
	E	0
Q902	B	0
	C	-1.7
	E	0
Q903	B	0
	C	0
	E	0
Q904	B	0
	C	0
	E	0
Q905	B	0
	C	0
	E	0
Q906	B	0
	C	0
	E	0
Q907	B	0
	C	0
	E	0

Ref	Pin No.	Voltage[v]
Q908	B	0
	C	0
	E	0
Q909	B	0
	C	0
	E	0
Q910	B	2.26
	C	(4.3)[5.1]
	E	1.7
Q911	B	5.1
	C	(9.0)[4.9]
	E	4.5
Q912	B	0.1
	C	0.5
	E	0
Q8009	B	196
	C	199
	E	197
Q8010	B	0.5
	C	0.9
	E	0.3
DY800		
	⑫ 2.0Vp-p	

C BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC751	1	1.8
	① PAL 1.88Vp-p	
	① NTSC  2.0Vp-p	
	2	1.7
	② 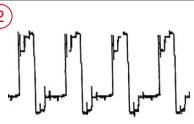 1.55Vp-p	
	3	1.8
	③ 2.0Vp-p	

Ref	Pin No.	Voltage[v]
	4	0
	5	5.1
	6	(196)[195]
	7	(137)[133]
	④ PAL 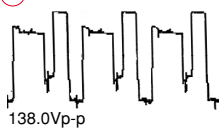 138.0Vp-p	
	④ NTSC  152.0Vp-p	
	8	152
	⑤ PAL 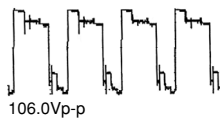 106.0Vp-p	
	⑤ NTSC 94.0Vp-p	

Ref	Pin No.	Voltage[v]
	9	(138)[136]
	⑥ PAL 126.0Vp-p	
	⑥ NTSC  142.0Vp-p	
Q701	B	(5.0)[6.0]
	C	0
	E	1.2
J751	G1-1	0.6
	G1-2	0.6
	G1-3	0
	G2	(288)[285]
	H1	0
	H2	0
	KB	(138)[137]
	KG	151.3
	KR	(137)[133]

4-5. PRINTED WIRING BOARDS AND PARTS LOCATION

PRINTED WIRING BOARDS

A [Processor, Audio, Power Supply, Deflection, Tuner, Jack]

– A Board –

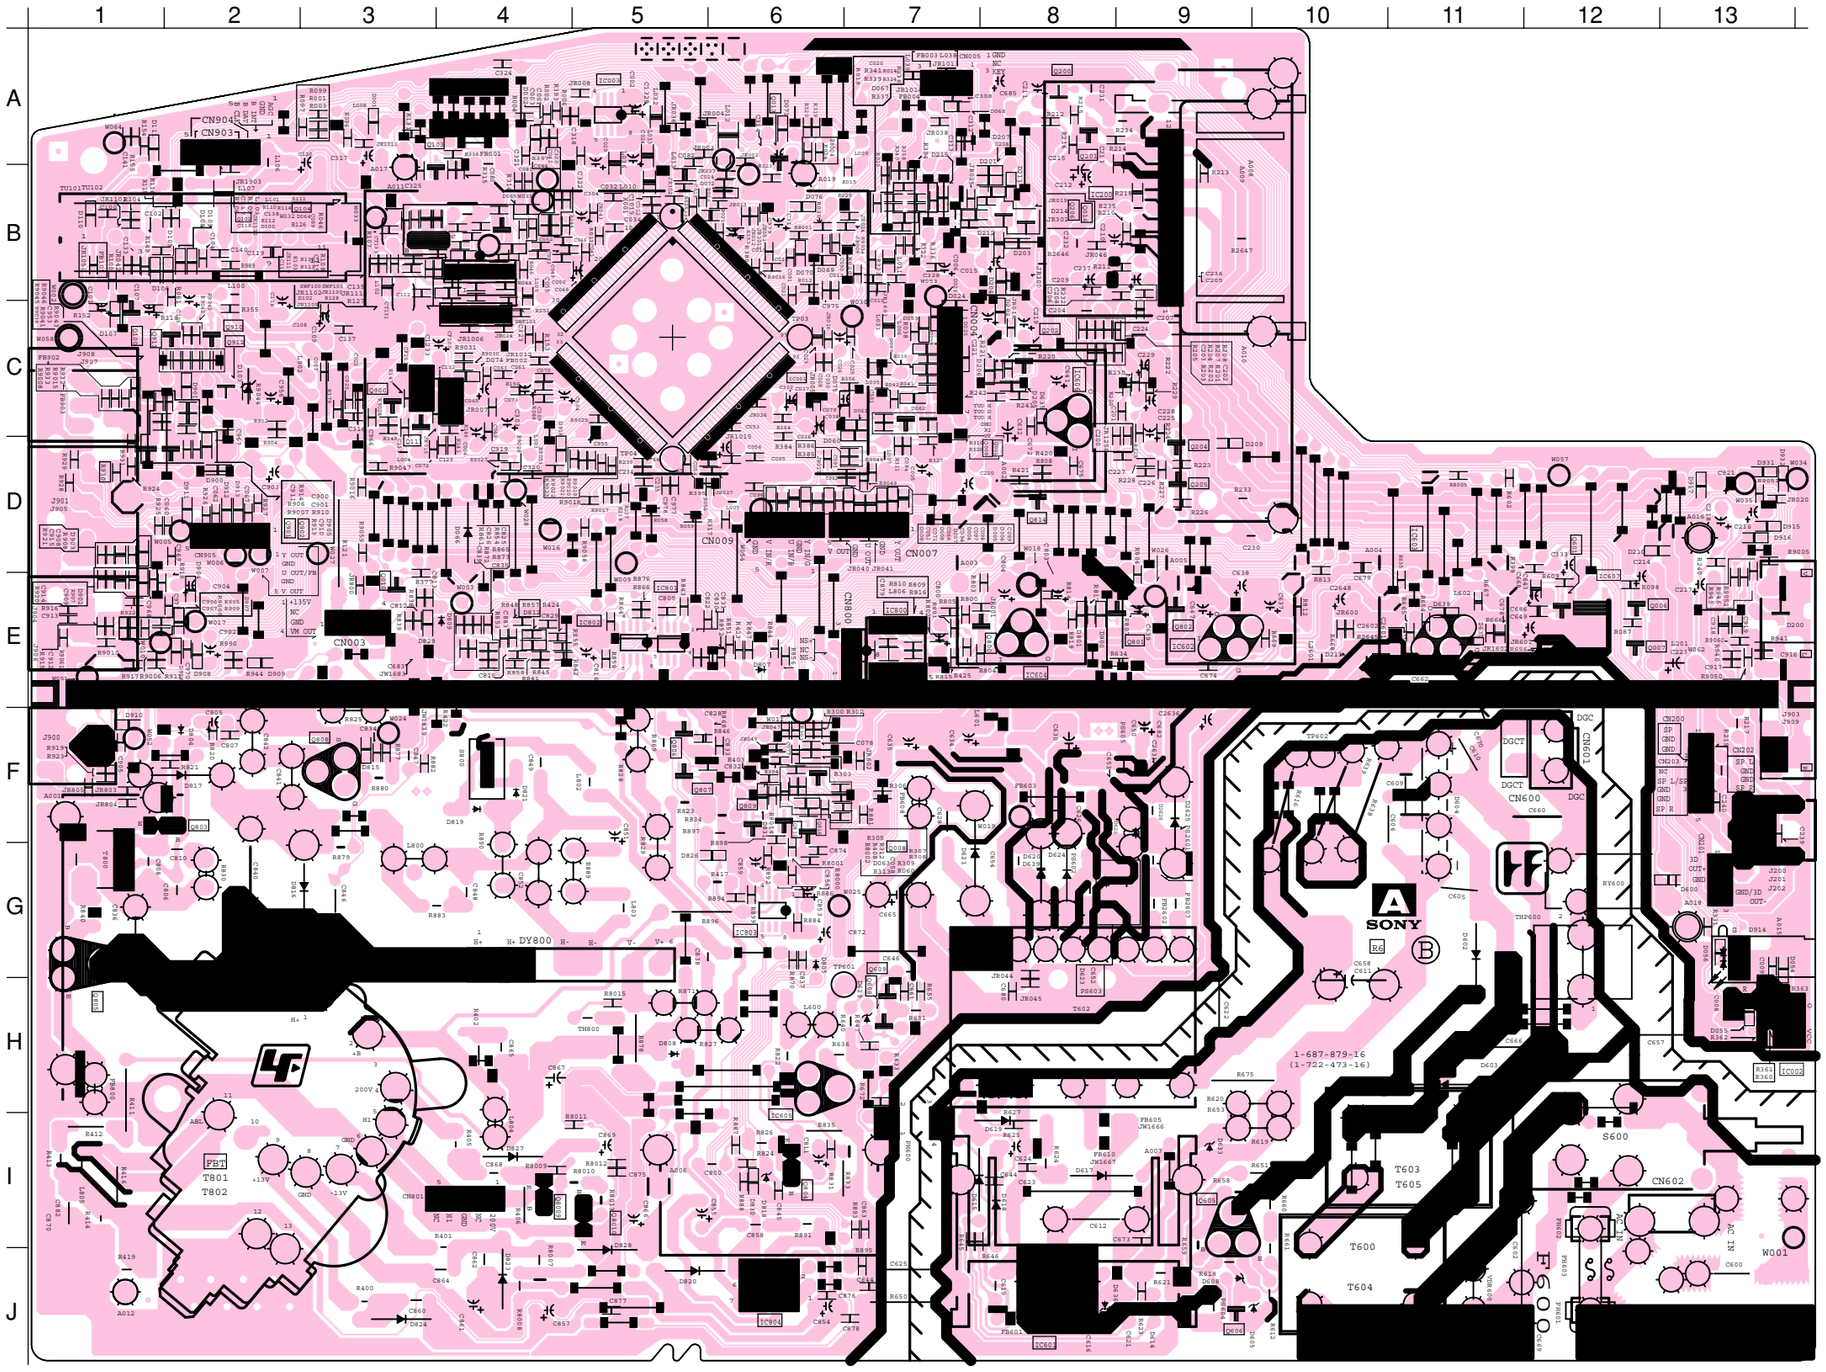

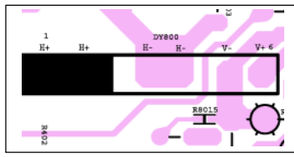

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

A BOARD

DIODE				IC	
D002	A-4	D602	D-11	IC001	C-7
D003	A-3	D603	H-11	IC002	H-13
D004	D-7	D604	F-11	IC003	A-5
D005	D-6	D608	J-9	IC200	B-9
D006	D-4	D614	J-9	IC601	J-8
D007	D-7	D615	I-7	IC602	E-9
D008	D-7	D617	I-8	IC603	D-11
D009	D-7	D618	I-7	IC604	E-8
D023	B-7	D619	I-8	IC605	I-6
D024	B-7	D620	D-8	IC606	C-9
D025	C-7	D621	G-7	IC607	E-12
D052	D-8	D623	D-8	IC800	E-7
D054	G-13	D624	D-8	IC801	E-5
D055	H-13	D629	H-7	IC802	E-5
D056	G-13	D630	I-6	IC803	G-6
D057	C-7	D633	I-9	IC804	J-6
D058	C-7	D635	C-8	**TRANSISTOR**	
D059	C-7	D636	J-9	Q001	D-8
D060	D-6	D637	E-11	Q006	E-12
D061	C-7	D638	E-11	Q007	E-12
D062	B-5	D639	G-8	Q008	G-7
D063	G-7	D801	E-8	Q009	D-8
D064	B-3	D804	F-2	Q010	E-3
D065	B-4	D805	G-6	Q013	A-6
D066	D-4	D807	E-6	Q016	B-8
D067	A-7	D808	E-8	Q100	C-1
D068	A-8	D808	H-5	Q102	B-2
D069	B-6	D809	E-4	Q103	A-4
D070	B-6	D812	E-4	Q104	B-2
D071	A-6	D815	F-3	Q111	D-4
D072	B-5	D816	G-2	Q200	A-8
D074	C-4	D817	F-2	Q201	A-8
D075	C-5	D818	I-6	Q202	C-8
D076	B-6	D819	F-4	Q204	D-9
D100	B-2	D820	J-5	Q205	D-9
D103	C-2	D821	F-4	Q206	B-8
D105	B-2	D823	J-4	Q601	D-12
D106	B-1	D824	J-3	Q605	I-9
D107	C-1	D826	G-5	Q606	J-9
D108	B-2	D827	I-4	Q608	H-7
D109	B-2	D828	I-5	Q609	G-7
D110	B-1	D829	E-3	Q800	E-8
D111	A-1	D831	F-6	Q8009	I-4
D200	E-13	D900	D-2	Q801	E-9
D201	A-8	D901	C-2	Q8010	I-5
D202	C-8	D902	E-1	Q802	E-9
D203	B-8	D903	D-1	Q803	F-2
D204	B-8	D904	D-2	Q804	I-6
D205	C-8	D905	D-3	Q805	H-1
D206	C-8	D906	E-2	Q806	F-5
D207	A-8	D907	E-2	Q807	F-5
D208	A-8	D908	E-2	Q808	F-3
D209	D-9	D909	E-2	Q809	F-6
D210	D-12	D910	F-1	Q810	F-6
D211	E-10	D911	D-2	Q814	D-8
D212	B-8	D912	D-2	Q816	F-6
D213	B-8	D913	D-2	Q900	C-3
D214	B-8	D914	G-13	Q901	D-2
D215	A-7	D915	D-13		
D2265	F-9	D916	D-13		
D2626	F-9	D917	D-13		
D600	G-13	D918	C-4		
		D931	D-13		
		D932	D-13		

PRINTED WIRING BOARDS

C [VIDEO AMP]

– C Board –

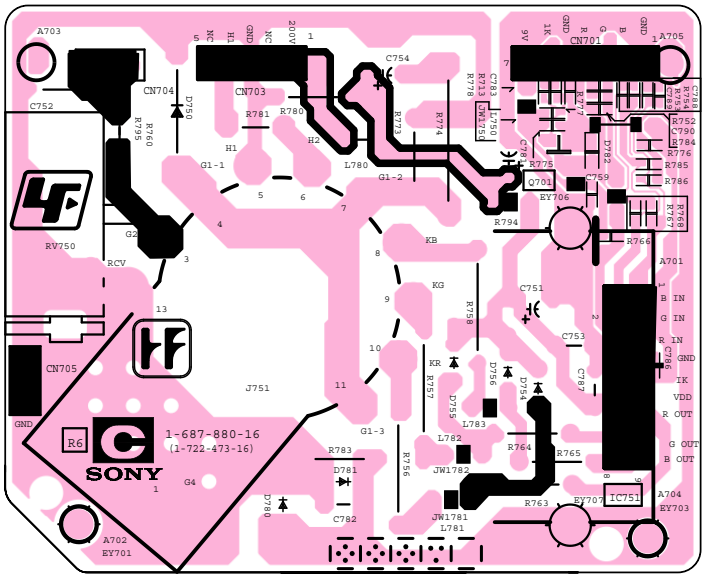

4-6. SEMICONDUCTORS

DIODE

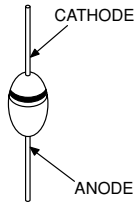	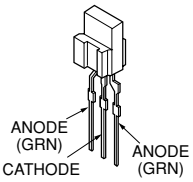		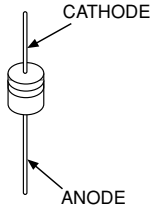		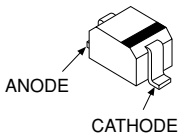
BY228/23	SPB-25MVWF	D3SB60F3	MTZJ-T-77-15 RD5.1ESB2 UPC574J 1SS133T-77 1SS244-T-T2	AM01AV1 D3S6M-F EGP20G EL1Z GP08D RU4AM-T3 S3L20UF4 10ERB20-TB3 10ERB20-TA2B5 11EQS10-TA2 D1NL20U	MA111-TX

TRANSISTOR

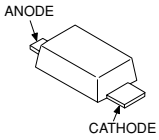	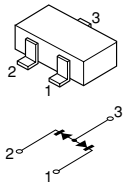	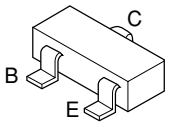			
MA2ZD14001S0 UDZSTE-175.6B UDZSTE-179.1B UDZSTE-173.6B	1PS226-115	MSB709-RT1 MSD601-RT1 UN2211 UN2216	2SC3209LK	IRF614-037	FN155

IC

			SOP 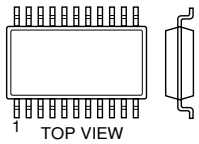 TOP VIEW Small Outline L-leaded Package Pin 8~98		
2SA1091-0 2SC3779C-DAA	2SC5885	STV9302A	CAT24WC16WI-TE13 LM2903DT TJM4558CDT		BA033T

	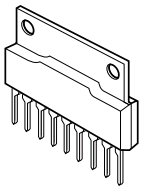			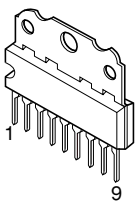	
SE135N-LF38	AN5276T	TA7805S	PQ018EF01SZH PQ09RD1SJ00H BA18BC0FP-E2	TDA6108AJF/N1	STR-F6267S-LF1357

IC

	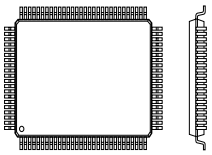 TOP VIEW
RPM7240-SH5	TDA12067H/N1B0B0QV

SECTION 5
EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

5-1. CHASSIS

● : 7-685-648-79 SCREW +BVTP 3 × 12 TYPE2 IT-3
■ : 7-685-663-71 SCREW +BVTP 4 × 16 TYPE2 IT-3

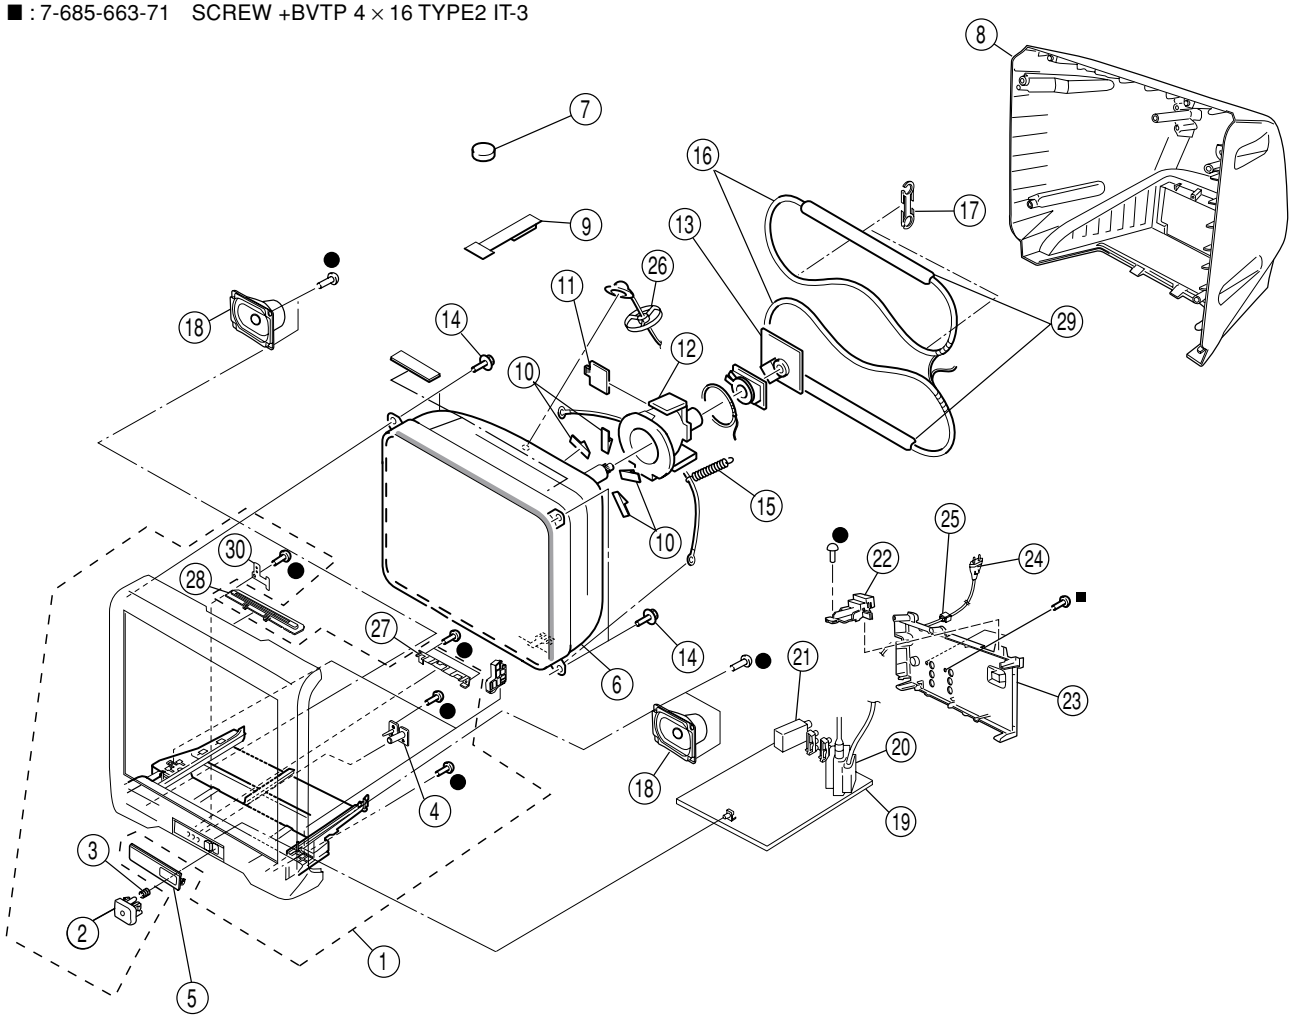

REF. NO.		PART NO.	DESCRIPTION	REMARK
1		X-2022-274-1	BEZNET ASSY	2 ~ 4, 27,30
2		4-092-230-01	BUTTON POWER	
3		4-036-405-11	SPRING COMPRESSION	
4	*	4-092-231-01	GUIDE LIGHT	
5		4-093-582-02	DOOR CONTROL	
6	⚠	8-738-809-05	PICTURE TUBE (A51LPT70X)	
7		1-452-032-00	MAGNET DISC	
8	⚠	4-092-938-01	COVER REAR (■ 8 SCREWS)	
9		4-094-690-01	PIECE A (90), CONV CORRECT	
10		4-046-600-11	SPACER DY	
11		4-057-714-01	PIECE ASSY TLH CORRECTION	
12	⚠	8-451-505-21	DEFLECTION YOKE (Y21RSA-O)	
13	*	A-1059-017-A	MOUNTED PWB , C	
14		4-365-808-12	SCREW (5) TAPPING	
15		4-095-706-01	SPRING EXTENSION	

REF. NO.		PART NO.	DESCRIPTION	REMARK
16	⚠	1-456-280-11	DEGAUSSING COIL	
17		4-093-607-01	HOLDER DGC	
18		1-825-293-21	LOUD SPEAKER (5 X 9 cm)	
19	*	A-1059-014-A	COMPLETE PWB, A	
20	⚠	1-453-329-41	TRANSFORMER ASSY FLYBACK (NX-4751//M3A4)	
21		1-693-659-11	TUNER (TEQEC2)	
22	*⚠	4-092-370-02	BRACKET FBT	
23	*⚠	4-095-890-41	BRACKET TERMINAL (ICON)	
24	⚠	1-824-968-11	POWER CORD (WITH CONNECTOR)	
25		4-022-115-00	HOLDER AC CORD	
26		4-084-918-01	HOLDER HV CABLE	
27	*	4-093-771-01	COVER FRONT PANEL	
28		1-477-678-42	TOP SWITCH BLOCK	
29		4-069-978-01	CUSHION DGC	
30		4-093-704-01	SPRING DOOR	

SECTION 6
ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : µF, PF : µµF

COILS
- MMH : mH, UH : µH

REF NO.	PART NO.	DESCRIPTION			REMARK
*	A-1059-014-A	COMPLETE PWB, A			
		**********			
	4-382-854-01	SCREW (M3X8), P, SW (+)			
	4-382-854-21	SCREW (M3X14), P, SW (+)			
* A012	4-102-022-01	PIN(30), WIRE			
* A015	4-055-304-01	HOLDER, LED			
* A016	4-042-408-02	PIN(45), WIRE			
* A017	4-102-022-01	PIN(30), WIRE			
* A018	4-042-408-02	PIN(45), WIRE			
* A019	4-102-022-01	PIN(30), WIRE			
		<CAPACITOR>			
C001	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C002	1-126-935-11	ELECT	470UF	20.00%	16V
C003	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C004	1-126-933-11	ELECT	100UF	20.00%	16V
C005	1-126-933-11	ELECT	100UF	20.00%	16V
C006	1-126-925-91	ELECT	470UF	20.00%	10V
C008	1-126-947-11	ELECT	47UF	20.00%	35V
C010	1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
C012	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C013	1-126-933-11	ELECT	100UF	20.00%	16V
C014	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C018	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C020	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C021	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C022	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C023	1-164-505-51	CERAMIC CHIP	2.2UF	10%	16V
C024	1-126-965-91	ELECT	22UF	20.00%	50V
C025	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C026	1-126-947-11	ELECT	47UF	20.00%	35V
C028	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C029	1-126-925-91	ELECT	470UF	20.00%	10V
C030	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C036	1-126-933-11	ELECT	100UF	20.00%	16V
C037	1-126-963-11	ELECT	4.7UF	20.00%	50V
C038	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C041	1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C042	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C044	1-164-505-51	CERAMIC CHIP	2.2UF	10%	16V
C046	1-162-969-11	CERAMIC CHIP	0.0068UF	10.00%	25V
C048	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C049	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	25V
C050	1-126-964-11	ELECT	10UF	20.00%	50V
C052	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C053	1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	25V
C054	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C055	1-100-829-11	FILM	0.15UF	5%	250V
C056	1-126-933-11	ELECT	100UF	20.00%	16V
C057	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C058	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C061	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C063	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C064	1-126-961-11	ELECT	2.2UF	20.00%	50V
C065	1-126-962-11	ELECT	3.3UF	20.00%	50V
C069	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C070	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C072	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C073	1-126-961-11	ELECT	2.2UF	20.00%	50V
C077	1-165-176-11	CERAMIC CHIP	0.047UF	10.00%	16V
C078	1-162-925-11	CERAMIC CHIP	68PF	5.00%	50V
C080	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C081	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C082	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C083	1-162-979-11	CERAMIC CHIP	0.0027UF	10.00%	50V
C089	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C090	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C091	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C092	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C093	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C094	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C095	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C096	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C100	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C101	1-126-964-11	ELECT	10UF	20.00%	50V
C102	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C104	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C106	1-126-963-11	ELECT	4.7UF	20.00%	50V
C107	1-126-935-11	ELECT	470UF	20.00%	16V
C108	1-126-935-11	ELECT	470UF	20.00%	16V
C109	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C111	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C115	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C116	1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C117	1-162-924-11	CERAMIC CHIP	56PF	5.00%	50V
C118	1-126-965-91	ELECT	22UF	20.00%	50V
C119	1-164-232-11	CERAMIC CHIP	0.01UF	10.00%	100V
C120	1-126-935-11	ELECT	470UF	20.00%	16V
C133	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C135	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C137	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C138	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C140	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C200	1-125-889-91	CERAMIC CHIP	2.2UF	10%	10V
C201	1-125-889-91	CERAMIC CHIP	2.2UF	10%	10V
C202	1-165-176-11	CERAMIC CHIP	0.047UF	10.00%	16V
C203	1-165-176-11	CERAMIC CHIP	0.047UF	10.00%	16V
C204	1-137-374-11	MYLAR	0.047UF	5.00%	50V
C206	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C207	1-137-374-11	MYLAR	0.047UF	5.00%	50V
C208	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C210	1-126-968-11	ELECT	100UF	20.00%	50V

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF NO.		PART NO.	DESCRIPTION		REMARK	
C211		1-126-963-11	ELECT	4.7UF	20.00%	50V
C212		1-126-942-61	ELECT	1000UF	20.00%	25V
C213		1-115-339-51	CERAMIC CHIP	0.1UF	10.00%	50V
C214		1-126-942-61	ELECT	1000UF	20.00%	25V
C216		1-126-965-91	ELECT	22UF	20.00%	50V
C217		1-126-942-61	ELECT	1000UF	20.00%	25V
C218		1-126-965-91	ELECT	22UF	20.00%	50V
C219		1-126-934-11	ELECT	220UF	20.00%	16V
C220		1-126-964-11	ELECT	10UF	20.00%	50V
C231		1-137-374-11	MYLAR	0.047UF	5.00%	50V
C232		1-137-374-11	MYLAR	0.047UF	5.00%	50V
C234		1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
C235		1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
C236		1-130-495-00	MYLAR	0.1UF	5.00%	50V
C237		1-130-495-00	MYLAR	0.1UF	5.00%	50V
C300		1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C301		1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
C302		1-164-505-51	CERAMIC CHIP	2.2UF	10%	16V
C303		1-126-933-11	ELECT	100UF	20.00%	16V
C304		1-126-933-11	ELECT	100UF	20.00%	16V
C308		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C311		1-126-961-11	ELECT	2.2UF	20.00%	50V
C312		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C313		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C314		1-126-925-91	ELECT	470UF	20.00%	10V
C316		1-125-891-11	CERAMIC CHIP	0.47UF	10.00%	10V
C317		1-126-934-11	ELECT	220UF	20.00%	16V
C318		1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C319		1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V
C320		1-162-923-11	CERAMIC CHIP	47PF	5.00%	50V
C321		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C322		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C323		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C325		1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	25V
C328		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C333		1-126-925-91	ELECT	470UF	20.00%	10V
C600	⚠	1-119-895-51	CERAMIC	4700PF	20.00%	250V
C602	⚠	1-165-538-11	FILM	0.1UF	10%	0V
C605		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C606		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C609		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C610		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C611		1-117-752-11	ELECT(BLOCK)	330UF	20.00%	450V
C612		1-117-623-11	FILM	1500PF	3.00%	1.2KV
C616		1-164-230-11	CERAMIC CHIP	220PF	5.00%	50V
C619		1-136-167-00	FILM	0.15UF	5.00%	50V
C621		1-126-963-11	ELECT	4.7UF	20.00%	50V
C622	⚠	1-119-894-51	CERAMIC	2200PF	20.00%	250V
C623		1-162-967-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C624		1-126-967-11	ELECT	47UF	20.00%	50V
C625	⚠	1-127-942-51	CERAMIC	330PF	10%	250V
C626		1-102-228-00	CERAMIC	470PF	10.00%	500V
C628		1-125-772-91	CERAMIC	1500PF	10.00%	2KV
C630		1-128-549-11	ELECT	3300UF	20.00%	35V
C632		1-126-953-11	ELECT	2200UF	20.00%	35V
C634		1-126-941-11	ELECT	470UF	20.00%	25V
C635		1-126-971-11	ELECT	470UF	20.00%	50V
C637		1-126-933-11	ELECT	100UF	20.00%	16V
C638		1-126-933-11	ELECT	100UF	20.00%	16V
C639		1-126-933-11	ELECT	100UF	20.00%	16V

REF NO.		PART NO.	DESCRIPTION		REMARK	
C641		1-126-933-11	ELECT	100UF	20.00%	16V
C643		1-117-720-51	CERAMIC CHIP	4.7UF		10V
C644		1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
C647		1-126-935-11	ELECT	470UF	20.00%	16V
C649		1-126-933-11	ELECT	100UF	20.00%	16V
C652		1-102-228-00	CERAMIC	470PF	10.00%	500V
C653		1-102-228-00	CERAMIC	470PF	10.00%	500V
C654		1-102-228-00	CERAMIC	470PF	10.00%	500V
C657	⚠	1-127-942-51	CERAMIC	330PF	10%	250V
C660	⚠	1-165-539-11	FILM	0.22UF	10%	275V
C662		1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C665		1-110-626-11	ELECT	330UF	20.00%	160V
C666	⚠	1-165-538-11	FILM	0.1UF	10%	0V
C668		1-126-933-11	ELECT	100UF	20.00%	16V
C670	⚠	1-127-942-51	CERAMIC	330PF	10%	250V
C672		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C678		1-164-505-51	CERAMIC CHIP	2.2UF	10%	16V
C680		1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
C682		1-115-466-91	ELECT	1000UF	20.00%	16V
C685		1-126-934-11	ELECT	220UF	20.00%	16V
C686		1-117-720-51	CERAMIC CHIP	4.7UF		10V
C805		1-126-960-11	ELECT	1UF	20.00%	50V
C806		1-106-375-12	MYLAR	0.022UF	5.00%	200V
C807		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C808		1-102-244-00	CERAMIC	220PF	10.00%	500V
C809		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C810		1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C811		1-126-933-11	ELECT	100UF	20.00%	16V
C822		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C825		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C826		1-164-227-11	CERAMIC CHIP	0.022UF	10.00%	25V
C828		1-126-933-11	ELECT	100UF	20.00%	16V
C830		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C831		1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C832		1-164-230-11	CERAMIC CHIP	220PF	5.00%	50V
C833		1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C835		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C837		1-162-968-11	CERAMIC CHIP	0.0047UF	10.00%	50V
C838		1-106-220-00	MYLAR	0.1UF	10.00%	100V
C839		1-162-966-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C840	⚠	1-117-647-11	FILM	13000PF	3.00%	1.2KV
C841		1-107-846-11	FILM	0.1UF	5.00%	400V
C842		1-100-122-21	FILM	0.022UF	5%	400V
C844		1-165-176-11	CERAMIC CHIP	0.047UF	10.00%	16V
C845		1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C847		1-107-364-11	MYLAR	0.01UF	10.00%	200V
C848		1-107-364-11	MYLAR	0.01UF	10.00%	200V
C849		1-106-375-12	MYLAR	0.022UF	5.00%	200V
C850		1-106-220-00	MYLAR	0.1UF	10.00%	100V
C851		1-107-675-11	ELECT	1UF	20.00%	450V
C852		1-117-665-11	FILM	0.33UF	5.00%	250V
C854		1-126-948-11	ELECT	100UF	20.00%	35V
C855		1-107-894-11	ELECT	220UF	20.00%	35V
C857		1-104-666-11	ELECT	220UF	20.00%	25V
C858		1-137-194-81	FILM	0.47UF	5.00%	50V
C860		1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C861		1-104-666-11	ELECT	220UF	20.00%	25V
C862		1-162-318-11	CERAMIC	0.001UF	10.00%	500V
C863		1-165-176-11	CERAMIC CHIP	0.047UF	10.00%	16V
C867		1-165-441-51	ELECT	33UF	20%	160V

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION		REMARK
C868	1-102-228-00	CERAMIC	470PF 10.00% 500V	
C869	1-107-654-11	ELECT	33UF 20.00% 250V	
C870	1-106-387-00	MYLAR	0.068UF 10.00% 200V	
C876	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	
C877	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V	
C878	1-162-970-11	CERAMIC CHIP	0.01UF 10.00% 25V	
C900	1-164-505-51	CERAMIC CHIP	2.2UF 10% 16V	
C901	1-164-505-51	CERAMIC CHIP	2.2UF 10% 16V	
C902	1-126-957-11	ELECT	0.22UF 20.00% 50V	
C903	1-126-935-11	ELECT	470UF 20.00% 16V	
C906	1-164-346-51	CERAMIC CHIP	1UF 10% 16V	
C907	1-164-346-51	CERAMIC CHIP	1UF 10% 16V	
C910	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	
C911	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	
C912	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	
C913	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	
C916	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	
C917	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	
C918	1-164-346-51	CERAMIC CHIP	1UF 10% 16V	
C919	1-164-346-51	CERAMIC CHIP	1UF 10% 16V	
C922	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	
C925	1-164-315-11	CERAMIC CHIP	470PF 5.00% 50V	
C955	1-126-947-11	ELECT	47UF 20.00% 35V	
C956	1-126-933-11	ELECT	100UF 20.00% 16V	
C967	1-164-505-51	CERAMIC CHIP	2.2UF 10% 16V	
C975	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	
C979	1-162-964-11	CERAMIC CHIP	0.001UF 10.00% 50V	
C1019	1-125-891-11	CERAMIC CHIP	0.47UF 10.00% 10V	
C1233	1-126-961-11	ELECT	2.2UF 20.00% 50V	
C2602	1-102-114-00	CERAMIC	470PF 10.00% 50V	
C2631	1-102-228-00	CERAMIC	470PF 10.00% 500V	
C2636	1-126-972-11	ELECT	1000UF 20.00% 50V	
C2648	1-126-952-11	ELECT	1000UF 20.00% 35V	
		<CONNECTOR>		
* CN005	1-564-506-11	PLUG, CONNECTOR 3P		
* CN200	1-564-507-11	PLUG, CONNECTOR 4P		
* CN600	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P		
* CN601	1-691-134-11	PIN, CONNECTOR (PC BOARD) 2P		
* CN602 ⚠	1-580-843-11	PIN, CONNECTOR (POWER)		
* CN904	1-508-743-00	PIN, CONNECTOR 5P		
CT131	1-767-774-22	TRAP, CERAMIC		
CT139	1-767-775-22	TRAP, CERAMIC		
		<DIODE>		
D002	8-719-404-50	DIODE MA111-TX		
D003	8-719-404-50	DIODE MA111-TX		
D023	8-719-069-60	DIODE UDZSTE-179.1B		
D024	8-719-069-60	DIODE UDZSTE-179.1B		
D025	8-719-069-60	DIODE UDZSTE-179.1B		
D054	8-719-069-55	DIODE UDZSTE-175.6B		
D055	8-719-069-55	DIODE UDZSTE-175.6B		
D056	8-719-404-50	DIODE MA111-TX		
D057	8-719-404-50	DIODE MA111-TX		
D058	8-719-404-50	DIODE MA111-TX		
D059	8-719-404-50	DIODE MA111-TX		
D060	8-719-069-55	DIODE UDZSTE-175.6B		
D061	8-719-404-50	DIODE MA111-TX		
D062	8-719-069-55	DIODE UDZSTE-175.6B		
D063	8-719-404-50	DIODE MA111-TX		

REF NO.	PART NO.	DESCRIPTION	REMARK
D064	8-719-069-55	DIODE UDZSTE-175.6B	
D065	8-719-069-55	DIODE UDZSTE-175.6B	
D066	8-719-908-03	DIODE GP08D	
D068	8-719-069-55	DIODE UDZSTE-175.6B	
D071	8-719-404-50	DIODE MA111-TX	
D072	8-719-404-50	DIODE MA111-TX	
D074	8-719-404-50	DIODE MA111-TX	
D075	8-719-069-60	DIODE UDZSTE-179.1B	
D076	8-719-404-50	DIODE MA111-TX	
D100	8-719-044-76	DIODE 1SS356-TW11	
D103	8-759-157-40	IC UPC574J	
D108	8-719-069-55	DIODE UDZSTE-175.6B	
D109	8-719-069-55	DIODE UDZSTE-175.6B	
D110	8-719-404-50	DIODE MA111-TX	
D111	8-719-404-50	DIODE MA111-TX	
D200	8-719-062-51	DIODE 1PS226-115	
D201	8-719-404-50	DIODE MA111-TX	
D202	8-719-404-50	DIODE MA111-TX	
D203	8-719-404-50	DIODE MA111-TX	
D204	8-719-404-50	DIODE MA111-TX	
D205	8-719-404-50	DIODE MA111-TX	
D208	8-719-404-50	DIODE MA111-TX	
D211	8-719-062-51	DIODE 1PS226-115	
D212	8-719-404-50	DIODE MA111-TX	
D213	8-719-404-50	DIODE MA111-TX	
D214	8-719-404-50	DIODE MA111-TX	
D600	8-719-404-50	DIODE MA111-TX	
D602	6-500-481-31	DIODE AM01AV1	
D603	6-500-481-31	DIODE AM01AV1	
D604	8-719-077-77	DIODE D3SB60F3	
D605	8-719-109-85	DIODE RD5.1ESB2	
D608	8-719-109-85	DIODE RD5.1ESB2	
D614	8-719-923-86	DIODE MTZJ-T-77-15	
D615	8-719-063-70	DIODE D1NL20U	
D617	6-500-567-11	DIODE 10ERB20-TA2B5	
D618	8-719-063-70	DIODE D1NL20U	
D619	6-500-567-11	DIODE 10ERB20-TA2B5	
D621	8-719-312-10	DIODE RU4AM-T3	
D622	8-719-200-93	DIODE 11EQS10-TA2	
D623	6-500-567-31	DIODE 10ERB20-TB3	
D624	8-719-510-73	DIODE S3L20UF4	
D629	8-719-109-85	DIODE RD5.1ESB2	
D633	8-719-923-86	DIODE MTZJ-T-77-15	
D635	8-719-083-57	DIODE UDZSTE-173.6B	
D637	8-719-072-70	DIODE MA2ZD14001S0	
D638	8-719-404-50	DIODE MA111-TX	
D639	8-719-027-22	DIODE D3S6M-F	
D804	8-719-991-33	DIODE 1SS133T-77	
D805	8-719-991-33	DIODE 1SS133T-77	
D807	8-719-991-33	DIODE 1SS133T-77	
D808	8-719-991-33	DIODE 1SS133T-77	
D809	8-719-991-33	DIODE 1SS133T-77	
D815	8-719-069-60	DIODE UDZSTE-179.1B	
D816	6-500-764-11	DIODE BY228/23	
D817	8-719-979-85	DIODE EGP20G	
D818	8-719-109-85	DIODE RD5.1ESB2	
D819	6-500-567-31	DIODE 10ERB20-TB3	
D820	8-719-908-03	DIODE GP08D	
D821	6-500-567-31	DIODE 10ERB20-TB3	
D823	8-719-302-43	DIODE EL1Z	
D824	8-719-302-43	DIODE EL1Z	
D827	8-719-302-43	DIODE EL1Z	

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION		REMARK
D829	8-719-069-55	DIODE UDZSTE-175.6B		
D830	8-719-404-50	DIODE MA111-TX		
D900	8-719-069-60	DIODE UDZSTE-179.1B		
D901	8-719-069-60	DIODE UDZSTE-179.1B		
D905	8-719-069-60	DIODE UDZSTE-179.1B		
D906	8-719-069-55	DIODE UDZSTE-175.6B		
D907	8-719-069-55	DIODE UDZSTE-175.6B		
D908	8-719-069-55	DIODE UDZSTE-175.6B		
D914	8-719-083-18	DIODE SPB-25MVWF		
D915	8-719-069-55	DIODE UDZSTE-175.6B		
D916	8-719-069-55	DIODE UDZSTE-175.6B		
D918	8-719-069-55	DIODE UDZSTE-175.6B		
D931	8-719-083-57	DIODE UDZSTE-173.6B		
D932	8-719-083-57	DIODE UDZSTE-173.6B		
D2625	8-719-510-73	DIODE S3L20UF4		
		<DY CONNECTOR>		
* DY800	1-580-798-11	CONNECTOR PIN (DY)		6P
		<FUSE>		
F600 ⚠	1-576-232-21	FUSE	5A	250V
		<FERRITE BEAD>		
FB001	1-410-397-21	FERRITE	1.1UH	
FB101	1-414-229-11	FERRITE	0UH	
FB603	1-410-397-21	FERRITE	1.1UH	
FB608	1-412-911-31	FERRITE	0UH	
FB800	1-410-397-21	FERRITE	1.1UH	
FB2602	1-410-397-21	FERRITE	1.1UH	
		<FUSE HOLDER>		
FH601	1-533-223-11	FUSE HOLDER	0A	0V
FH602	1-533-223-11	FUSE HOLDER	0A	0V
		<IC>		
IC001	6-705-434-41	IC TDA12067H/N1B0B0QV		
IC002	6-704-532-01	IC RPM7240-H5		
IC003	6-705-864-01	IC CAT24WC16WI-TE13		
IC200	6-703-475-01	IC AN5276T		
IC601	6-704-263-01	IC STR-F6267S LF1357		
IC602	6-703-479-01	IC PQ09RD1SJ00H		
IC603	6-703-478-01	IC PQ018EF01SZH		
IC604	8-759-231-53	IC TA7805S		
IC605	6-705-063-01	IC SE135N-LF38		
IC606	8-759-445-59	IC BA033T		
IC607	8-759-832-05	IC BA18BC0FP-E2		
IC801	6-703-708-01	IC LM2903DT		
IC802	6-701-937-01	IC TJM4558CDT		
IC804	6-703-470-01	IC STV9302A		
		<JACK>		
J200	1-770-786-22	JACK		
J903	1-770-329-13	JACK, PIN 3P		
J906	1-817-296-11	PHONO	JACK	3P
J907	1-817-296-11	PHONO	JACK	3P

REF NO.	PART NO.	DESCRIPTION		REMARK
		<CHIP CONDUCTOR>		
JR001	1-216-864-11	SHORT CHIP	0	
JR002	1-216-864-11	SHORT CHIP	0	
JR003	1-216-864-11	SHORT CHIP	0	
JR004	1-216-864-11	SHORT CHIP	0	
JR005	1-216-864-11	SHORT CHIP	0	
JR007	1-216-864-11	SHORT CHIP	0	
JR008	1-216-864-11	SHORT CHIP	0	
JR009	1-216-864-11	SHORT CHIP	0	
JR012	1-216-864-11	SHORT CHIP	0	
JR013	1-216-864-11	SHORT CHIP	0	
JR014	1-216-864-11	SHORT CHIP	0	
JR015	1-216-864-11	SHORT CHIP	0	
JR016	1-216-864-11	SHORT CHIP	0	
JR017	1-216-864-11	SHORT CHIP	0	
JR018	1-216-864-11	SHORT CHIP	0	
JR019	1-216-864-11	SHORT CHIP	0	
JR020	1-216-864-11	SHORT CHIP	0	
JR024	1-216-864-11	SHORT CHIP	0	
JR025	1-216-864-11	SHORT CHIP	0	
JR026	1-216-864-11	SHORT CHIP	0	
JR027	1-216-864-11	SHORT CHIP	0	
JR036	1-216-864-11	SHORT CHIP	0	
JR037	1-216-864-11	SHORT CHIP	0	
JR038	1-216-864-11	SHORT CHIP	0	
JR040	1-216-864-11	SHORT CHIP	0	
JR041	1-216-864-11	SHORT CHIP	0	
JR042	1-216-864-11	SHORT CHIP	0	
JR043	1-216-864-11	SHORT CHIP	0	
JR046	1-216-864-11	SHORT CHIP	0	
JR047	1-216-864-11	SHORT CHIP	0	
JR049	1-216-864-11	SHORT CHIP	0	
JR051	1-216-864-11	SHORT CHIP	0	
JR300	1-216-864-11	SHORT CHIP	0	
JR301	1-216-864-11	SHORT CHIP	0	
JR302	1-216-864-11	SHORT CHIP	0	
JR600	1-216-864-11	SHORT CHIP	0	
JR601	1-216-864-11	SHORT CHIP	0	
JR602	1-216-864-11	SHORT CHIP	0	
JR1006	1-216-864-11	SHORT CHIP	0	
JR1011	1-216-864-11	SHORT CHIP	0	
JR1012	1-216-864-11	SHORT CHIP	0	
JR1013	1-216-864-11	SHORT CHIP	0	
JR1014	1-216-864-11	SHORT CHIP	0	
JR1101	1-216-864-11	SHORT CHIP	0	
JR1110	1-216-864-11	SHORT CHIP	0	
JR1903	1-216-864-11	SHORT CHIP	0	
		<COIL>		
L003	1-414-856-11	INDUCTOR	10UH	
L004	1-414-187-11	INDUCTOR	47UH	
L005	1-414-856-11	INDUCTOR	10UH	
L006	1-414-856-11	INDUCTOR	10UH	
L007	1-414-856-11	INDUCTOR	10UH	
L008	1-414-856-11	INDUCTOR	10UH	
L009	1-414-856-11	INDUCTOR	10UH	
L010	1-469-525-91	INDUCTOR	10UH	
L011	1-469-525-91	INDUCTOR	10UH	
L012	1-412-058-11	INDUCTOR	10UH	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION		REMARK
L013	1-469-525-91	INDUCTOR	10UH	
L031	1-469-525-91	INDUCTOR	10UH	
L032	1-469-525-91	INDUCTOR	10UH	
L033	1-469-525-91	INDUCTOR	10UH	
L035	1-469-525-91	INDUCTOR	10UH	
L036	1-469-525-91	INDUCTOR	10UH	
L100	1-414-857-11	INDUCTOR	100UH	
L101	1-410-498-11	INDUCTOR	1.2UH	
L103	1-410-987-42	INDUCTOR	0.33UH	
L106	1-414-187-11	INDUCTOR	47UH	
L107	1-412-062-11	INDUCTOR	47UH	
L600	1-412-533-21	INDUCTOR	47UH	
L601	1-412-533-21	INDUCTOR	47UH	
L602	1-412-529-11	INDUCTOR	22UH	
L800	1-424-796-11	COIL, HORIZONTAL LINEARITY		
L802	1-406-679-11	INDUCTOR	22MH	
L803	1-414-493-41	INDUCTOR	4.7MH	
L805	1-408-947-00	INDUCTOR	2.2MH	
L902	1-414-187-11	INDUCTOR	47UH	
L2601	1-412-525-31	INDUCTOR	10UH	
		<PHOTO COUPLER>		
PH600 ⚠	6-600-187-01	PHOTO COUPLER PC123Y22JOOF		
		<IC LINK>		
PS602 ⚠	1-533-597-42	IC LINK	5A	90V
PS603 ⚠	1-533-597-42	IC LINK	5A	90V
PS604 ⚠	1-533-597-42	IC LINK	5A	90V
PS605 ⚠	1-533-597-42	IC LINK	5A	90V
PS2601 ⚠	1-533-597-42	IC LINK	5A	90V
		<TRANSISTOR>		
Q001	8-729-421-22	TRANSISTOR UN2211		
Q006	8-729-424-67	TRANSISTOR UN2216		
Q007	8-729-424-67	TRANSISTOR UN2216		
Q008	8-729-010-25	TRANSISTOR MSD601-RT1		
Q010	8-729-010-05	TRANSISTOR MSB709-RT1		
Q013	8-729-010-25	TRANSISTOR MSD601-RT1		
Q016	8-729-421-22	TRANSISTOR UN2211		
Q100	8-729-010-25	TRANSISTOR MSD601-RT1		
Q102	8-729-022-54	TRANSISTOR 2SC3779C,D-AA		
Q103	8-729-424-67	TRANSISTOR UN2216		
Q104	8-729-424-67	TRANSISTOR UN2216		
Q111	8-729-010-25	TRANSISTOR MSD601-RT1		
Q200	8-729-421-22	TRANSISTOR UN2211		
Q201	8-729-010-05	TRANSISTOR MSB709-RT1		
Q202	8-729-010-05	TRANSISTOR MSB709-RT1		
Q206	8-729-421-22	TRANSISTOR UN2211		
Q601	8-729-010-25	TRANSISTOR MSD601-RT1		
Q605	6-550-572-01	TRANSISTOR FN155		
Q606	8-729-010-25	TRANSISTOR MSD601-RT1		
Q608	8-729-010-25	TRANSISTOR MSD601-RT1		
Q609	8-729-010-25	TRANSISTOR MSD601-RT1		
Q803	8-729-140-50	TRANSISTOR 2SC3209LK		
Q804	8-729-200-17	TRANSISTOR 2SA1091-O		
Q805	6-550-410-01	TRANSISTOR 2SC5885		
Q806	8-729-010-25	TRANSISTOR MSD601-RT1		
Q807	8-729-010-05	TRANSISTOR MSB709-RT1		
Q808	8-729-053-33	TRANSISTOR IRF614-037		
Q814	8-729-010-25	TRANSISTOR MSD601-RT1		
Q900	8-729-010-05	TRANSISTOR MSB709-RT1		
Q901	8-729-424-67	TRANSISTOR UN2216		
Q902	8-729-424-67	TRANSISTOR UN2216		
Q8009	8-729-200-17	TRANSISTOR 2SA1091-O		
Q8010	8-729-140-50	TRANSISTOR 2SC3209LK		
		<RESISTOR>		
R001	1-216-829-11	METAL CHIP	4.7K	5% 1/10W
R002	1-216-809-11	METAL CHIP	100	5% 1/10W
R003	1-216-829-11	METAL CHIP	4.7K	5% 1/10W
R004	1-216-809-11	METAL CHIP	100	5% 1/10W
R010	1-216-833-11	METAL CHIP	10K	5% 1/10W
R011	1-216-821-11	METAL CHIP	1K	5% 1/10W
R012	1-216-825-11	METAL CHIP	2.2K	5% 1/10W
R014	1-216-809-11	METAL CHIP	100	5% 1/10W
R015	1-216-823-11	METAL CHIP	1.5K	5% 1/10W
R018	1-216-809-11	METAL CHIP	100	5% 1/10W
R020	1-216-809-11	METAL CHIP	100	5% 1/10W
R021	1-216-295-61	SHORT CHIP	0	
R023	1-216-823-11	METAL CHIP	1.5K	5% 1/10W
R024	1-216-809-11	METAL CHIP	100	5% 1/10W
R025	1-216-809-11	METAL CHIP	100	5% 1/10W
R026	1-216-809-11	METAL CHIP	100	5% 1/10W
R029	1-216-809-11	METAL CHIP	100	5% 1/10W
R030	1-216-809-11	METAL CHIP	100	5% 1/10W
R038	1-216-809-11	METAL CHIP	100	5% 1/10W
R039	1-216-809-11	METAL CHIP	100	5% 1/10W
R041	1-216-809-11	METAL CHIP	100	5% 1/10W
R042	1-216-825-11	METAL CHIP	2.2K	5% 1/10W
R044	1-216-834-11	METAL CHIP	12K	5% 1/10W
R045	1-216-809-11	METAL CHIP	100	5% 1/10W
R046	1-216-809-11	METAL CHIP	100	5% 1/10W
R048	1-216-809-11	METAL CHIP	100	5% 1/10W
R051	1-218-885-11	METAL CHIP	39K	0.50% 1/10W
R056	1-216-809-11	METAL CHIP	100	5% 1/10W
R058	1-216-809-11	METAL CHIP	100	5% 1/10W
R059	1-216-821-11	METAL CHIP	1K	5% 1/10W
R060	1-216-809-11	METAL CHIP	100	5% 1/10W
R061	1-216-819-11	METAL CHIP	680	5% 1/10W
R087	1-216-813-11	METAL CHIP	220	5% 1/10W
R088	1-216-823-11	METAL CHIP	1.5K	5% 1/10W
R096	1-216-813-11	METAL CHIP	220	5% 1/10W
R097	1-216-813-11	METAL CHIP	220	5% 1/10W
R098	1-216-813-11	METAL CHIP	220	5% 1/10W
R099	1-216-813-11	METAL CHIP	220	5% 1/10W
R100	1-216-821-11	METAL CHIP	1K	5% 1/10W
R103	1-211-981-11	METAL CHIP	33	0.50% 1/10W
R106	1-216-829-11	METAL CHIP	4.7K	5% 1/10W
R107	1-216-828-11	METAL CHIP	3.9K	5% 1/10W
R108	1-218-839-11	METAL CHIP	470	0.50% 1/10W
R109	1-216-019-61	METAL CHIP	56	5% 1/10W
R110	1-216-821-11	METAL CHIP	1K	5% 1/10W
R111	1-216-833-11	METAL CHIP	10K	5% 1/10W
R112	1-218-867-11	METAL CHIP	6.8K	0.50% 1/10W
R113	1-216-825-11	METAL CHIP	2.2K	5% 1/10W
R114	1-216-825-11	METAL CHIP	2.2K	5% 1/10W
R115	1-216-809-11	METAL CHIP	100	5% 1/10W
R116	1-216-809-11	METAL CHIP	100	5% 1/10W
R118	1-216-809-11	METAL CHIP	100	5% 1/10W
R119	1-211-981-11	METAL CHIP	33	0.50% 1/10W

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R121	1-215-925-11	METAL OXIDE	22K	5%	3W
R131	1-216-809-11	METAL CHIP	100	5%	1/10W
R149	1-216-864-11	SHORT CHIP	0		
R150	1-216-809-11	METAL CHIP	100	5%	1/10W
R152	1-216-864-11	SHORT CHIP	0		
R153	1-216-853-11	METAL CHIP	470K	5%	1/10W
R154	1-216-821-11	METAL CHIP	1K	5%	1/10W
R155	1-216-837-11	METAL CHIP	22K	5%	1/10W
R200	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R201	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R202	1-216-837-11	METAL CHIP	22K	5%	1/10W
R203	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R204	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R205	1-216-837-11	METAL CHIP	22K	5%	1/10W
R207	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R208	1-216-832-11	METAL CHIP	8.2K	5%	1/10W
R210	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R211	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R212	1-216-864-11	SHORT CHIP	0		
R213	1-216-835-11	METAL CHIP	15K	5%	1/10W
R214	1-216-835-11	METAL CHIP	15K	5%	1/10W
R215	1-216-833-11	METAL CHIP	10K	5%	1/10W
R216	1-216-833-11	METAL CHIP	10K	5%	1/10W
R217	1-249-411-11	CARBON	330	5%	1/4W
R218	1-216-295-61	SHORT CHIP	0		
R219	1-249-411-11	CARBON	330	5%	1/4W
R220	1-216-864-11	SHORT CHIP	0		
R221	1-216-821-11	METAL CHIP	1K	5%	1/10W
R234	1-249-401-11	CARBON	47	5%	1/4W
R235	1-249-401-11	CARBON	47	5%	1/4W
R236	1-216-833-11	METAL CHIP	10K	5%	1/10W
R237	1-216-809-11	METAL CHIP	100	5%	1/10W
R238	1-216-809-11	METAL CHIP	100	5%	1/10W
R241	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R242	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R300	1-216-809-11	METAL CHIP	100	5%	1/10W
R301	1-216-859-11	METAL CHIP	1.5M	5%	1/10W
R303	1-216-861-11	METAL CHIP	2.2M	5%	1/10W
R304	1-216-845-11	METAL CHIP	100K	5%	1/10W
R307	1-216-864-11	SHORT CHIP	0		
R309	1-216-857-11	METAL CHIP	1M	5%	1/10W
R310	1-216-821-11	METAL CHIP	1K	5%	1/10W
R311	1-216-841-11	METAL CHIP	47K	5%	1/10W
R312	1-216-857-11	METAL CHIP	1M	5%	1/10W
R313	1-216-847-11	METAL CHIP	150K	5%	1/10W
R314	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R315	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R317	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R320	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W
R322	1-218-863-11	METAL CHIP	4.7K	0.50%	1/10W
R323	1-216-809-11	METAL CHIP	100	5%	1/10W
R324	1-216-864-11	SHORT CHIP	0		
R331	1-216-809-11	METAL CHIP	100	5%	1/10W
R336	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R337	1-216-817-11	METAL CHIP	470	5%	1/10W
R338	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R339	1-216-809-11	METAL CHIP	100	5%	1/10W
R340	1-216-833-11	METAL CHIP	10K	5%	1/10W
R341	1-216-809-11	METAL CHIP	100	5%	1/10W
R355	1-216-837-11	METAL CHIP	22K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R356	1-216-864-11	SHORT CHIP	0		
R360	1-216-864-11	SHORT CHIP	0		
R363	1-216-864-11	SHORT CHIP	0		
R364	1-216-821-11	METAL CHIP	1K	5%	1/10W
R377	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R379	1-216-843-11	METAL CHIP	68K	5%	1/10W
R380	1-216-809-11	METAL CHIP	100	5%	1/10W
R384	1-216-809-11	METAL CHIP	100	5%	1/10W
R385	1-216-809-11	METAL CHIP	100	5%	1/10W
R386	1-216-809-11	METAL CHIP	100	5%	1/10W
R392	1-216-833-11	METAL CHIP	10K	5%	1/10W
R393	1-216-809-11	METAL CHIP	100	5%	1/10W
R394	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R395	1-216-845-11	METAL CHIP	100K	5%	1/10W
R397	1-216-125-00	METAL CHIP	1.5M	5%	1/10W
R398	1-216-797-11	METAL CHIP	10	5%	1/10W
R400	1-260-288-11	CARBON	0.47	5%	1/2W
R401	1-260-288-11	CARBON	0.47	5%	1/2W
R405	1-260-288-11	CARBON	0.47	5%	1/2W
R406	1-260-127-11	CARBON	220K	5%	1/2W
R411	1-214-909-00	METAL	68K	1%	1/2W
R412	1-214-761-00	METAL	22K	1%	1/4W
R413	1-215-449-00	METAL	15K	1%	1/4W
R414	1-260-336-11	CARBON	4.7K	5%	1/2W
R416	1-260-107-11	CARBON	4.7K	5%	1/2W
R420	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R421	1-216-833-11	METAL CHIP	10K	5%	1/10W
R423	1-216-864-11	SHORT CHIP	0		
R424	1-218-899-11	METAL CHIP	150K	0.50%	1/16W
R602	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R609	1-216-833-11	METAL CHIP	10K	5%	1/10W
R612	1-215-425-00	METAL	1.5K	1%	1/4W
R616	1-205-998-11	CEMENTED	1	5%	10W
R618	1-249-432-11	CARBON	18K	5%	1/4W
R619	1-216-361-00	METAL OXIDE	0.22	5%	2W
R620	1-243-946-21	METAL OXIDE	0.27	5%	2W
R621	1-249-409-11	CARBON	220	5%	1/4W
R623	1-218-877-11	METAL CHIP	18K	0.50%	1/10W
R624	1-215-429-00	METAL	2.2K	1%	1/4W
R625	1-216-864-11	SHORT CHIP	0		
R627	1-249-385-11	CARBON	2.2	5%	1/4W
R631	1-247-847-91	CARBON	4.7K	5%	1/4W
R634	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R635	1-216-833-11	METAL CHIP	10K	5%	1/10W
R636	1-249-421-11	CARBON	2.2K	5%	1/4W
R638	1-240-262-11	CEMENTED	0.68	5%	10W
R645	1-218-899-11	METAL CHIP	150K	0.50%	1/16W
R646	1-218-851-11	METAL CHIP	1.5K	0.50%	1/10W
R647	1-216-821-11	METAL CHIP	1K	5%	1/10W
R650	⚠ 1-240-917-51	METAL	8.2M	5%	1W
R655	1-216-809-11	METAL CHIP	100	5%	1/10W
R656	1-249-381-11	CARBON	1	5%	1/4W
R658	1-245-464-31	METAL	120K	1%	1/4W
R660	1-245-478-31	METAL	470K	1%	1/4W
R661	1-245-480-31	METAL	560K	1%	1/4W
R667	1-216-821-11	METAL CHIP	1K	5%	1/10W
R668	1-216-839-11	METAL CHIP	33K	5%	1/10W
R820	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R821	1-216-837-11	METAL CHIP	22K	5%	1/10W
R822	1-249-417-11	CARBON	1K	5%	1/4W

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R823	1-245-468-31	METAL	180K	1%	1/4W
R824	1-216-839-11	METAL CHIP	33K	5%	1/10W
R825	1-215-917-21	METAL OXIDE	1K	5%	3W
R826	1-247-891-00	CARBON	330K	5%	1/4W
R827	1-243-540-21	METAL OXIDE	1	5%	2W
R828	1-215-917-21	METAL OXIDE	1K	5%	3W
R829	1-215-917-21	METAL OXIDE	1K	5%	3W
R830	1-260-332-51	CARBON	2.2K	5%	1/2W
R831	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R833	1-260-125-11	CARBON	150K	5%	1/2W
R834	1-245-468-31	METAL	180K	1%	1/4W
R835	1-260-127-11	CARBON	220K	5%	1/2W
R838	1-216-838-11	METAL CHIP	27K	5%	1/10W
R839	1-216-864-11	SHORT CHIP	0		
R843	1-216-864-11	SHORT CHIP	0		
R844	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R846	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R847	1-216-833-11	METAL CHIP	10K	5%	1/10W
R851	1-216-821-11	METAL CHIP	1K	5%	1/10W
R852	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R853	1-218-859-11	METAL CHIP	3.3K	0.50%	1/10W
R854	1-218-877-11	METAL CHIP	18K	0.50%	1/10W
R855	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R856	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R859	1-218-883-11	METAL CHIP	33K	0.50%	1/10W
R861	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R864	1-218-865-11	METAL CHIP	5.6K	0.50%	1/10W
R865	1-216-821-11	METAL CHIP	1K	5%	1/10W
R866	1-218-895-11	METAL CHIP	100K	0.50%	1/10W
R868	1-249-393-11	CARBON	10	5%	1/4W
R869	1-249-381-11	CARBON	1	5%	1/4W
R870	1-218-859-11	METAL CHIP	3.3K	0.50%	1/10W
R871	1-243-692-21	METAL OXIDE	220	5%	1W
R872	1-216-864-11	SHORT CHIP	0		
R873	1-216-841-11	METAL CHIP	47K	5%	1/10W
R876	1-216-833-11	METAL CHIP	10K	5%	1/10W
R877	1-218-895-11	METAL CHIP	100K	0.50%	1/10W
R878	1-216-349-00	METAL OXIDE	1	5%	1W
R881	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R882	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R883	1-249-421-11	CARBON	2.2K	5%	1/4W
R887	1-216-837-11	METAL CHIP	22K	5%	1/10W
R888	1-218-887-11	METAL CHIP	47K	0.50%	1/10W
R889	1-243-531-21	METAL OXIDE	100	5%	3W
R890	1-215-900-21	METAL OXIDE	22K	5%	2W
R891	1-249-385-11	CARBON	2.2	5%	1/4W
R893	1-218-871-11	METAL CHIP	10K	0.50%	1/10W
R895	1-218-859-11	METAL CHIP	3.3K	0.50%	1/10W
R902	1-216-821-11	METAL CHIP	1K	5%	1/10W
R904	1-216-821-11	METAL CHIP	1K	5%	1/10W
R905	1-216-840-11	METAL CHIP	39K	5%	1/10W
R906	1-216-817-11	METAL CHIP	470	5%	1/10W
R909	1-216-840-11	METAL CHIP	39K	5%	1/10W
R910	1-216-817-11	METAL CHIP	470	5%	1/10W
R911	1-216-813-11	METAL CHIP	220	5%	1/10W
R913	1-216-853-11	METAL CHIP	470K	5%	1/10W
R914	1-216-853-11	METAL CHIP	470K	5%	1/10W
R915	1-216-849-11	METAL CHIP	220K	5%	1/10W
R916	1-216-849-11	METAL CHIP	220K	5%	1/10W
R917	1-218-285-11	METAL CHIP	75	5%	1/10W
R924	1-216-853-11	METAL CHIP	470K	5%	1/10W
R931	1-216-807-11	METAL CHIP	68	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R932	1-216-864-11	SHORT CHIP	0		
R933	1-216-864-11	SHORT CHIP	0		
R940	1-216-849-11	METAL CHIP	220K	5%	1/10W
R941	1-216-849-11	METAL CHIP	220K	5%	1/10W
R945	1-216-833-11	METAL CHIP	10K	5%	1/10W
R946	1-216-833-11	METAL CHIP	10K	5%	1/10W
R989	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2646	1-249-381-11	CARBON	1	5%	1/4W
R2647	1-249-429-11	CARBON	10K	5%	1/4W
R8009	1-218-867-11	METAL CHIP	6.8K	0.50%	1/10W
R8010	1-245-464-31	METAL	120K	1%	1/4W
R8011	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8012	1-216-841-11	METAL CHIP	47K	5%	1/10W
R8013	1-245-462-31	METAL	100K	1%	1/4W
R9005	1-216-864-11	SHORT CHIP	0		
R9006	1-216-864-11	SHORT CHIP	0		
R9017	1-216-809-11	METAL CHIP	100	5%	1/10W
R9018	1-216-809-11	METAL CHIP	100	5%	1/10W
R9019	1-216-809-11	METAL CHIP	100	5%	1/10W
R9020	1-216-809-11	METAL CHIP	100	5%	1/10W
R9021	1-216-809-11	METAL CHIP	100	5%	1/10W
R9022	1-216-809-11	METAL CHIP	100	5%	1/10W
R9023	1-216-809-11	METAL CHIP	100	5%	1/10W
R9025	1-216-809-11	METAL CHIP	100	5%	1/10W
R9026	1-216-838-11	METAL CHIP	27K	5%	1/10W
R9027	1-216-838-11	METAL CHIP	27K	5%	1/10W
R9028	1-216-809-11	METAL CHIP	100	5%	1/10W
R9030	1-216-809-11	METAL CHIP	100	5%	1/10W
R9031	1-216-809-11	METAL CHIP	100	5%	1/10W
R9036	1-216-809-11	METAL CHIP	100	5%	1/10W
R9050	1-216-864-11	SHORT CHIP	0		
R9053	1-218-285-11	METAL CHIP	75	5%	1/10W

<RELAY>

RY600	⚠	1-755-198-12	RELAY, AC POWER

<SWITCH>

S600	⚠	1-571-433-31	SWITCH, PUSH (AC POWER)
S800		1-572-707-11	SWITCH, LEVER
SWF100		1-781-042-11	FILTER, SURFACE WAVE

<TRANSFORMER>

T600	⚠	1-456-354-11	LINE FILTER COIL
T602	⚠	1-439-695-11	CONVERTER TRANSFORMER (SRT)
T603	⚠	1-456-354-11	LINE FILTER COIL
T800		1-435-374-11	TRANSFORMER, FERRITE (HDT)
T801	⚠	1-453-329-41	TRANSFORMER ASSY FLYBACK (NX-4751//M3A4)

<THERMISTOR>

THP600	⚠	1-805-568-11	PTC THERMISTOR
TP02		1-536-354-00	POST PIN
TP03		1-536-354-00	POST PIN
TP04		1-536-354-00	POST PIN
TP601		1-536-354-00	POST PIN
TP602		1-536-354-00	POST PIN

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

A C

REF NO.	PART NO.	DESCRIPTION			REMARK
		<TUNER>			
TU102	1-693-659-11	TUNER (TEQEC2)			
		<VARISTOR>			
VDR600	1-804-995-11	VARISTOR			
		<CRYSTAL>			
X001	1-795-839-21	QUARTZ CRYSTAL UNIT			
		**********			
	* A-1059-017-A	MOUNTED PWB,C			
		**********			
	4-382-854-01	SCREW (M3X8), P, SW (+)			
* A702	4-102-022-01	PIN(30), WIRE			
* A703	4-102-022-01	PIN(30), WIRE			
* A704	4-102-022-01	PIN(30), WIRE			
* A705	4-102-022-01	PIN(30), WIRE			
		<CAPACITOR>			
C751	1-107-961-91	ELECT	10UF	20.00%	250V
C752	1-115-350-51	CERAMIC	0.0047UF		2KV
C754	1-107-651-11	ELECT	4.7UF	20.00%	250V
C781	1-107-651-11	ELECT	4.7UF	20.00%	250V
C782	1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C783	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C786	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C787	1-164-645-11	CERAMIC	1000PF	10.00%	500V
		<CONNECTOR>			
* CN701	1-564-510-11	PLUG, CONNECTOR 7P			
* CN703	1-564-508-11	PLUG, CONNECTOR 5P			
CN704	1-695-915-11	TAB (CONTACT)			
CN705	1-695-915-11	TAB (CONTACT)			
		<DIODE>			
D750	8-719-908-03	DIODE GP08D			
D754	6-500-949-01	DIODE 1SS244-T-72			
D755	6-500-949-01	DIODE 1SS244-T-72			
D756	6-500-949-01	DIODE 1SS244-T-72			
D780	8-719-991-33	DIODE 1SS133T-77			
D781	8-719-991-33	DIODE 1SS133T-77			
D782	8-719-069-55	DIODE UDZSTE-175.6B			
		<IC>			
IC751	6-703-482-01	IC TDA6108AJF/N1			

REF NO.	PART NO.	DESCRIPTION			REMARK
		<JACK>			
J751	⚠ 1-451-544-11	SOCKET, CRT			
		<COIL>			
L780	1-410-667-31	INDUCTOR	22UH		
		<RESISTOR>			
R713	1-216-864-11	SHORT CHIP	0		
R752	1-216-819-11	METAL CHIP	680	5%	1/10W
R753	1-216-819-11	METAL CHIP	680	5%	1/10W
R754	1-216-819-11	METAL CHIP	680	5%	1/10W
R756	1-219-746-11	METAL	1K	5%	1/2W
R757	1-219-746-11	METAL	1K	5%	1/2W
R758	1-219-746-11	METAL	1K	5%	1/2W
R763	1-260-316-51	CARBON	100	5%	1/2W
R764	1-260-316-51	CARBON	100	5%	1/2W
R765	1-260-316-51	CARBON	100	5%	1/2W
R773	1-260-132-11	CARBON	560K	5%	1/2W
R774	1-215-912-11	METAL OXIDE	150	5%	3W
R780	1-260-131-11	CARBON	470K	5%	1/2W
R781	1-243-950-21	METAL OXIDE	0.56	5%	2W
R783	1-260-316-51	CARBON	100	5%	1/2W
R794	1-249-377-11	CARBON	0.47	5%	1/4W
R795	1-260-352-11	CARBON	100K	5%	1/2W
		<VARIABLE RESISTOR>			
RV750	1-241-656-11	RES, ADJ, METAL FILM 110M			
		**********			
		<ACCESSORIES AND PACKING MATERIALS>			
		**********			
	1-417-151-22	MATCHING TRANSFORMER, ANTENNA			
	1-501-730-41	ANTENNA, TELESCOPIC			
	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)			
	4-392-004-11	CLIP			
	4-392-003-11	BAND, HOLD			
*	4-092-242-02	INDIVIDUAL CARTON			
*	4-098-964-01	CUSHION, UPPER			
*	4-098-965-01	CUSHION, LOWER			
*	4-395-957-01	BAG, PROTECTION			
	2-023-202-11	MANUAL INSTRUCTION			
		**********			
		<REMOTE COMMANDER>			
		**********			
	1-478-009-11	REMOTE COMMANDER (RM-W101)			
	4-084-290-01	REMOTE COMMANDER BATTERY COVER			

Sony Corporation
Sony EMCS (Malaysia) Sdn. Bhd.
Visual Products

9-872-453-01

English
© 2004.6

SONY

2-023-202-**11** (1)

Trinitron Color TV

Operating Instructions **GB**

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

FD Trinitron
WEGA

KV-BT212
KV-BM142

M80
M70

© 2004 Sony Corporation

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

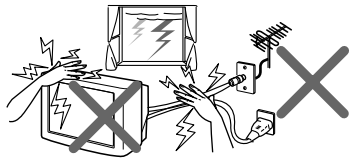

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

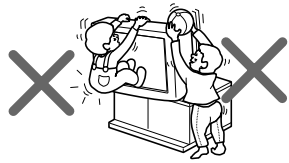

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

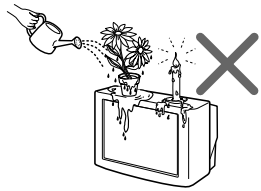

Do not place any objects on the TV. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

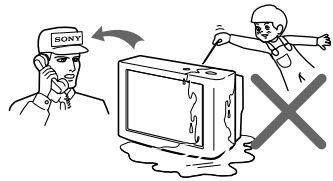

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

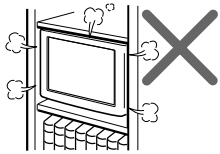

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

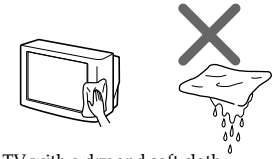

Clean the TV with a dry and soft cloth.
Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

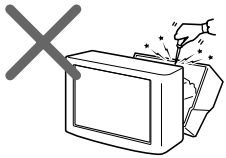

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

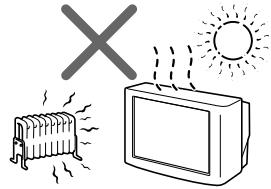

Your TV is recommended for home use only.
Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

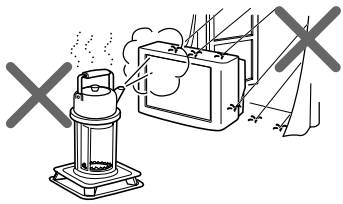

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

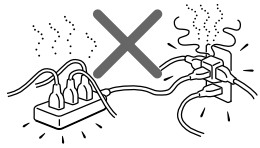

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

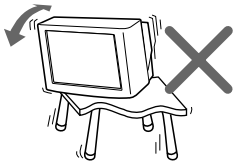

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

▶ KV-BT212M80 only

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

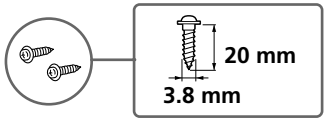

screws

clamps



band

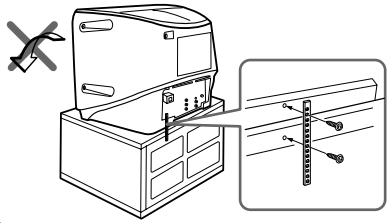

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

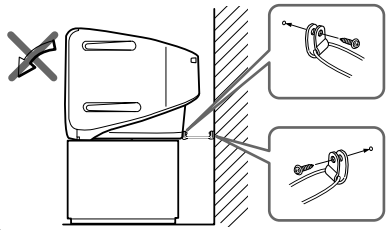

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**

Setting up your TV ("Initial Setup") **7**

Overview of Controls

TV top control, front and rear panels **9**

Using the remote control and basic functions **10**

Menu Adjustment

Introducing the menu system **12**

Changing the "Picture" setting **15**

Changing the "Sound" setting **16**

Changing the "Timer" setting **17**

Changing the "Channel Setup" setting **18**

Changing the "Setup" setting **20**

Additional Information

Connecting optional components ... **21**

Troubleshooting **22**

Specifications ..... **Back cover**

GB

■ Getting Started

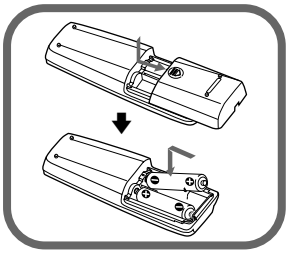

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

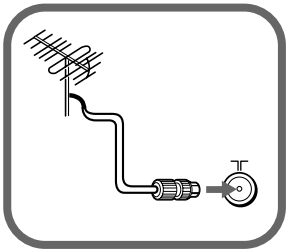

Step 2

Connect the antenna cable (not supplied) to ⊤ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 21).

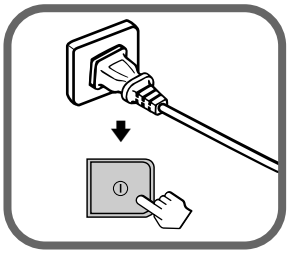

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

Note

- The ⏻ (standby) indicator flashes green for a few seconds when turning on the TV. This does not indicate a malfunction.

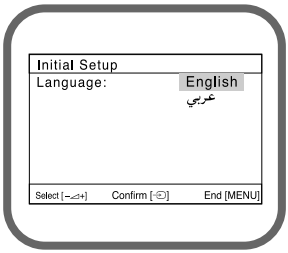

Step 4

Set up the TV by following the instructions of the “Initial Setup” menu (see page 7).

■ Setting up your TV ("Initial Setup")

When you turn on your TV for the first time, the "Initial Setup" menu will appear. You may change the menu language, preset the TV channels automatically and change the order of TV channels that appear on the screen using the buttons on the top control panel.

Tip

- The MENU, ⊕ and ↑/↓/←/→ buttons on the remote control can also be used for the operations below.

1 Press ◿ +/– to select the desired menu language, then press ⊖.

The selected menu language appears.

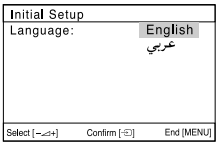

2 Press ◿ +/– to select "Yes", then press ⊖ to preset the channels automatically.

The screen will indicate automatic presetting is in progress.

After all available channels have been tuned and stored, the "Program Sorting" menu appears automatically on the screen.

To skip automatic channel presetting, select "No", then press ⊖.

If the message "No channel found. Please connect cable/antenna" appears, check your TV connections, then press ⊖.

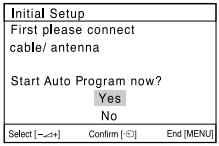

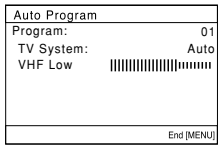

3 The "Program Sorting" menu enables you to change the order in which the channels appear on the screen.

a) If you wish to keep the channels in the tuned order, press MENU.

b) If you wish to store the channels in a different order:

1) Press ◿ +/– to select the program number with the channel you wish to rearrange, then press ⊖.

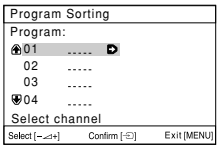

continue

The selected channel will appear on the screen.

2) Press ◿ +/– to select the new program number position for your selected channel, then press ⊕.

3) Repeat steps b) 1) and 2) if you wish to change the order of the other channels.

c) Press MENU to go to the next menu.

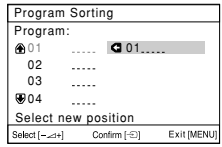

4 Press ◿ +/– to select "No", then press ⊕. This menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select "Yes", then press ⊕.

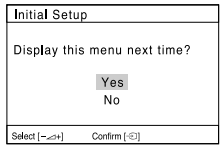

Tips

- You can immediately go to the end of the "Initial Setup" menu by pressing MENU.
- You can also set up your TV by pressing the MENU button on the top control panel for about five seconds or using the menu system (see page 12).

■ TV top control, front and rear panels

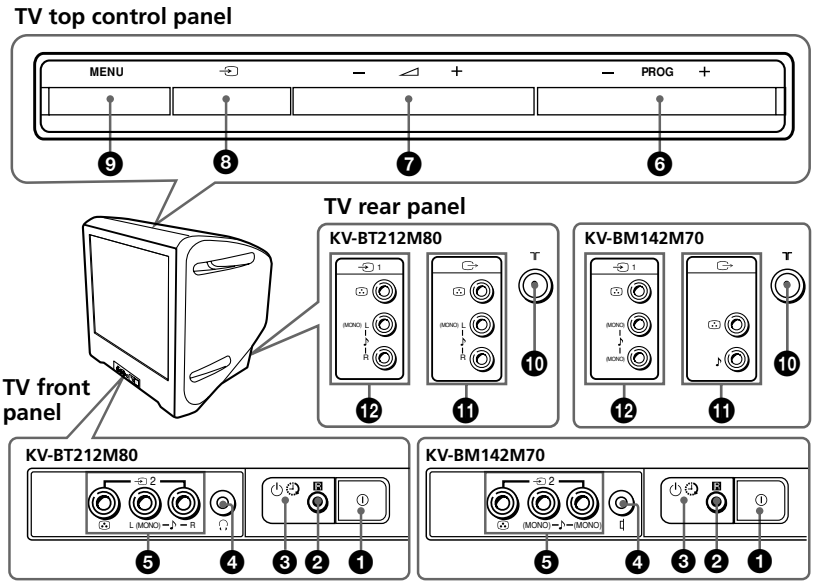

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	6
❷	Remote control sensor.	–
❸	Wake Up indicator.	17
❸	Standby indicator.	6
❹	Headphone jack.	–
❹	Earphone jack.	–
❺ 2	Video input terminal 2.	21
❻ PROG +/–	Select program number.	–
❼ +/–	Adjust volume.	–
❽	Select TV or video input.	21
Menu operations		
❼ +/–	Select and adjust items.	–
❽	Confirm selected items.	–
❾ MENU	Display or cancel the menu.	–
❿	Antenna input terminal.	21
⓫	Monitor output terminal.	21
⓬ 1	Video input terminal 1.	21

■ Using the remote control and basic functions

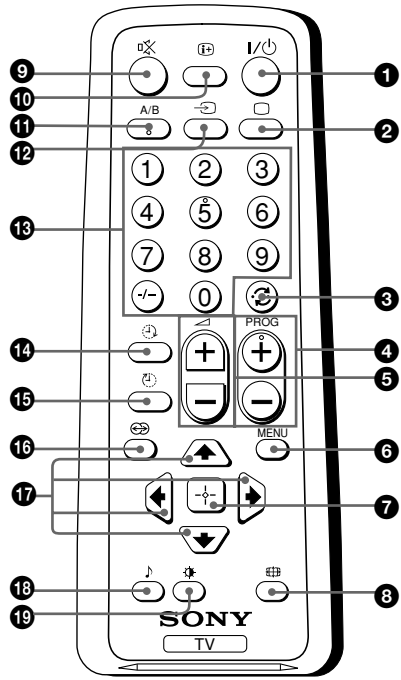

Button	Description	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❷ ▭	Display the TV program.	–
❸ ↻	Jump to last program number that has been watched for at least five seconds.	–
❹ PROG +/–	Select program number.	–
❺ ◿ +/–	Adjust volume.	–
❽ ▦	Not function for your TV.	–
❾ 🔇	Mute the sound.	–
❿ ⓘ	Display on-screen information.	–
⓬ ⏎	Select TV or video input.	21
⓭ 0 – 9, -/--	Input numbers.	–
⓰ ⟲ (KV-BT212M80 only)	Select surround mode options: “On” (surround), “Simulated” (stereo-like monaural sound), “Off”.	–

Button	Description	Page
⓲ ♪ (KV-BT212M80 only)	Select sound mode options: "Dynamic" (low and high tones), "Drama" (voice and high tones), "Soft" (soft, natural and relaxing sound), "Personal"*. * When the "Personal" mode is selected, you can receive the last adjusted sound settings from the "Sound Adjustment" option in the menu (see page 16).	–
⓳ ☼	Select picture mode options: "Dynamic" (high contrast), "Standard" (normal contrast), "Soft" (mild), "Personal"*. * When the "Personal" mode is selected, you can receive the last adjusted picture settings from the "Picture Adjustment" option in the menu (see page 15).	–
Menu operations		
❻ MENU	Display or cancel the menu.	14
❼ ⊕	selected items.	14
⓱ ↑, ↓, ←, →	Select and adjust items.	14
Timer operations		
⓮ ◷	Set TV to turn on automatically according to the desired period of time.	–
⓯ ◷	Set TV to turn off automatically according to the desired period of time.	–
Stereo/bilingual operations		
⓫ A/B	Not function for your TV.	–

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

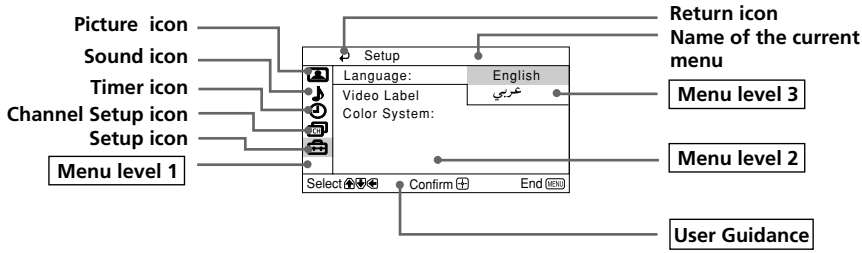

Level 1	Level 2	Level 3/Function	Page
"Picture"	"Mode"	Select the picture mode: "Dynamic" → "Standard" → "Soft" → "Personal"	15
	"Picture Adjustment"	Adjust the "Personal" option: "Picture" → "Brightness" → "Color" → "Hue" → "Sharpness" → "Reset"	
	"Color Temperature"	Adjust white color tint: "Cool" → "Neutral" → "Warm"	
	"Intelligent Picture"	Optimize picture quality: "On" → "Off"	
"Sound"	"Mode" (KV-BT212M80 only)	Select the sound mode: "Dynamic" → "Drama" → "Soft" → "Personal"	16
	"Sound Adjustment" (KV-BT212M80 only)	Adjust the "Personal" option: "Treble" → "Bass" → "Reset"	
	"Balance" (KV-BT212M80 only)	Select to emphasize the left and right speakers.	
	"Intelligent Volume"	Adjust volume automatically: "On" → "Off"	
	"Surround" (KV-BT212M80 only)	Select the surround mode: "On" → "Simulated" → "Off"	

Level 1	Level 2	Level 3/Function	Page
"Timer"	"Sleep Timer"	Set TV to turn off automatically.	17
	"Wake Up Timer"	Set TV to turn on automatically.	
"Channel Setup"	"Auto Program"	Preset channels automatically.	18
	"Manual Program"	Preset channels manually.	
	"Program Label"	Label the program number.	
	"Program Block"	Block unwanted programs.	
	"Program Sorting"	Change the order in which the channels appear on the screen.	
"Setup"	"Language"	Change the menu language: "English" → "عربي" (Arabic)	20
	"Video Label"	Label the connected equipment.	
	"Color System"	Select the color system: "Auto" → "PAL" → "SECAM" →"NTSC3.58" → "NTSC4.43"	

continue

continued

How to use the menu

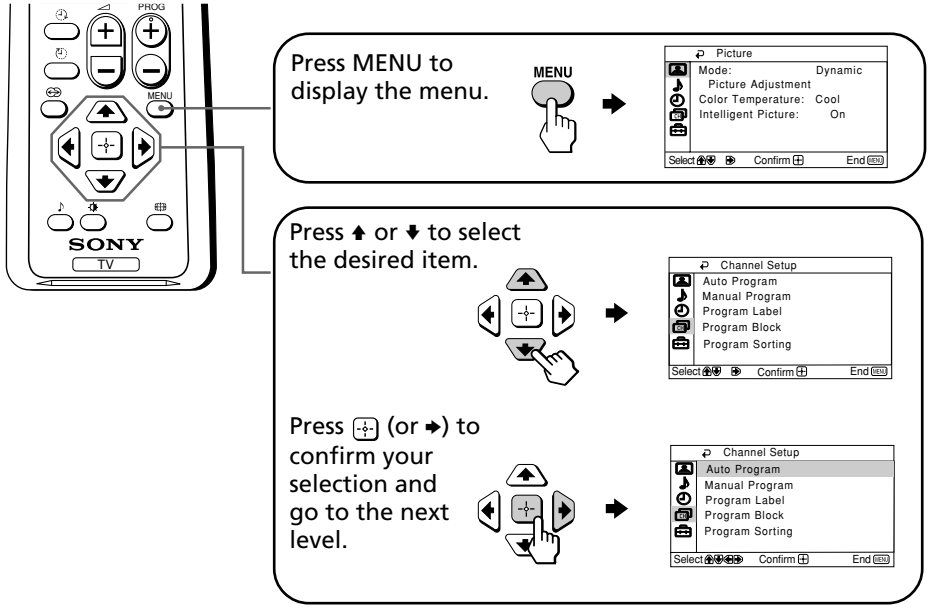

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (↩) is highlighted, then press ⊕.
- The MENU, ⊖ and ◿ +/– buttons on the top control panel can also be used for the operations above (see page 9).

Note

- When a feature is dimmed in the menu, it is not selectable.

■ Changing the “Picture” setting

The “Picture” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “Picture” icon ( ) is selected, then press ⊕.

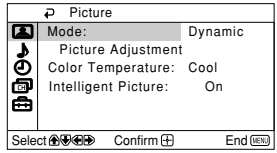

3 Press ↑ or ↓ to select the desired item (e.g., “Mode”), then press ⊕.

Select	To
“Mode”	choose either “Dynamic”, “Standard”, “Soft” or “Personal”* (see page 11).
“Color Temperature”	adjust white color tint. Choose either “Cool” (blue tint), “Neutral” (neutral tint) or “Warm” (red tint).
“Intelligent Picture”	optimize picture quality. Press ↑ or ↓ to select “On”, then press ⊕. To cancel, select “Off”, then press ⊕.

* You can adjust the setting to your personal preference in the “Picture Adjustment” and “Color Temperature” options only when the “Personal” mode is selected.

Adjusting the “Picture Adjustment” items under “Personal” mode

1 Press ↑ or ↓ to select either “Picture” (contrast), “Brightness”, “Color”, “Hue” (color tones) or “Sharpness”, then press ⊕.

Selecting “Reset” will set your TV to the factory setting.

2 Press ↑,↓,← or → to adjust the setting of your selected item, then press ⊕.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select “Personal”.

Notes

- “Hue” can be adjusted for the NTSC color system only.
- Reducing “Sharpness” can also reduce picture noise.

■ Changing the “Sound” setting

The “Sound” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “Sound” icon (♪), then press ⊕.

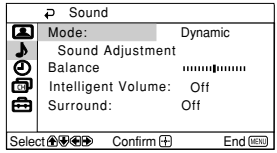

2 Press ↑ or ↓ to select the desired item (e.g., “Mode”), then press ⊕.

Select	To
“Mode” (KV-BT212M80 only)	choose either “Dynamic”, “Drama”, “Soft” or “Personal”* (see page 11).
“Balance” (KV-BT212M80 only)	Press ↓ or ← to emphasize the left speaker. Press ↑ or → to emphasize the right speaker.
“Intelligent Volume”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “On”, then press ⊕. To cancel, select “Off”, then press ⊕.
“Surround” (KV-BT212M80 only)	choose either “On”, “Simulated” or “Off” (see page 10).

* You can adjust the setting to your personal preference in the “Sound Adjustment” option only when the “Personal” mode is selected.

Adjusting the “Sound Adjustment” items under “Personal” mode (KV-BT212M80 only)

1 Press ↑ or ↓ to select either “Treble” or “Bass”, then press ⊕.

Selecting “Reset” will set your TV to the factory setting.

2 Press ↑,↓,← or → to adjust the setting of your selected item, then press ⊕.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select “Personal”.

■ Changing the “Timer” setting

The “Timer” menu allows you to set TV to turn off and turn on automatically.

1 Press MENU.

2 Press ↑ or ↓ to select the “Timer” icon (), then press .

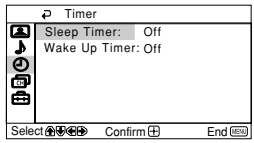

3 Press ↑ or ↓ to select the desired item (e.g., “Sleep Timer”), then press .

Select	To
“Sleep Timer”	set TV to turn off automatically. Press ↑ or ↓ to select the desired period of time (max. of 1 hour and 30 minutes), then press .
“Wake Up Timer”	set TV to turn on automatically. Press ↑ or ↓ to select the desired period of time (max. of 12 hours), then press . After the selected length of time, the TV switches on automatically and “Wake Up Timer” will appear on the screen. The indicator on the TV lights up amber once you set the “Wake Up Timer”.

Notes

- You can also cancel “Sleep Timer” and “Wake Up Timer” by turning off the TV’s main power.
- If no buttons or controls are pressed for more than one hour after the TV is turned on using the “Wake Up Timer”, the TV automatically goes into standby mode.

■ Changing the “Channel Setup” setting

The “Channel Setup” menu allows you to preset channels automatically, manually preset channels, label the program number, block unwanted programs and change the order of TV channels that appear on the screen.

1 Press MENU.

2 Press ↑ or ↓ to select the “Channel Setup” icon (CH), then press ⊕.

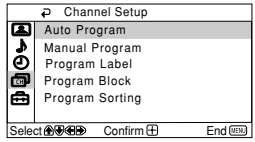

3 Press ↑ or ↓ to select the desired item (e.g., “Auto Program”), then press ⊕.

Select	To
“Auto Program”	preset channels automatically.
“Manual Program”	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 19).
“Program Label”	label the program number. (1) Select “Program” and press ⊕. Press ↑ or ↓ to select the program number, then press ⊕. (2) Select “Label” and press ⊕. Press ↑ or ↓ to select alphanumeric characters for the label, then press ⊕.
“Program Block”	block unwanted programs. (1) Select “Program” and press ⊕. Press ↑ or ↓ to select the program number, then press ⊕. (2) Select “Block” and press ⊕, then press ↑ or ↓ to choose either “On” or “Off”. If you preset a blocked program number, that program number will be unblocked automatically.
“Program Sorting”	change the order in which the channels appear on the screen (see step 3 b) of the section “Initial Setup” in page 7).

Notes

- You may label the program numbers so that you can see the program labels in the “Program Sorting” menu.
- If you sort a blocked program, that program will remain blocked.

Presetting channels manually

1 After selecting "Manual Program", select the program number to which you want to preset a channel.

(1) Make sure "Program" is selected, then press ⊕.

(2) Press ↑ or ↓ until the program number you want to preset appears on the menu, then press ⊕.

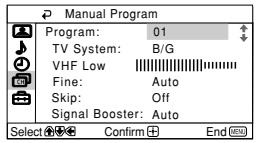

2 Select the desired channel.

(1) Make sure either "VHF Low", "VHF High" or "UHF" is selected, then press ⊕.

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ⊕.

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV System", then press ⊕.

(2) Press ↑ or ↓ until the sound becomes normal, then press ⊕.

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "Fine" tuning feature.

(1) Press ↑ or ↓ to select "Fine", then press ⊕.

(2) Press ↑ or ↓ to select "Manual", then press ⊕.

(3) Press ↑,↓,← or → until the picture and sound quality are optimal, then press ⊕.

The + or – icon on the menu flashes while tuning.

5 If you want to skip this program number when using PROG +/–, you can select the "Skip" feature.

(1) Press ↑ or ↓ to select "Skip", then press ⊕.

(2) Press ↑ or ↓ to select "On", then press ⊕.

To cancel, select "Off", then press ⊕.

6 If the TV signal is too strong (picture distorted; picture with lines; signal interference) or weak (snowy picture), you may be able to improve the picture quality by setting the "Signal Booster" feature.

(1) Press ↑ or ↓ to select "Signal Booster", then press ⊕.

(2) Press ↑ or ↓ to select either "Off"(for picture distorted; picture with lines; signal interference) or "Auto" (for snowy picture), then press ⊕.

■ Changing the “Setup” setting

The “Setup” menu allows you to change the menu language, label the connected equipment and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “Setup” icon (🧰), then press ⊕.

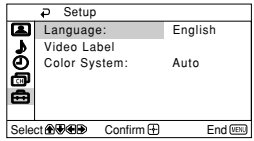

3 Press ↑ or ↓ to select the desired item (e.g., “Language”), then press ⊕.

Select	To
“Language”	change the menu language. Press ↑ or ↓ to select either “English” or “عربي” (Arabic), then press ⊕.
“Video Label”	label the connected equipment. (1) Select “Video Input” and press ⊕. Press ↑ or ↓ to select the input you want to label, then press ⊕. (2) Select “Label” and press ⊕, then press ↑ or ↓ to select the label options: ”Video 1/Video 2”, “VCR”, “SAT”, “Game” or “Edit”*. * You may edit the video label. Press ↑ or ↓ to select alphanumeric characters for the label, then press ⊕.
“Color System”	select the color system. Press ↑ or ↓ to select either “Auto”, “PAL”, “SECAM”, “NTSC3.58” or “NTSC4.43”, then press ⊕. Normally, set this to “Auto”.

■ Connecting optional components

Connecting to the video input terminal ( )

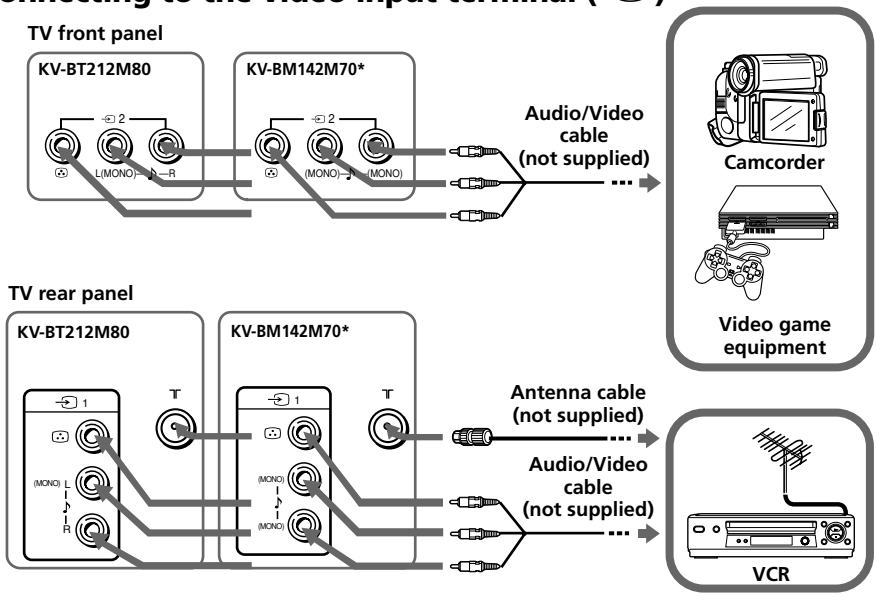

* Sound Mix Terminal (KV-BM142M70 only)

You can connect the audio L and R jacks from your AV equipment to both ♪ (MONO) jacks on the TV to enjoy mixed left and right sound. If you do not prefer the mixed sound, disconnect either one of the ♪ (MONO) jacks.

Note

- If you connect a VCR to (antenna input), preset the signal output from the VCR to the program number 0 on the TV (see page 19).

Connecting to the monitor output terminal ( )

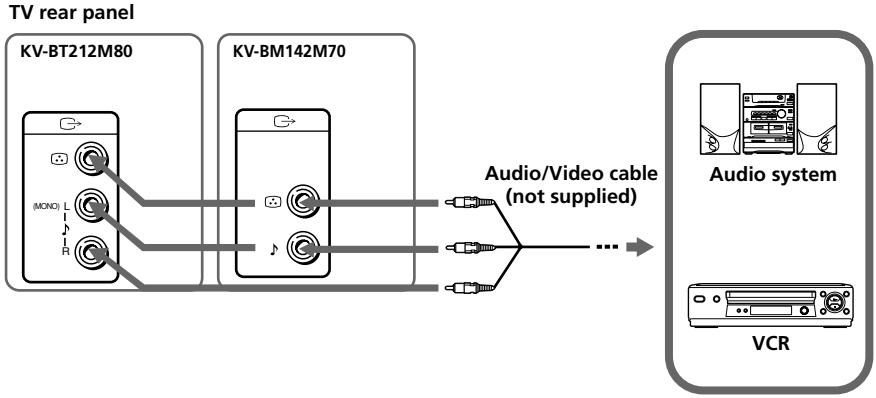

■ Troubleshooting

If you find any problem while viewing your TV, please check the following guide. If any problem persists, contact your Sony dealer.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	21
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Display the “Channel Setup” menu and select “Manual Program” to preset the channel again.	19
	• Signal transmission is low.	• Display the “Channel Setup” menu and set the “Signal Booster” to “Auto” from “Manual Program”.	19
		• Try using an external booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Turn off or disconnect the external booster if it is in use.	–
		• Display the “Channel Setup” menu and set the “Signal Booster” to “Off” from “Manual Program”.	19
Good picture **Noisy sound**	• The TV system setting is inappropriate.	• Display the “Channel Setup” menu and select the appropriate “TV System” from “Manual Program”.	19
No picture **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	21
	• The TV is not turned on.	• Press I/⏻ (power).	10
		• Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	9

Symptom	Possible cause	Solutions	Page
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	10
	• The sound is muted.	• Press to cancel the muting.	10
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning ("Fine") function.	– 19
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of an external booster is inappropriate.	• Turn off or disconnect the external booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "Picture" menu and select "Personal" of "Mode", then adjust the "Color" level in "Picture Adjustment".	15
	• The color system setting is inappropriate.	• Display the "Setup" menu and check the "Color System" setting (usually set this to "Auto").	20
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV.	–

continue

continued

Symptom	Possible cause	Solutions	Page
Abnormal color patches	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–
The TV screen sometimes goes blank for slightly longer than usual during channel change.	• The "Signal Booster" is functioning to detect a weak signal. This does not indicate a malfunction.	—	–
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

■ Specifications

	KV-BT212M80	KV-BM142M70	Note
Power requirements	110-240 V AC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
Channel coverage			
B/G	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41		
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41		
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39		
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84		
(Antenna)	75-ohm external terminal		
Audio output (Speaker)	3 W + 3 W	3 W	
Number of terminal			
(Video)	Input: 2 Output: 1	Phono jacks; 1 Vp-p, 75 ohms	
(Audio)	Input: 2 Output: 1	Phono jacks; 500 mVrms	
(Headphone)	Output: 1	Stereo minijack	KV-BT212M80 only
(Earphone)	Output: 1	Monaural minijack	KV-BM142M70 only
Picture tube	21 in.	14 in.	
Tube size (cm)	54	37	Measured diagonally
Screen size (cm)	51	34	Measured diagonally
Dimensions (w/h/d, mm)	497 × 461 × 487	374 × 355 × 420	
Mass (kg)	23	12	

Design and specifications are subject to change without notice.

http://www.sony.net/

Sony Corporation